APPLICA	BLE STAND	ARD									
OPERATING TEMPERATURE		RANGE	−55°C TO +85°C	STORAGE TEMPERA	EMPERATURE RANGE		-10°C TO +50°C(PACKED CONDITION)				
RATING	VOLTAGE		30V AC/DC OPERATING OR HUMIDITY RANG			RAGE	RELATIVE HUMIDITY 90%MAX(NOT DI				)
CURRENT			0.2A	APPLICAE	APPLICABLE CABLE		t=0.2±0.03mm, GOLD PLATED				
			SPE	CIFIC	OITA	۱S					
I7	ГЕМ		TEST METHOD	ı				REQL	JIREMENTS	QT	АТ
CONSTR											_
GENERAL EXAMINATION		VISUALLY AND BY MEASURING INSTRUMENT.			Г.	ACCOR	DING T	O DRA	WING.	×	×
MARKING		CONFIRM	ONFIRMED VISUALLY.							×	×
ELECTRI	C CHARAC	TERIST	ICS								
VOLTAGE PI	ROOF	90V AC F	FOR 1 min.			NO FLA	SHOVE	RORI	BREAKDOWN.	×	×
INSULATION	RESISTANCE	100V DC.	100V DC.			50MΩ N	MIN.			×	×
CONTACT R	ESISTANCE	AC 20mV	nV MAX (1KHz), 1mA.			100mΩ INCLUD		C BUL	K RESISTANCE (L=12mm)	×	×
MECHAN	ICAL CHAF	RACTER	ISTICS								
VIBRATION		FREQUENCY 10 TO 55 Hz, HALF AMPLITUDE				$\textcircled{1}$ NO ELECTRICAL DISCONTINUITY OF 1 $\mu$ s.				Tx	Τ_
SHOCK		0.75 mm FOR 10 CYCLES IN 3 DIRECTIONS.  981 m/s², DURATION OF PULSE 6ms AT 3 TIMES			② CONTACT RESISTANCE: 100m Ω MAX. ③ NO DAMAGE, CRACK AND LOOSENESS			<u> </u>			
			N 3 DIRECTIONS.			OF PARTS.			×	_	
MECHANICA	L OPERATION	10 TIMES	0 TIMES INSERTIONS AND EXTRACTIONS.			① CONTACT RESISTANCE: 100mΩ MAX. ② NO DAMAGE, CRACK AND LOOSENESS OF PARTS.			×	-	
FPC RETENS	SION FORCE	MEASURED BY APPLICABLE FPC. (THICKNESS OF FPC SHALL BE t=0.20mm AT INITIAL CONDITION.)				DIRECTION OF INSERTION: 0.15N × NUMBER OF CONTACTS MIN. (note f)			×	_	
ENVIRON	MENTAL C	1	TERISTICS			(note 1)					1
CORROSION		EXPOSED AT 35±2°C, 5% SALT WATER SPRAY			λΥ	① CONTACT RESISTANCE: $100m\Omega$ MAX.			T <sub>×</sub>	Τ_	
		FOR 96h.				② NO DAMAGE, CRACK AND LOOSENESS OF PARTS.			^		
					③ NO EVIDENCE OF CORROSION WHICH AFFECTS TO OPERATION OF CONNECTOR.						
RAPID CHANGE OF TEMPERATURE		TIME	EMPERATURE -55→+15 TO +35→+85→+15TO+35 °C  IME 30 → 2~3 → 30 → 2~3 min  INDER 5 CYCLES.			CONTACT RESISTANCE: 100m Ω MAX.     INSULATION RESISTANCE: 50M Ω MIN.     NO DAMAGE, CRACK AND LOOSENESS			×	-	
DAMP HEAT		EXPOSED AT 40±2°C,				1	PARTS.	-,		×	<u> </u>
(STEADY ST. DAMP HEAT,		RELATIVE HUMIDITY 90 TO 95%, 96h.  EXPOSED AT -10 TO +65 °C				10.00	NTACT	RESIST	ΓANCE: 100m Ω MAX,	<u> </u>	
DAMP HEAT, CTOLIC		RELATIV	RELATIVE HUMIDITY 90 TO 96 % 10 CYCLES, TOTAL 240h.			<ul> <li>(② INSULATION RESISTANCE: 1MΩ MIN.         (AT HIGH HUMIDITY)</li> <li>(③ INSULATION RESISTANCE: 50MΩ MIN.         (AT DRY)</li> <li>(④ NO DAMAGE, CRACK AND LOOSENESS OF PARTS.</li> </ul>				×	_
COUN	Т	DESCRIPTI	ON OF REVISIONS		DESIG	NED			CHECKED	DA	ATE
O DEMARK											
REMARK							APPR		MO.ISHIDA	1	07.07
							CHEC		NM.NISHIMATSU		07.07
Unless otherwise specified, refe			er to JIS C 5402.			DESIGNED DRAWN			SU.SUNAGA SU.SUNAGA		07.04 07.04
·						DRAWING NO. ELC4-157632					
SPECIFICATION SHEET PAI					PART NO. FH39-**S-0.3SHW				1		
<b>HS</b>	HI	ROSE E	ELECTRIC CO., LTD.		CODE NO.			CL580 Z		1/2	

	SPECIFICATIO	NS		
ITEM	TEST METHOD	REQUIREMENTS	QT	АТ
DRY HEAT	EXPOSED AT 85±2°C, 96h.	<ol> <li>CONTACT RESISTANCE: 100mΩ MAX.</li> <li>NO DAMAGE, CRACK AND LOOSENESS OF PARTS.</li> </ol>	×	_
COLD	EXPOSED AT -55±3°C, 96h.		×	-
SURPHUR DIOXIDE [JIS C 0090]	EXPOSED AT 40±2°C, RELATIVE HUMIDITY 80±5 %, 25±5 ppm FOR 96h.	<ol> <li>CONTACT RESISTANCE: 100mΩ MAX.</li> <li>NO DAMAGE, CRACK AND LOOSENESS OF PARTS.</li> </ol>	×	-
HYDROGEN SULPHIDE [JIS C 0092]	EXPOSED AT 40±2°C, RELATIVE HUMIDITY 80±5 %, 10 TO 15 ppm FOR 96h.	③ NO EVIDENCE OF CORROSION WHICH AFFECTS TO OPERATION OF CONNECTOR.	×	_
SOLDERABILITY	SOLDERED AT SOLDER TEMPERATURE, 235±5°C FOR IMMERSION DURATION, 2±0.5 sec.	A NEW UNIFORM COATING OF SOLDER SHALL COVER A MINIMUM OF 95 % OF THE SURFACE BEING IMMERSED.	×	-
RESISTANCE TO SOLDERING HEAT	1) REFLOW SOLDERING: PEAK TMP. 250°CMAX. REFLOW TMP. 230°C MIN WHITIN 60 sec. 2) SOLDERING IRONS:	NO DEFORMATION OF CASE OF EXCESSIVE LOOSENESS OF THE TERMINALS.	×	_
	TMP. 350±10°C FOR 5±1 sec.			

## (note1)


IF PULL FORCE IN VERTICAL DIRECTION COULD BE APPLIED TO THE FPC,


SECURE THE FPC TO PCB OR SOMETHING FIXED.


DO NOT CLOSE THE ACTUATOR BEFORE INSERTING FPC EVEN AFTER THE CONNECTOR IS MOUNTED ONTO A PCB. CLOSING THE ACTUATOR WITHOUT FPC COULD MAKE THE CONTACT GAP SMALLER, WHICH INCREASES THE FPC INSERTION FORCE.


THIS CONNECTOR HAS CONTACT POINTS ON BOTH TOP AND BOTTOM.

Note QT:Qua	alification Test AT:Assurance Test X:Applicable Test	DRAWING NO.		ELC4-157632-00		
נחכ	SPECIFICATION SHEET	PART NO.	FH39-**S-0.3SHW			
NO.	HIROSE ELECTRIC CO., LTD.	CODE NO.		CL580	$\triangle$	2/2

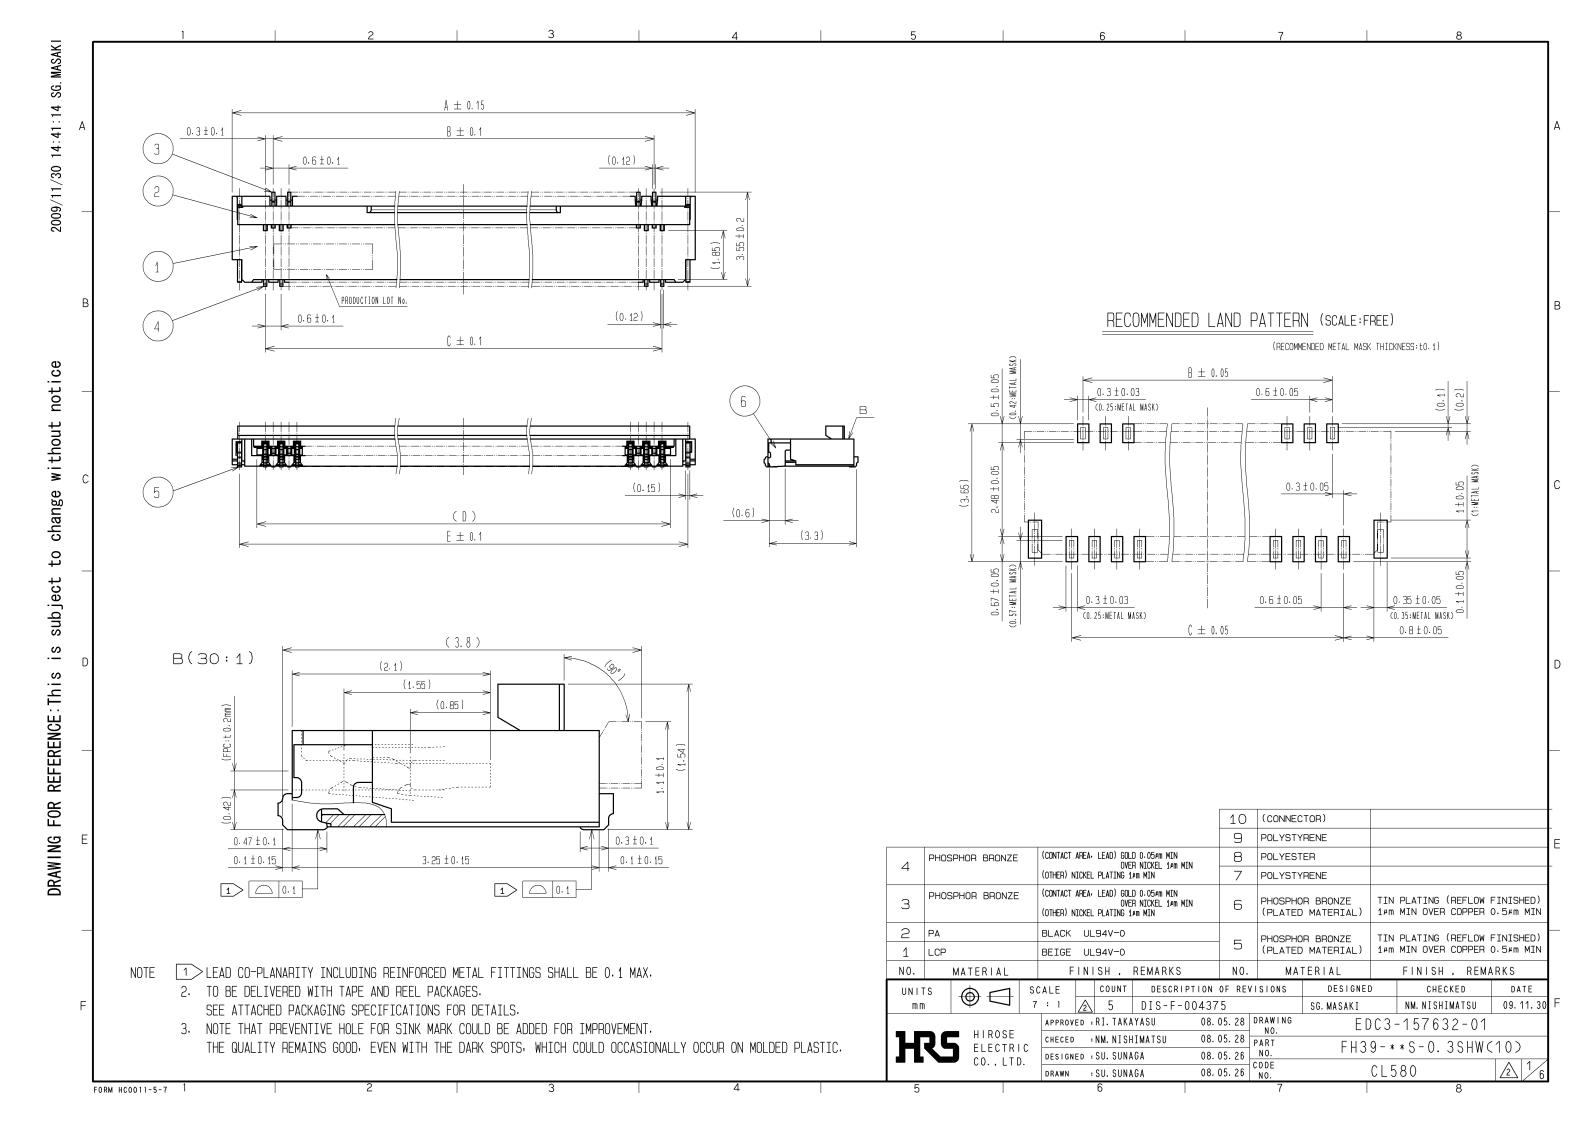

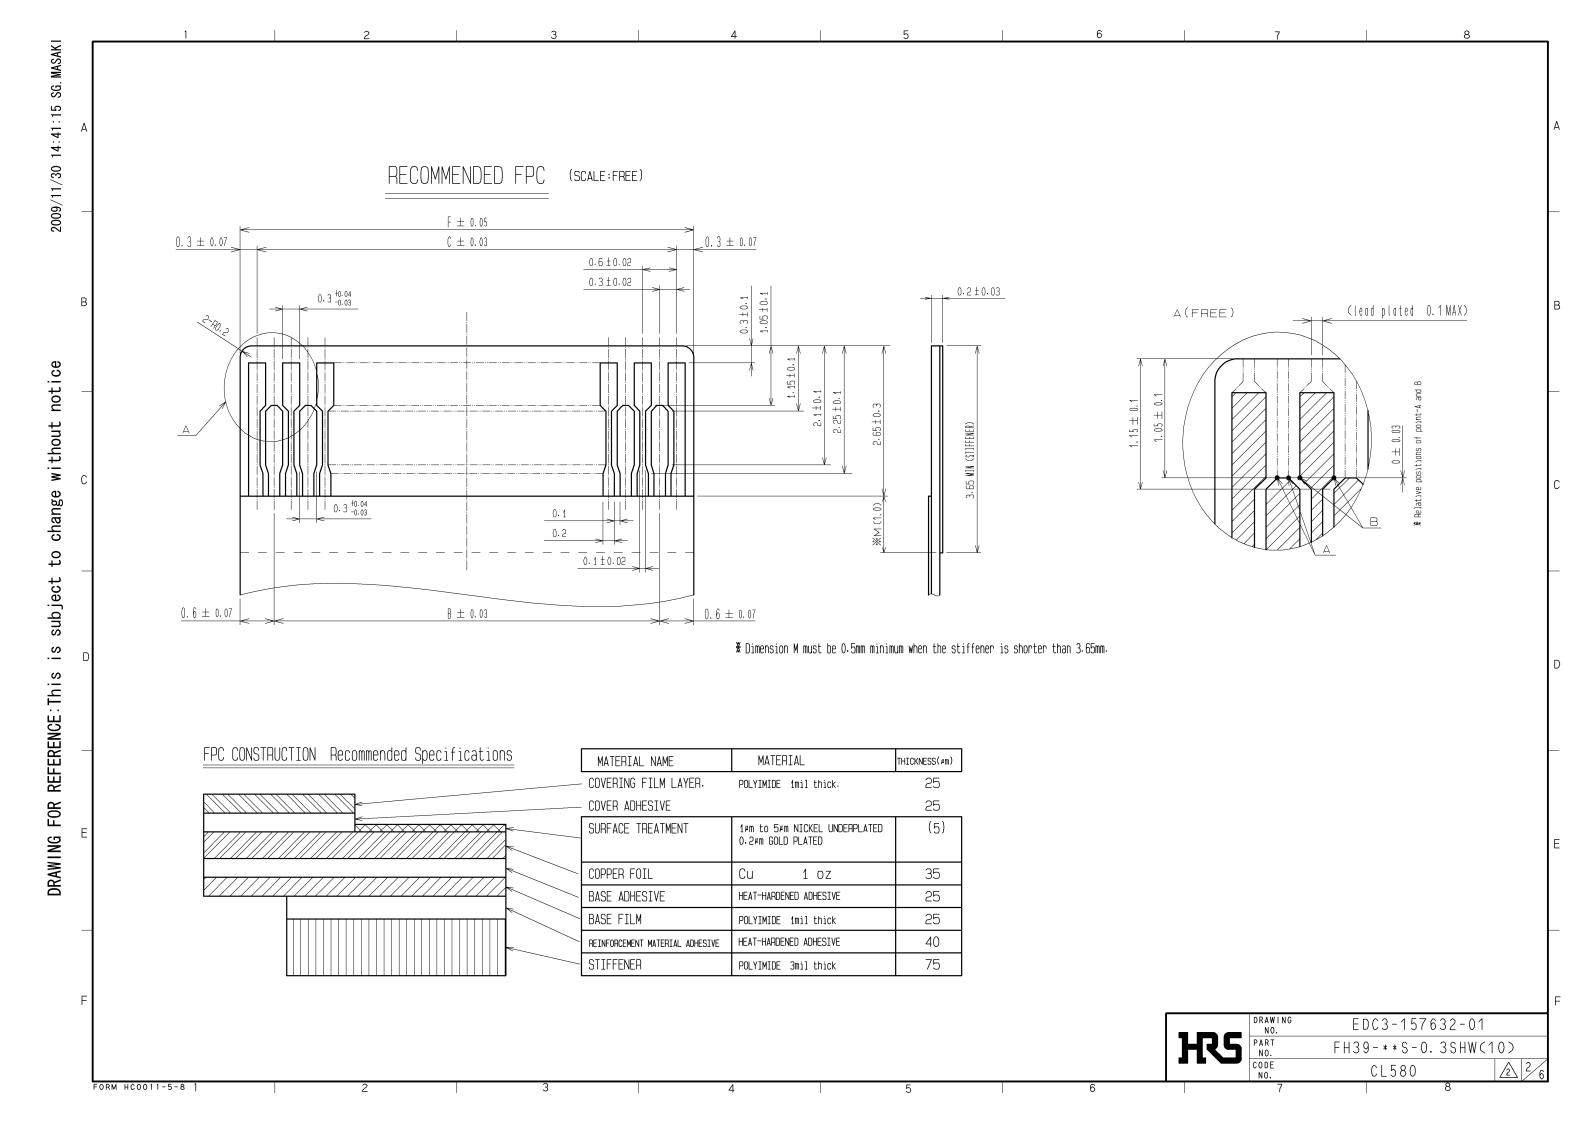

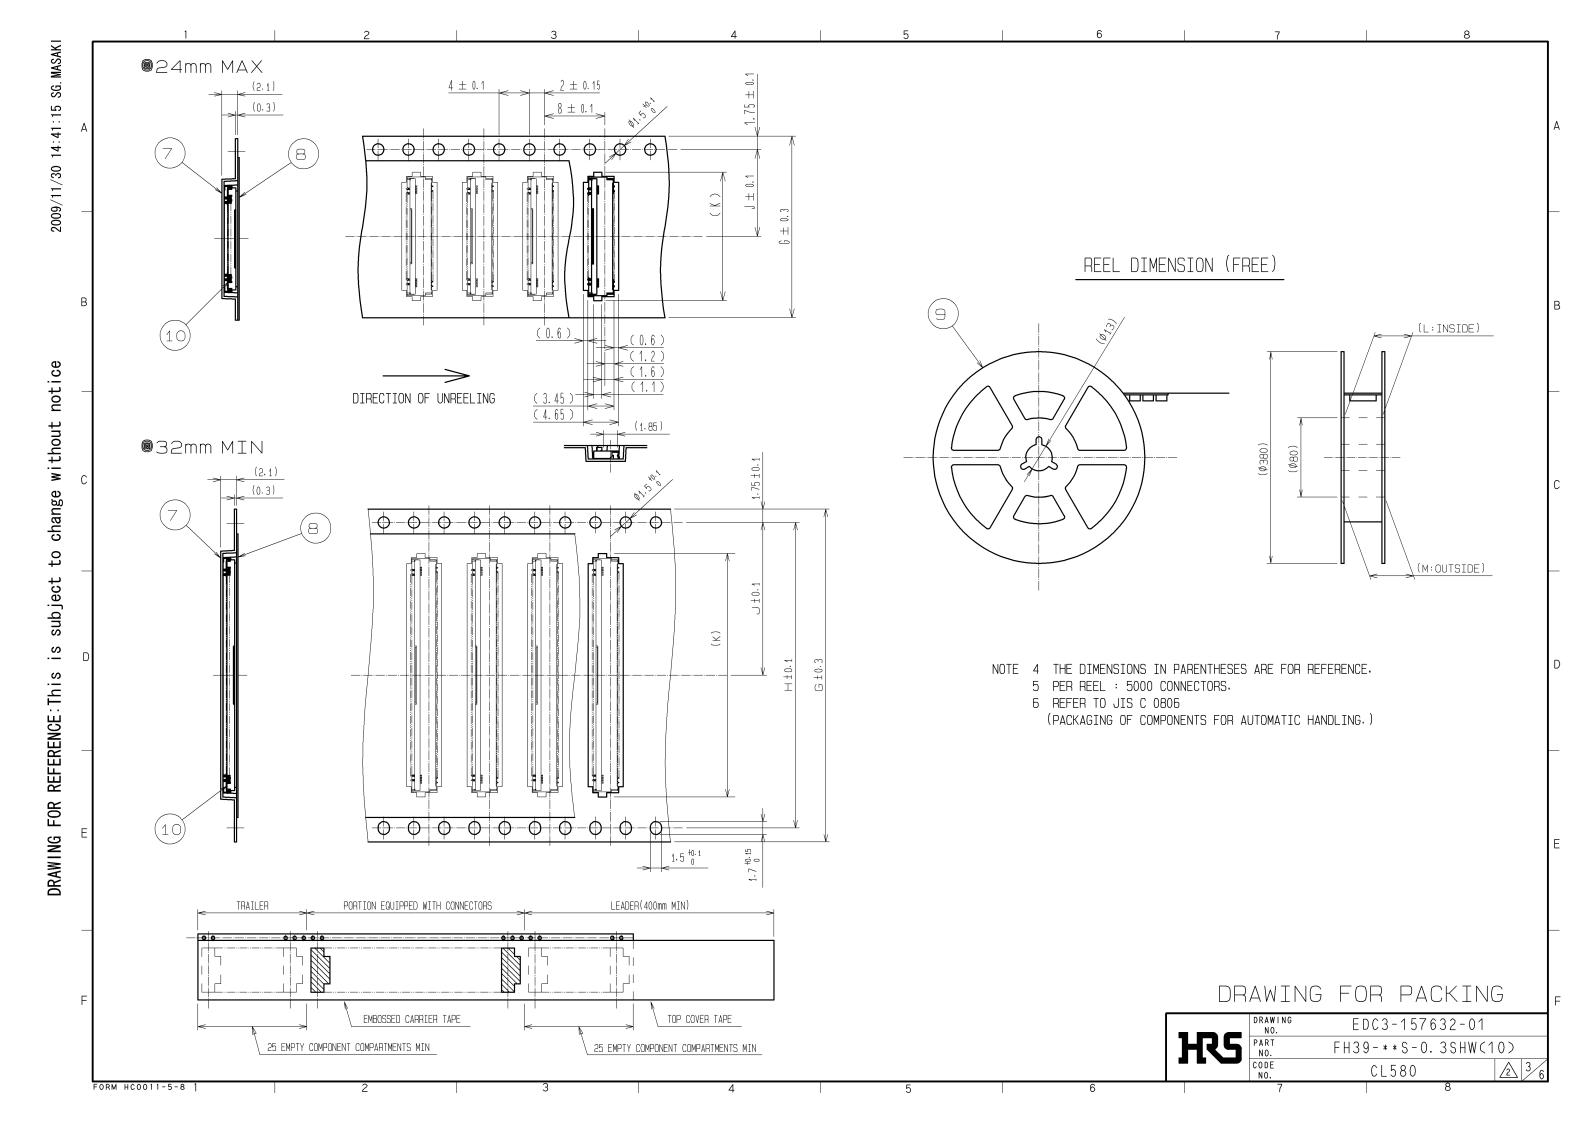

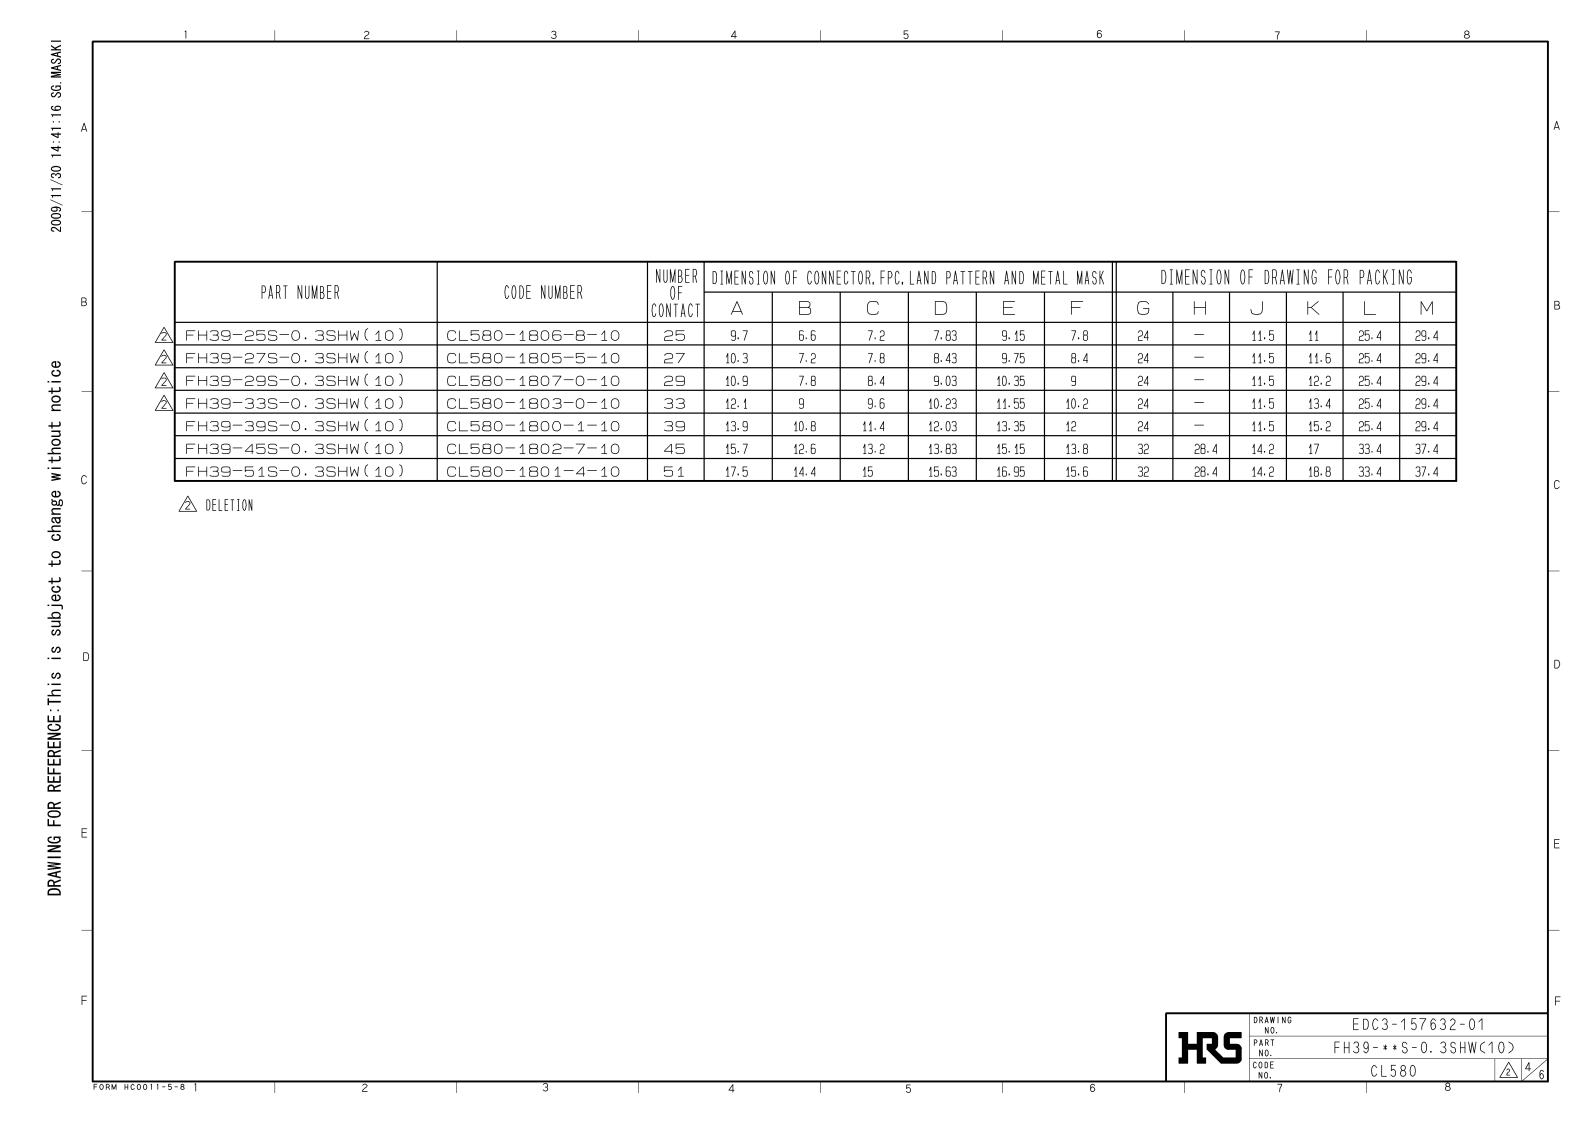

This connector features small, thin and back flip design, requiring delicate and careful handling. Read through the instructions shown below and handle the connector properly.


# Operation and Precautions


#### 1. Initial condition

Actuator does not have to be operated before inserting FPC as the connector is delivered with the actuator opened. | See Fig. 1|

## [Caution]

- -Do not close the actuator before inserting FPC.
- Closing the actuator without FPC could make the contact
- gap smaller, which could increase the FPC insertion force. [See Fig.2]

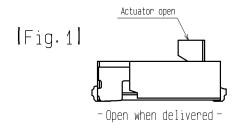

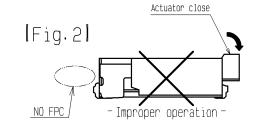



#### 2. How to insert FPC

Insert the FPC into the connector opening horizontally to the board plane. Insert it properly to the very end.

# [Caution]


- -Insert the FPC with the actuator opened. | See Fig. 3. Fig. 4|
- -Twisting the FPC to up and down, right and left or an angle could cause contact deformation and contact failure.

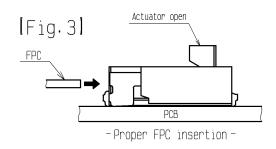


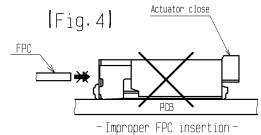

## 3. How to lock

Apply load to rotate the actuator by 90 degree after inserting the FPC. | See Fig. 5|

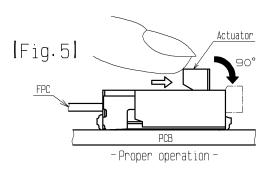

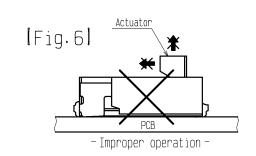

## [Caution]


- -The actuator rotates around the rotational axis. | See Fig. 7|
- -Do not rotate the actuator to the counter direction.
- Do not pinch or pick the actuator to lift. Otherwise, it may break. | See Fig. 6|
- -Apply load to the mid-point on the actuator to rotate it. | See Fig. 8|
- -Do not apply excess force to the housing during the operation.


#### [Prohibited acts]

- <u>Do not operate the side end of the actuator, or it may twist</u> the actuator and cause half mating.
- -Please operate both ends at the same time when you cannot operate the vicinity of the center part.

| IActuator movable rangel (Side view)

[Actuator operation area (lock and release)] (Top view)

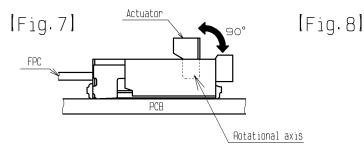

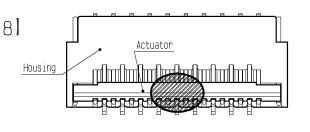

[Fig. 9]

Apply load to the mid-point of the actuator.

# 4. How to remove FPC (How to unlock)


Slowly flip up the actuator to release the lock and remove the FPC.

#### [Caution]

- -The actuator is opened up to the movable limit, 90 degree. Do not open the actuator beyond the specified degree or apply excess force to the actuator. | See Fig. 9|
- -To open the actuator operate at the mid-point of the actuator. | See Fig. 8|
- -Please note that the connector is back flip style connector, and the opening for FPC insertion and the actuator face the opposite direction. Do not try to lift the actuator at the FPC insertion opening side. [See Fig. 10]

## [Prohibited acts]

Do not lift up the side end of the actuator, or it may twist the actuator and cause breakage.

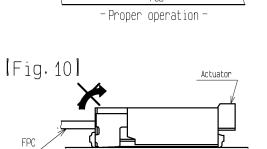

- Improper operation -

-Please operate both ends at the same time when you cannot operate the vicinity of the center part.

## [Prohibited acts]

Do not pull out the FPC with the actuator locked.

When FPC is pulled out with the actuator locked.

it causes the contact deformation and contact failure.

# INSTRUCTION MANUAL

		DRAWING NO.	EDC3-157632-01		
	<b>H</b> 25	PART NO.	FH39-**S-0.3SHW(1	0)	
		CODE NO.	CL580	2	5/6

FORM HC0011-5-8 | 2 3 4 5