



MCP6031
Photodiode PICtail™ Plus
Demo Board
User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC, SmartShunt and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, PICkit, PICDEM, PICDEM.net, PICtail, PIC³² logo, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, Select Mode, Total Endurance, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2008, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2002 ==

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC[®] MCUs and dsPIC[®] DSCs, KEELOQ[®] code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD USER'S GUIDE

Table of Contents

Preface	1
Introduction.....	1
Document Layout	1
Conventions Used in this Guide	2
Recommended Reading.....	3
The Microchip Web Site	3
Customer Support	3
Document Revision History	3
Chapter 1. Product Overview	
1.1 Introduction	5
1.2 MCP6031 Photodiode PICtail™ Plus Demo Board Kit Contents	5
1.3 MCP6031 Photodiode PICtail™ Plus Demo Board Description	6
Chapter 2. Installation and Operation	
2.1 Introduction	9
2.2 Required Tool	9
2.3 MCP6031 Photodiode PICtail™ Plus Demo Board Set-up	9
2.4 MCP6031 Photodiode PICtail™ Plus Demo Board Operation	10
Appendix A. Schematic and Layouts	
A.1 Introduction	11
A.2 Board - Schematic	12
A.3 Board - Top Silk Layer	13
A.4 Board - Top Metal And Top Silk Layers	13
A.5 Board - Bottom Metal Layer	14
Appendix B. Bill of Materials (BOM)	
Worldwide Sales and Service	16

MCP6031 Photodiode PICtail™ Plus Demo Board User's Guide

NOTES:



MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD USER'S GUIDE

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXA", where "XXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP6031 Photodiode PICtail™ Plus Demo Board . Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP6031 Photodiode PICtail™ Plus Demo Board as a development tool to emulate and debug firmware on a target board. The manual layout is as follows:

- **Chapter 1. "Product Overview"** – Provides the important information about the MCP6031 Photodiode PICtail™ Plus Demo Board .
- **Chapter 2. "Installation and Operation"** – Covers the installation and operation of the MCP6031 Photodiode PICtail™ Plus Demo Board .
- **Appendix A. "Schematic and Layouts"** – Shows the schematic and board layouts for the MCP6031 Photodiode PICtail™ Plus Demo Board .
- **Appendix B. "Bill of Materials (BOM)"** – Lists the parts used to build the MCP6031 Photodiode PICtail™ Plus Demo Board .

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use MCP6031 Photodiode PICtail™ Plus Demo Board . Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

- **MCP6031/2/3/4 Data Sheet, “0.9 μ A, High Precision Op Amps” (DS22041)** - This data sheet provides detailed information regarding the MCP603X Op Amps.
- **AN951, “Amplifying High-Impedance Sensors - Photodiode Example” (DS00951)** - This application note shows how to condition the current out of a high-impedance sensor. A photodiode detector illustrates the theory.
- **“Signal Chain Design Guide” (DS21825)**
- **“Explorer 16 Development Board User’s Guide” (DS51589)**

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user’s guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://support.microchip.com>

DOCUMENT REVISION HISTORY

Revision A (September 2008)

- Initial Release of this Document.

MCP6031 Photodiode PICtail™ Plus Demo Board User's Guide

NOTES:

Chapter 1. Product Overview

1.1 INTRODUCTION

The MCP6031 Photodiode PICtail™ Plus Demo Board is described by the following:

- Assembly # : 114-00219
- Order # : MCP6031DM-PCTL
- Name: MCP6031 Photodiode PICtail™ Plus Demo Board

Items discussed in this chapter include:

- MCP6031 Photodiode PICtail™ Plus Demo Board Kit Contents
- MCP6031 Photodiode PICtail™ Plus Demo Board Description

1.2 MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD KIT CONTENTS

- MCP6031 Photodiode PICtail™ Plus Demo Board (102-00219)
- Important Information “Read First”
- Analog and Interface Products Demonstration Boards CD-ROM (DS21912). It contains:
 - MCP6031 Photodiode PICtail™ Plus Demo Board User's Guide (DS51763)
 - Firmware files
 - Gerber files



FIGURE 1-1: MCP6031 Photodiode PICtail™ Plus Demo Board Kit.

1.3 MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD DESCRIPTION

The MCP6031 Photodiode PICtail™ Plus Demo Board demonstrates how to use a transimpedance amplifier, which consists of MCP6031 high precision op amp and external resistors, to convert photo-current (I_S) to voltage. The circuit was not calibrated for absolute accuracy.

The RC low-pass filter that is implemented in this circuit can remove the high frequency noise and interference from the signal path prior to the analog-to-digital (A/D) conversion.

The PICmicro® on the Explorer 16 Development Board communicates with the MCP6031 Photodiode PICtail™ Plus Demo Board and completes the analog-to-digital conversion.

Note: For high measurement accuracy, an external stand-alone ADC with higher resolution needs to be used.

The measured voltage (V_{OUT}) and calculated illuminance (L) will be shown on LCD screen on board. The illuminance (L) will be calculated by the equation:

EQUATION 1-1:

$$L = \text{illuminance (lx)}$$

$$= (V_{OUT}/R_I)(10000 I_X / 70 \mu A)$$

Figure 1-2 shows the block diagram of the MCP6031 Photodiode PICtail™ Plus Demo Board .

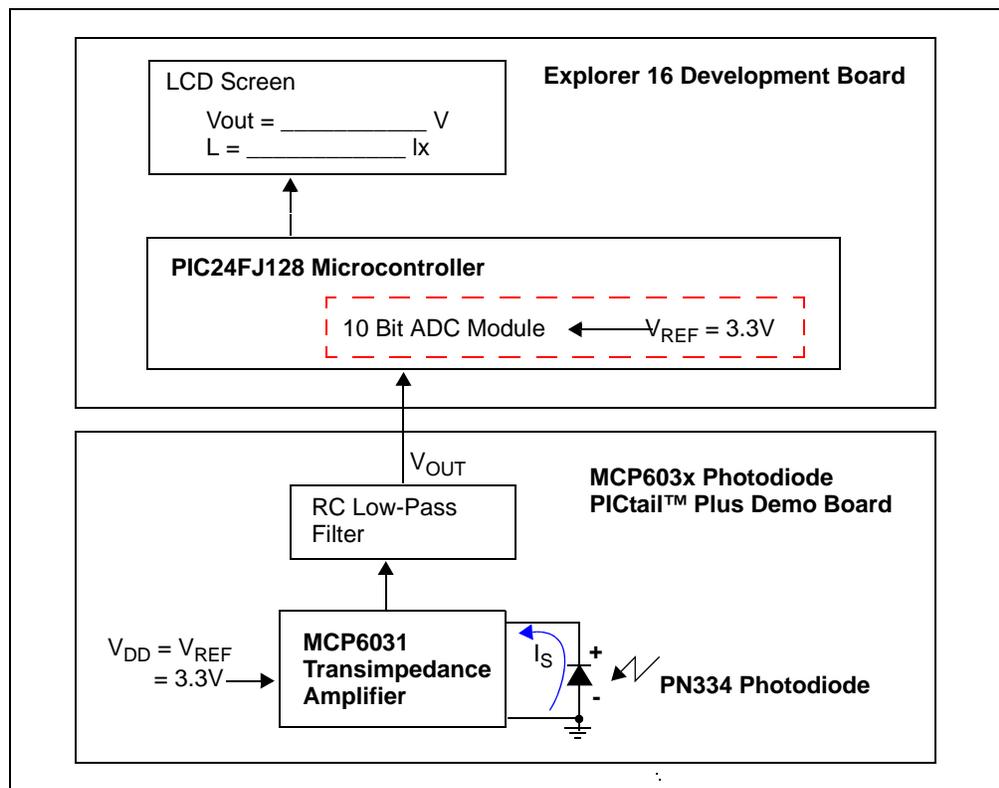


FIGURE 1-2: MCP6031 Photodiode PICtail™ Plus Demo Board Function Block Diagram.

Figure 1-3 shows the top view of the MCP6031 Photodiode PICtail™ Plus Demo Board.

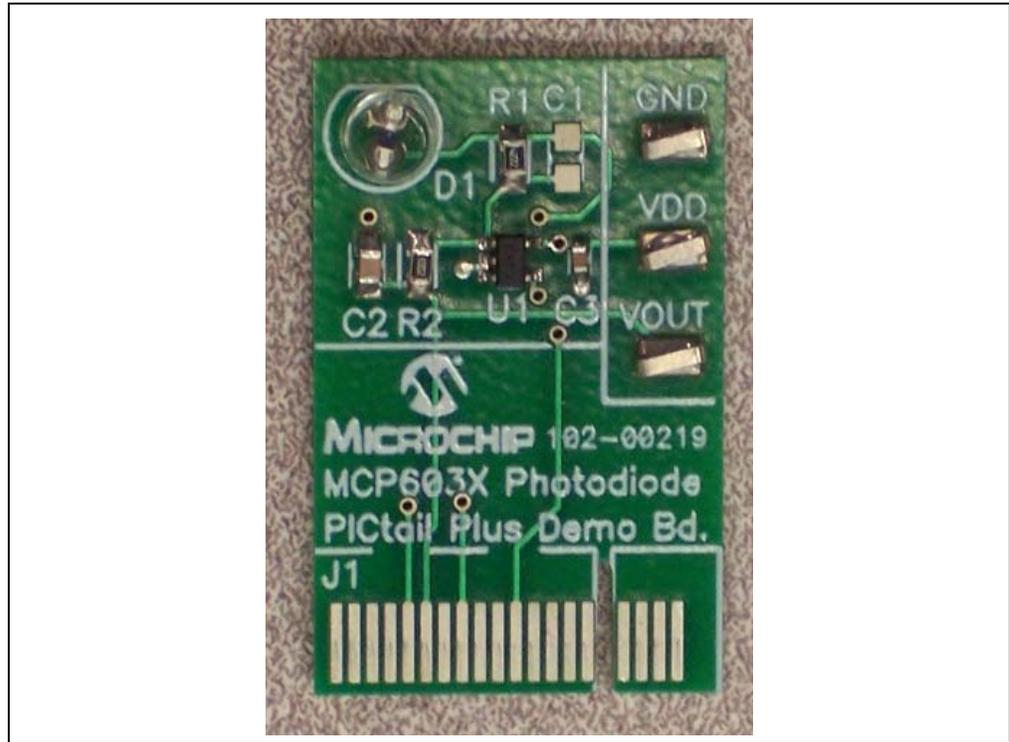


FIGURE 1-3: Top view of MCP6031 Photodiode PICtail™ Plus Demo Board

Figure 1-4 shows the circuit diagram of MCP6031 Photodiode PICtail™ Plus Demo Board. C_1 is for compensation purpose and no need for the board. It may be needed when MCP6031 is replaced by the other Microchip's op amp.

The DC output voltage due to the source photo-current will be $V_{OUT} = I_S R_1$, where R_1 is the feedback resistor. The op amp will contribute a DC offset voltage, $V_{OS} + I_B R_1$, to the output, where V_{OS} is the op amp's input offset voltage and I_B is the op amp's input bias current. Select the value of R_1 to give a high gain to I_S . Usually, this gain is high enough to use most of the op amp's output voltage swing when I_S is at its extreme values. The op amp needs to have V_{OS} and I_B low enough to not cause a large DC offset. That is the reason why op amp MCP6031 is selected.

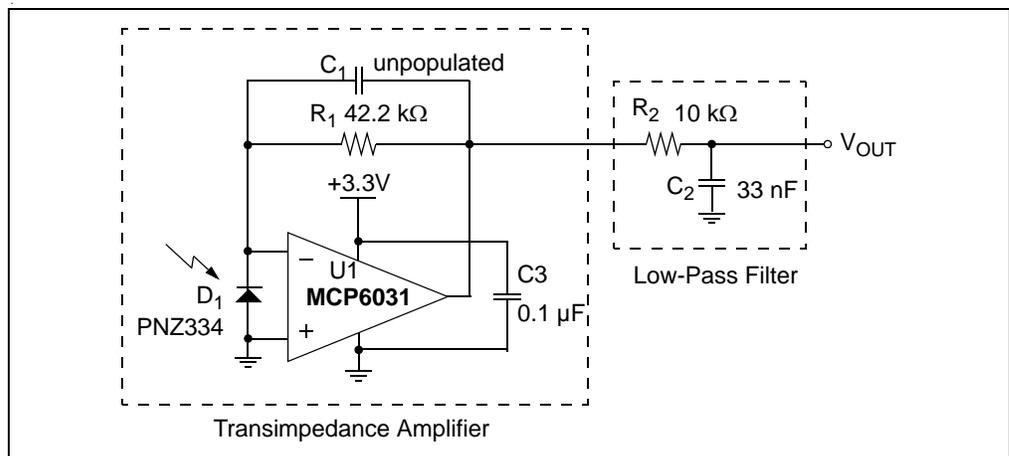


FIGURE 1-4: MCP6031 Photodiode PICtail™ Plus Demo Board Circuit Diagram.

For the design approach of this board, please refer to **AN951, “*Amplifying High-Impedance Sensors - Photodiode Example*” (DS00951)** as reference resource. This application note discusses the analog conditioning circuit used for high-impedance sensors that act like current sensors. The design approach illustrated in this application note, using op amps, is broken down into three design steps: DC, stability compensation, closed-loop gain and noise reduction. A design using a PIN photodiode (light detector) illustrates the principles discussed. Measurement results are provided to support the theory presented. The last sections of this application note contain supplemental information.

MCP6031 Photodiode PICtail™ Plus Demo Board has the following features:

- Supports Microchip MCP6031 high precision op amp
- Uses a transimpedance amplifier as sensor conditioning circuit
- Uses a PIN photodiode (PNZ334) as light detector
- Test points for connecting lab equipment

Chapter 2. Installation and Operation

2.1 INTRODUCTION

This chapter shows how to set up the MCP6031 Photodiode PICtail™ Plus Demo Board and explore the operation of a light sensing application.

Items discussed in this chapter include:

- Required Tools
- MCP6031 Photodiode PICtail™ Plus Demo Board Set-Up
- MCP6031 Photodiode PICtail™ Plus Demo Board Operation

2.2 REQUIRED TOOL

- Explorer 16 Development Board

2.3 MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD SET-UP

Insert the MCP6031 Photodiode PICtail™ Plus Demo Board into the Explorer 16 Development Board as shown in Figure 2-1. An exploded view is shown in the Figure 2-2.

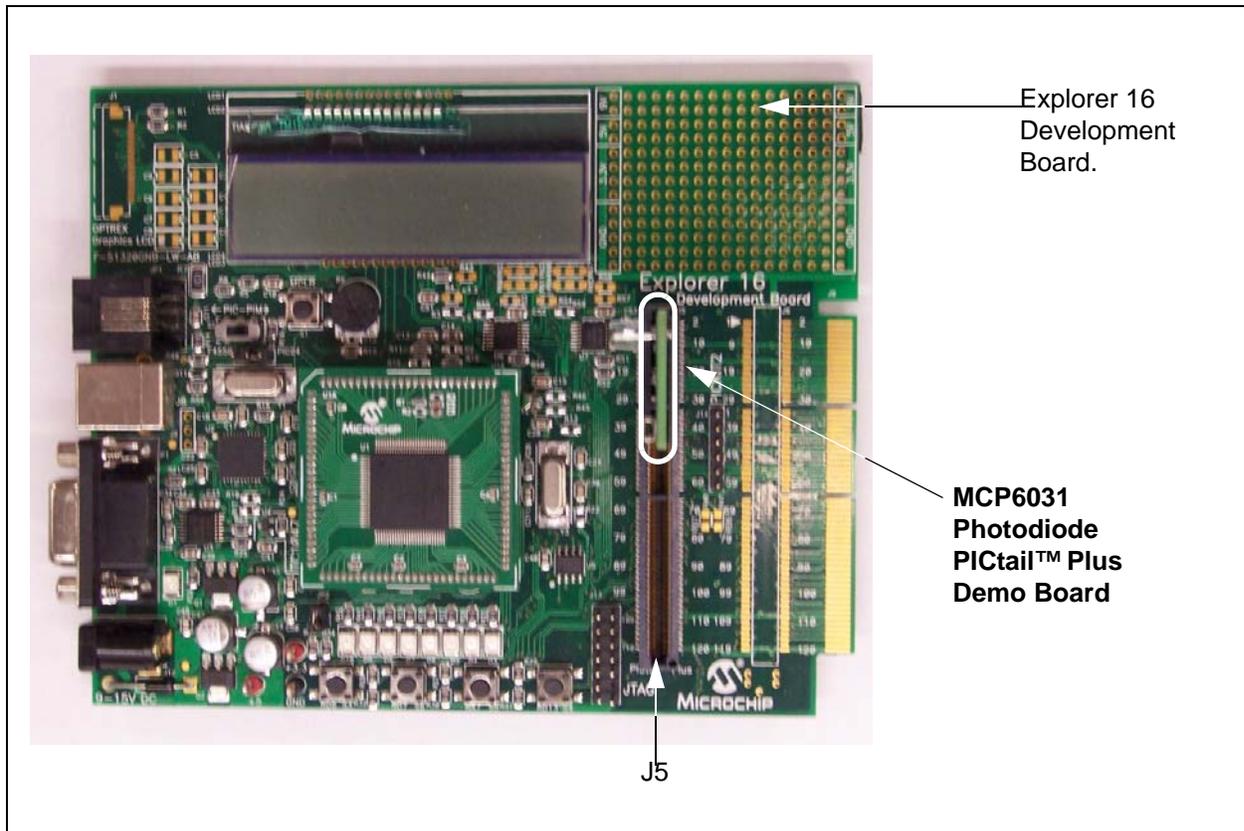


FIGURE 2-1: MCP6031 Photodiode PICtail™ Plus Demo Board Set-Up.

2.4 MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD OPERATION

Figure 2-2 shows data taken near an incandescent lamp powered by a battery.

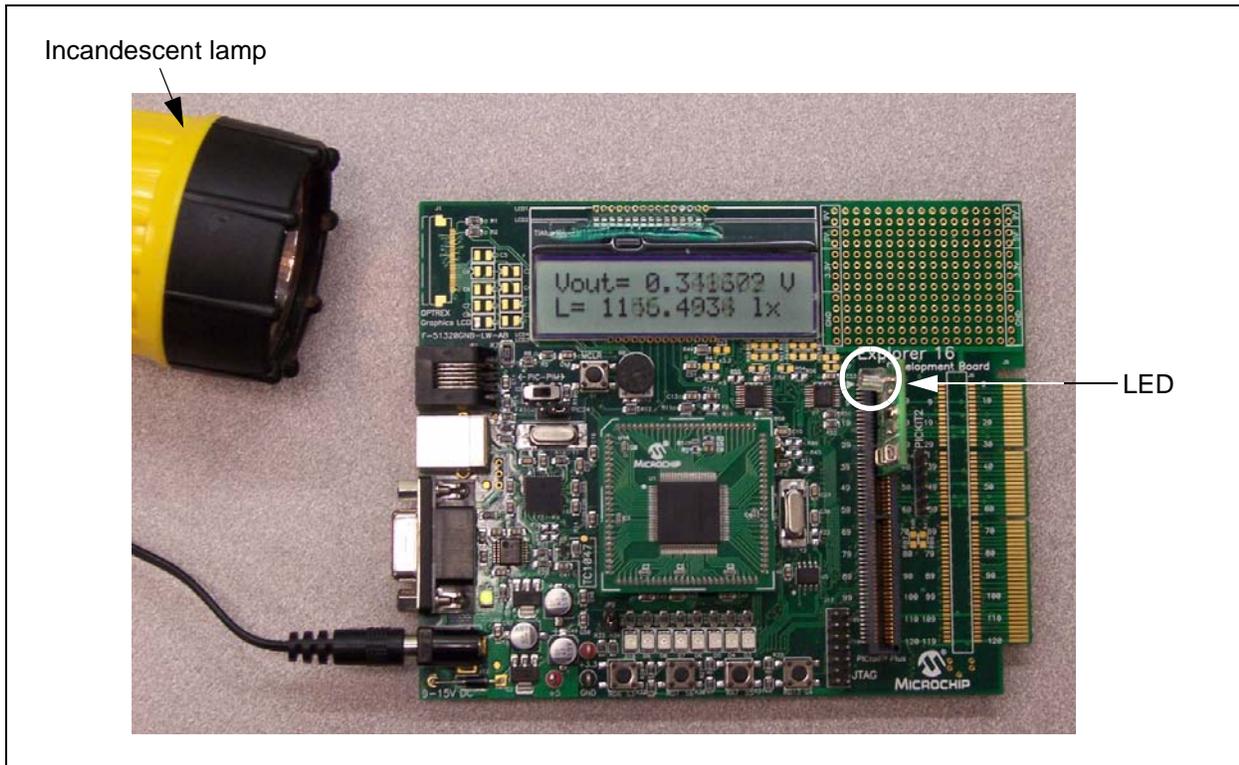


FIGURE 2-2: MCP6031 Photodiode PICtail™ Plus Demo Board Operation.



MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD USER'S GUIDE


Appendix A. Schematic and Layouts

A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the MCP6031 Photodiode PICtail™ Plus Demo Board :

- Board – Schematic
- Board – Top Silk Layer
- Board - Top Metal And Top Silk Layers
- Board – Bottom Metal Layer


A.2 BOARD - SCHEMATIC

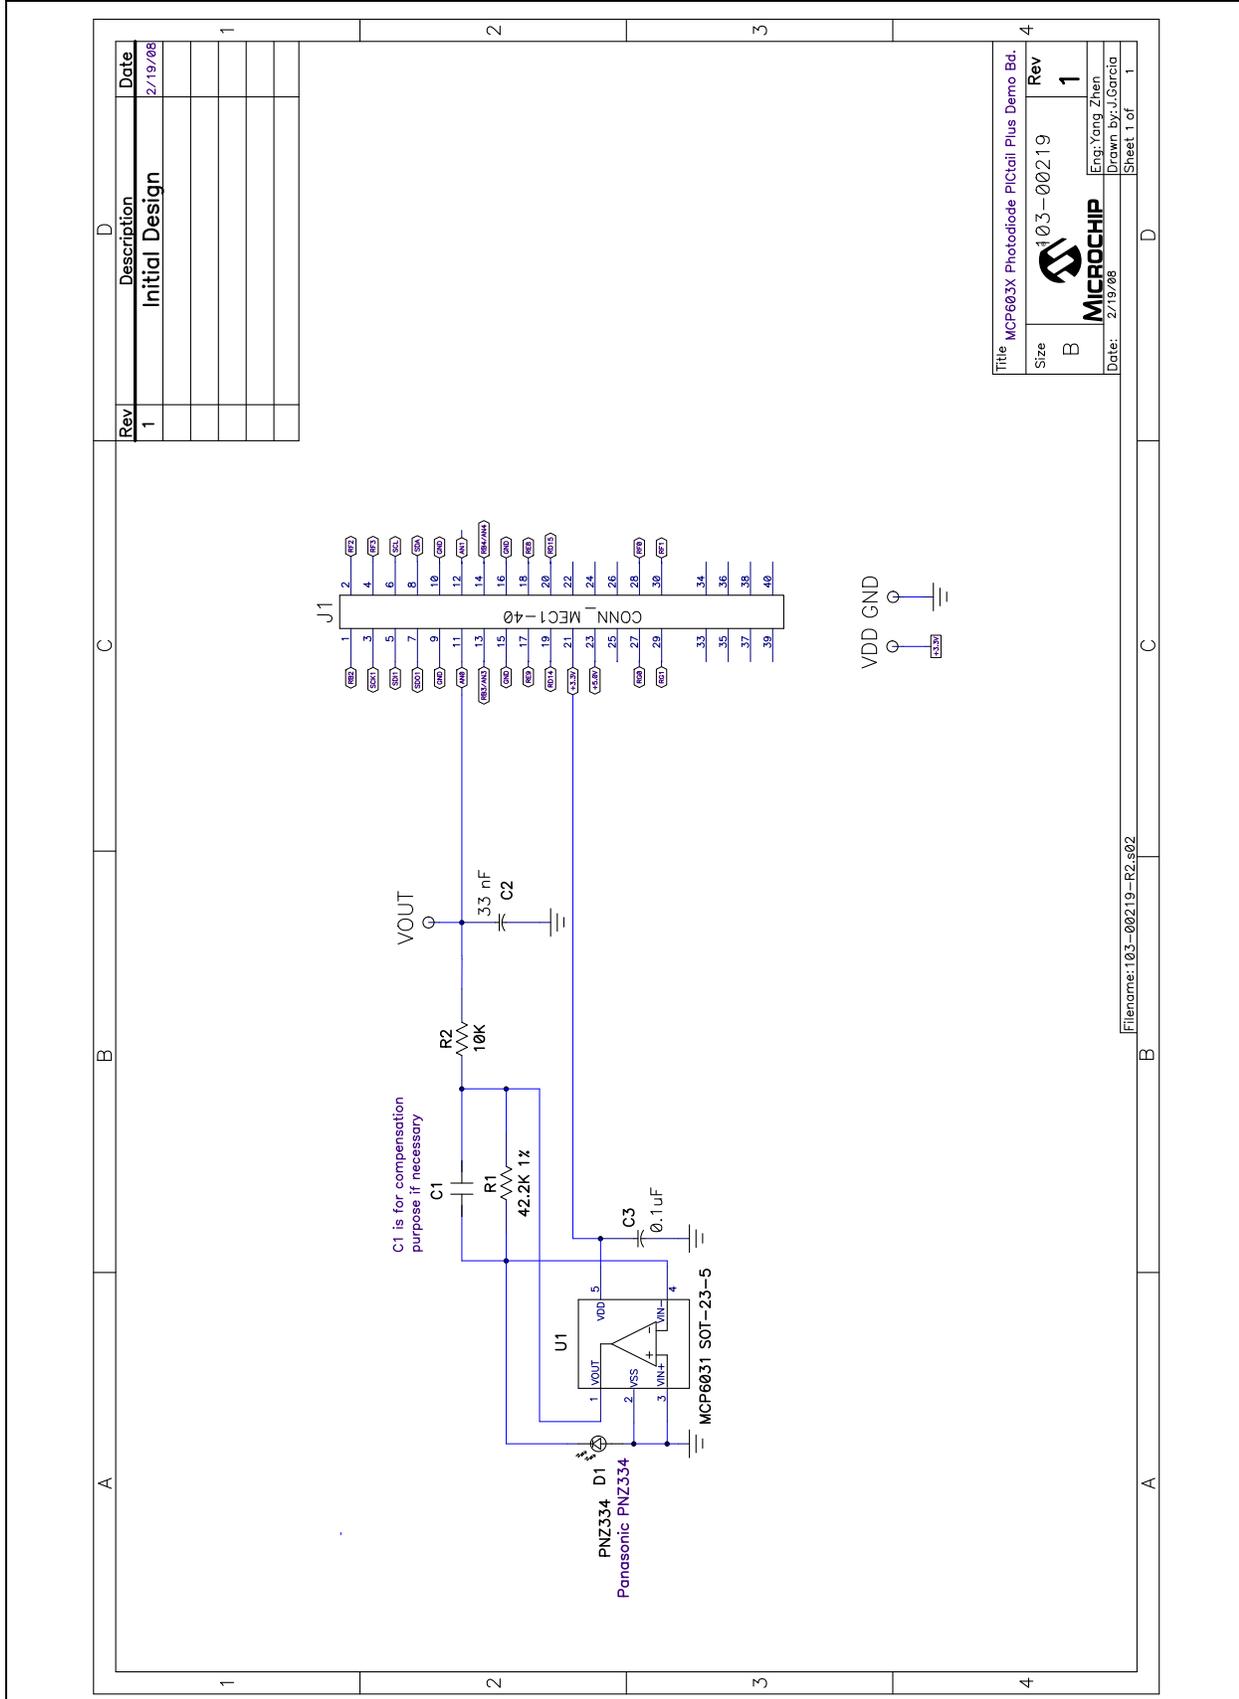


A.3 BOARD - TOP SILK LAYER

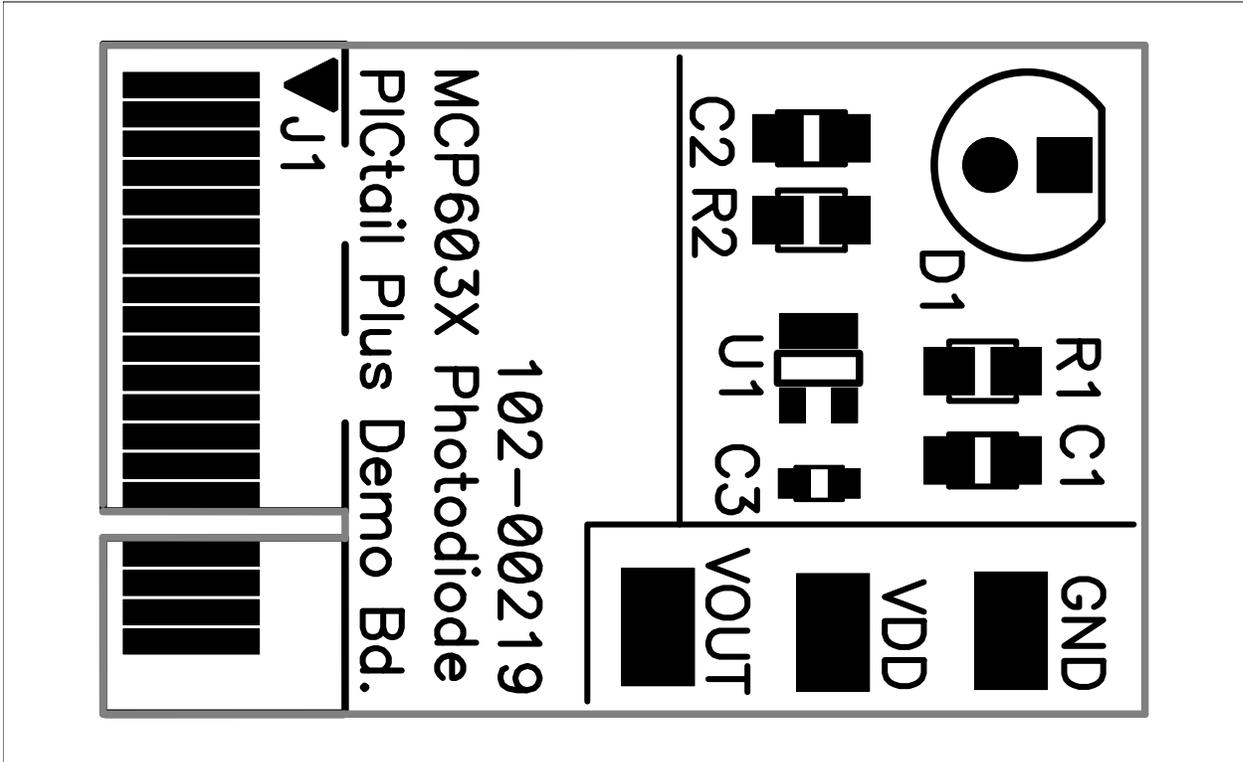

A.4 BOARD - TOP METAL AND TOP SILK LAYERS

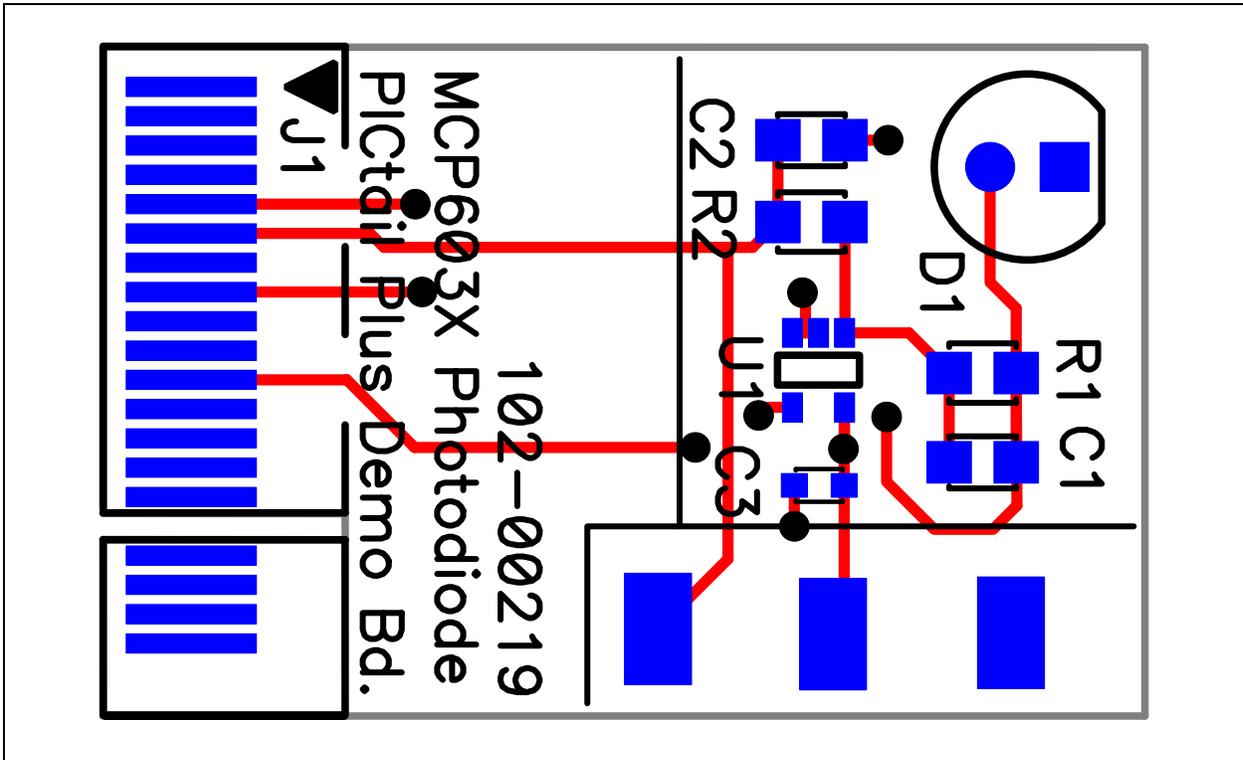

A.5 BOARD - BOTTOM METAL LAYER

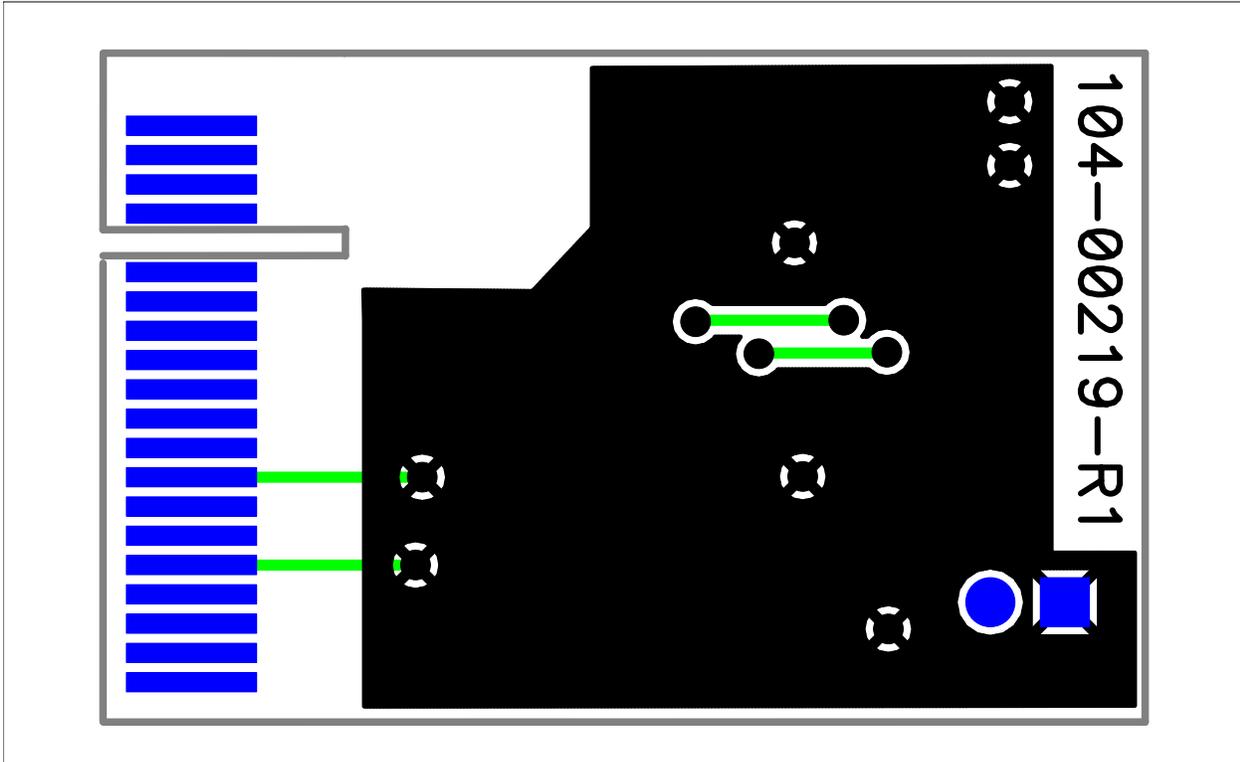



MCP6031 PHOTODIODE PICtail™ PLUS DEMO BOARD USER'S GUIDE

Appendix B. Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (102-00219)

Qty	Reference	Description	Manufacturer	Part Number
1	C2	CAP 33,000PF 50V CERM X7R 0805	Panasonic®	ECJ-2VB1H333K
2	C3, C4	CAP .1UF 25V CERAMIC X7R 0805	Panasonic®	ECJ-2VB1E104K
1	C5	CAP 1.0UF 16V CERAMIC X7R 0805	Kemet® Electronics Corp.	C0805C105K4RACTU
1	D1	PIN PHOTODIODE	Panasonic®	PNZ334
1	R1	RES 42.2K OHM 1/10W 1% 0805 SMD	Panasonic®	ERJ-6ENF4222V
1	R2	RES 10.0K OHM 1/10W 1% 0805 SMD	Panasonic®	ERJ-6ENF1002V
3	TP1—TP3	TEST POINT PC COMPACT SMT	Keystone Electronics	5016
1	U1	MCP6031, SOT-23-5	Microchip Technology Inc.	MCP6031T-E/OT

Note: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

TABLE B-2: BILL OF MATERIALS - UNPOPULATED PARTS

Qty	Reference	Description	Manufacturer	Part Number
1	C1	Not Populated when shipped to customer	—	—

Note: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://support.microchip.com>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo
Kokomo, IN
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara
Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto
Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8528-2100
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Hong Kong SAR
Tel: 852-2401-1200
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-4182-8400
Fax: 91-80-4182-8422

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Yokohama
Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-572-9526
Fax: 886-3-572-6459

Taiwan - Kaohsiung
Tel: 886-7-536-4818
Fax: 886-7-536-4803

Taiwan - Taipei
Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820