

AIMB-705 LGA1151 Intel® Core™ i7/i5/i3 ATX with Dual Display, DDR4, SATA III Startup Manual

Packing List

Before you begin installing your card, please make sure that the following items have been shipped:

- 1 Startup Manual
- 1 Driver CD (user's manual is included)
- 2 Serial ATA HDD data cables
- 1 Serial ATA HDD power cable
- 1 I/O port bracket
- 1 Warranty card

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Note: Acrobat Reader is required to view any PDF file. Acrobat Reader can be downloaded at: www.adobe.com/Products/acrobat/readstep2.html (Acrobat is a trademark of Adobe)

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://www.advantech.com/support>

This manual is for the AIMB-705 series Rev. A1.

Part No. 2001070510

1st Edition

Printed in China

November 2015

Specifications

Standard Functions

- **CPU:** LGA1151 6th Generation Intel® Core™ i7/i5/i3/Pentium/Celeron
 - **BIOS:** AMI 128 Mb SPI BIOS
 - **Chipset:** Intel® H110 chipset
 - **System memory:** Up to 32 GB with two 288-pin DIMM sockets. Supports dual channel non-ECC DDR4 1866/2133 MHz
- Note:** Due to the inherent limitations of PC architecture, the system may not fully detect 32 GB RAM when 32 GB RAM is installed
- **SATA interface:** Four on-board Serial ATAIII connectors support data transmission rate up to 600 MB/s. All four SATAIII ports support Advanced Host Controller Interface (AHCI) technology
 - **LPC interface:** Advantech-designed LPC connector supports TPM module
 - **Serial ports:** Six serial ports: COM1, COM2 and COM4 ~ 6 are RS-232; COM3 is RS-232/422/485 with jumper and BIOS options
 - **Parallel port:** One parallel port, which supports SPP/EPP/ECP modes
 - **Keyboard/mouse connector:** Supports standard PS/2 keyboard and mouse
 - **Watchdog timer:** 255 sec timer level intervals
 - **USB 3.0:** Up to 4 (2 x pin header, 2 x rear I/O)
 - **USB 2.0:** Up to 5 (2 x pin header, 2 x rear I/O, 1 x vertical type A)

Graphic Interface

- **Chipset:** CPU integrated Intel HD graphics controller
- **Display Memory:** 1 GB maximum shared memory with 2 GB and above system memory installed
- **Resolution:**
 - Supports RGB up to 1920 x 1200 resolution @ 60 Hz refresh rate
 - Supports DVI up to 1920 x 1200 resolution @ 60 Hz refresh rate

Ethernet interface

- **Interface:** 10/100/1000 Mbps
- **Controller:** LAN1: Intel® I219-V; LAN2: Intel® I211-AT

Mechanical and Environmental

- **Dimensions (L x W):** 304.8 x 244 mm (12" x 9.6")
- **Power supply voltage:** +3.3 V, +5 V, +12 V, +5 Vsb
- **Power Consumption:**
 - Intel Core Intel I7-6700 @ 3.4 GHz; DDR4 8 G x 2
 - Maximum: +3.3 V at 0.49 A, +5 V at 3.13 A, +12 V at 7.88 A, +5 Vsb at 0.08 A, -5 V at -0.07 A, -12 V at -0.07 A
- **Operating temperature:** 0 ~ 60° C (depending on CPU)
- **Weight:** 0.5 kg (weight of board)

Jumpers and Connectors

The board has a number of jumpers that allow you to configure your system to suit your application. The table below lists the function of each jumper and connector.

Connector / Jumper List	
Label	Function
EATXPWR1	ATX 24-pin main power connector (for system)
ATX12V1	ATX 12 V auxiliary power connector (for CPU)
DIMMA1	Channel A DIMM1
DIMMB1	Channel B DIMM1
SATA0 ~ 3	SATA III (Gen3)
LAN1_ USB3_34	LAN1 / USB 3.0 port 1, 2 stack connector
LAN2_ USB34	LAN2 / USB 2.0 port 1, 2 stack connector
USB3_12	USB 3.0 (pin header)
USB5	USB 2.0 (type A)
USB910	USB 2.0
PCIEX16_1	PCIe x16 slot (Gen3)
PCIEX4_1	PCIe x4 slot (Gen2)
PCI1 ~ 5	PCI slot (32-bit/33 MHz)
VGA1+DVI1	VGA connector / DVI connector
VGA1	VGA connector
COM12	Serial port: RS-232
COM3	Serial port: RS-232/422/485
COM4 ~ 6	Serial port: RS-232
LPT1	Parallel port supporting SPP/EPP mode
KBMS1	Keyboard and Mouse PS/2 connector
KBMS2	Keyboard and Mouse PS/2 connector (box header)
JFP1	Power switch / reset connector
JFP2	External speaker / HDD LED connector / SM Bus connector
JFP3	Keyboard lock and power LED Suspend: fast flash (ATX/AT) System On: on (ATX/AT) System Off: off (AT/ATX)
VOLT1	Voltage Display
CPUFAN1	CPU fan connector (4 pin)
SYSFAN1 ~2	System fan connector (4 pin)
LANLED1	Front panel LAN indicator connector

Jumpers and Connectors (Cont.)

AUDIO1	Audio connector (Line-out, Mic-in)
FPAUD1	Front panel audio pin header
SPI_CN1	SPI flash card pin header
SPDIF_OUT1	SPDIF audio output pin header
GPIO1	8 bit GPIO from super I/O
SMBUS1	SM bus from PCH
LPC1	Low pin count connector for Advantech TPM LPC and RS232 modules.


JCMOS1/JME1: CMOS clear/ME update function

Pins	Result
1-2	Keep CMOS data/Enable ME update*
2-3	Clear CMOS data/Disable ME update

* Default



*Keep CMOS data/
Enable ME update

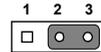


*Clear CMOS data/
Disable ME update


JWDT1: Watchdog timer output option

Closed Pins	Result
2-4	NC
4-6	System reset*

* Default

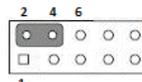

NC 2-4 Closed

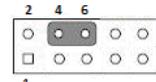

*System Reset 4-6 Closed


PSON1: ATX, AT mode selector

Closed Pins	Result
1-2	AT Mode
2-3	ATX Mode*

* Default



AT Mode 1-2 closed

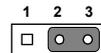

*ATX Mode 2-3 closed

Jumpers and Connectors (Cont.)

JUSB_2: USB power source switch between +5V and +5V_DUAL for onboard USB ports

Closed Pins	Result
1-2	*USB +5V_DUAL Power
2-3	USB +5V Power
* Default	



*USB +5 V_DUAL Power



USB +5 V Power

Software Installation

The CD disc contains a driver installer program that will lead you through the installation of various device drivers needed to take full advantage of your motherboard.

Caution! The computer is supplied with a battery-powered realtime clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to manufacturer's instructions.




Declaration of Conformity

This device complies with the requirements in Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Board Layout

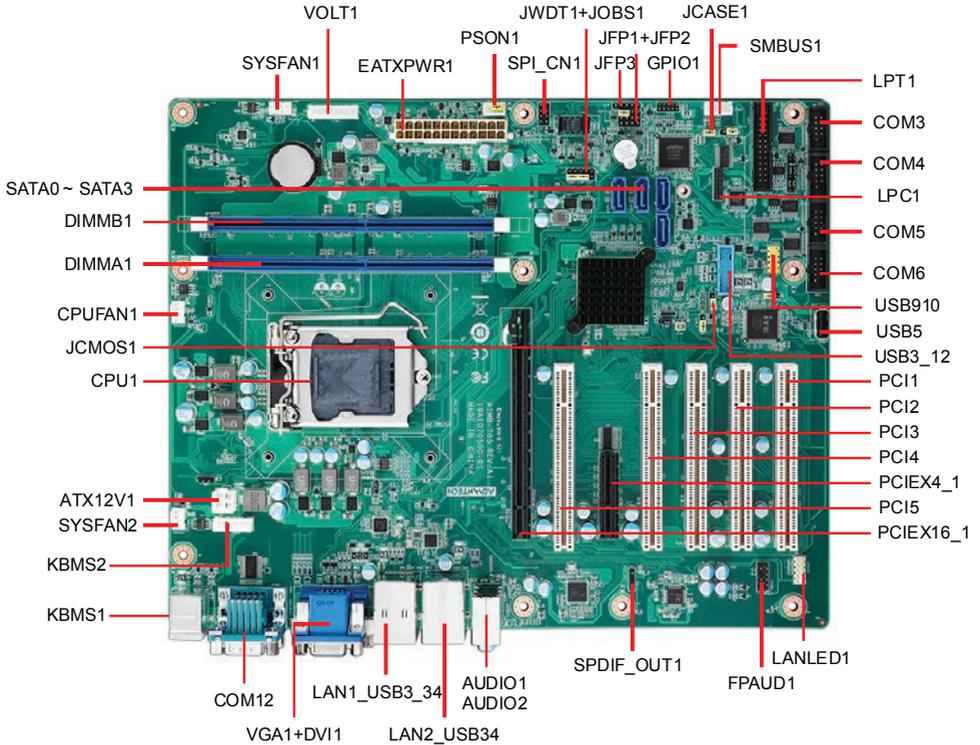

JFP1	3	6	9	12	PWRSW	RESET
&	2	5	8	11	HDDLED	SNMP SM BUS
JFP2	1	4	7	10	SPEAKER	
JFP3	1	2	3	4	PWRLD & KEYLOCK	

Figure 1: Board Layout: Jumper and Connector Locations