
CONTEMPRA - SERIES

ASSEMBLY INSTRUCTIONS FOR 1/4 TURN SIDE PANEL

BUL10127 REV. A


PAGE 1 OF 1

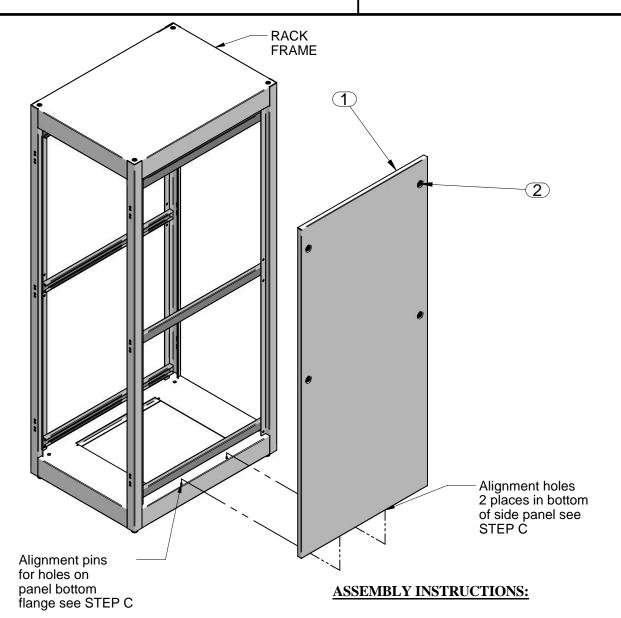

QTY

A)	Note:	Side p	anels (ite	em 1) can	be mo	unted c	on both	sides	of ra	ıck
	or to close off ends of ganged enclosures.									

- B) Turn all ¼ fasteners (item 2) so that the cams are in the open position pointing up.
- C) Align holes in bottom of panel with pins on bottom of frame and slip onto pins.
- D) Push top of side panel into position flush with panel opening on rack.
- E) Secure by turning 1/4 turn fasteners into closed position with cams latched behind rack frame.

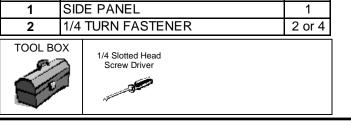

PARTS LIST

DESCRIPTION

ITEM No.

