


T2 Terminator Tooling Specification Sheet Part No. 63855-6200

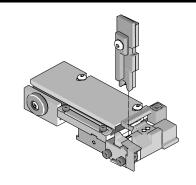

FEATURES

- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- It is ideally suited for mid-volume bench operations
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

MX150L™ Female Terminal for 18-24 AWG Wire, Metal Strip Carrier.

Terminal Order No.		Wire Size		Insulation	Diameter	Strip Length		
		AWG	mm²	mm	ln.	mm	ln.	
19420-0002	Female (Tin)	18-22	0.83-0.36	2.36-2.74	.093108	4.20-5.00	.165197	
19420-0004	Female (Gold)	18-22	0.83-0.36	2.36-2.74	.093108	4.20-5.00	.165197	
19420-0002	Female (Tin)	24	0.20	1.00 Nom.	.039 Nom.	4.20-5.00	.165197	
19420-0004	Female (Gold)	24	0.20	1.00 Nom.	.039 Nom.	4.20-5.00	.165197	


Note: Terminals will accommodate the following wire specification:

(18-22 AWG) UL1015 wires. 1.

2. (24 AWG) UL20251 wire.

For 24 AWG wire, see Tool Qualification Notes, Item 2 on page 2.

DEFINITION OF TERMS

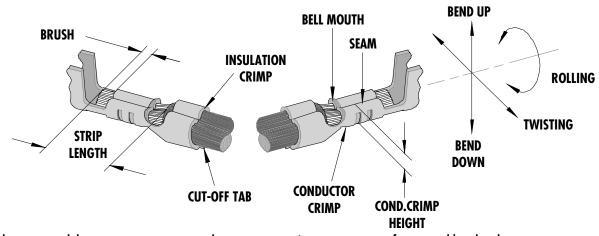

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No. 63855-6200 Release Date: 05-03-06 **UNCONTROLLED COPY** Page 1 of 6 Revision Date: 06-01-06

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off 1	Tab Max.	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
19420	0.25-1.25	.010049	0.50	.020	0.15-0.65	.006026	

	Bend up Bend down		Turiet Del	Roll	Punch Width mm (Ref)				Seam Seam shall not be open	
Terminal Series No.			Twist Roll		Conductor		Insulation			
	Deg	jree	Deg	jree	mm	ln	mm	ln	and no wire allowed out	
19420	5	5	4	8	2.00	.079	3.40	.133	of the crimping area	

After crimping, the conductor profile should measure the following.

Terminal Order No.	Wire Size		Conductor C	rimp Height	Insulation C	Pull Force Min.		
terminal Order No.	AWG	mm²	mm	ln.	Mm (Ref)	In. (Ref)	N	Lb.
19420-0002	18	0.83	1.15-1.25	.045049	3.00 max.	.118 max.	89.0	20.00
19420-0002	20	0.58	1.10-1.20	.043047	3.00 max.	.118 max.	57.9	13.00
19420-0002	22	0.36	1.05-1.15	.041045	3.00 max.	.118 max.	35.6	8.00
19420-0002	24	0.20	1.00-1.10	.039043	3.00 max.	.118 max.	22.2	5.00
19420-0004	18	0.83	1.15-1.25	.045049	3.00 max.	.118 max.	89.0	20.00
19420-0004	20	0.58	1.10-1.20	.043047	3.00 max.	.118 max.	57.9	13.00
19420-0004	22	0.36	1.05-1.15	.041045	3.00 max.	.118 max.	35.6	8.00
19420-0004	24	0.20	1.00-1.10	.039043	3.00 max.	.118 max.	22.2	5.00

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

Tool Qualification Notes:


- 1. This Terminator was qualified to the above specifications with UL1015 wires for 18-22 AWG and UL20251 wire for 24 AWG.
- 2. For the 24 AWG wire, the insulation crimp has clearance around the wire and does not provide strain relief, even at the nominal reference crimp height of 2.11mm (.083").

Release Date: 05-03-06 **UNCONTROLLED COPY** Page 2 of 6 Revision Date: 06-01-06

PARTS LIST

T2 Terminator 63855-6200									
Item	Order No	Engineering No.	Description	Quantity					
Perishable Tooling									
	63855-6270	63855-6270	Tool Kit (All "Y" Items)	REF					
1	63444-2037	63444-2037	Conductor Punch	1 Y					
2	63445-2068	63445-2068	Conductor Anvil	1 Y					
3	63454-0022	63454-0022	Insulation Punch	1 Y					
4	63445-3440	63445-3440	Insulation Anvil	1 Y					
5	63443-0035	63443-0035	Cut-Off Plunger	1 Y					
6	63443-0036	63443-0036	Front Plunger Retainer	1 Y					
		Other C	omponents						
7	63800-8504	63800-8504	Wire Stop	1					
8	11-18-4083	60707-8	Front Cover	1					
9	63443-0009	63443-0009	Scrape Chute	1					
10	63443-0021	63443-0021	Lower Tooling Key	1					
11	63443-2508	63443-2508	Anvil Mount	1					
12	63443-3160	63443-3160	Front Plunger Striker	1					
13	63443-6013	63443-6013	Rear Cover	1					
14	63700-0539	00-0539 63700-0539 Cut-off Plunger Spring		1					
		Fi	rame						
15	63800-8800	T2 Terminator-Frame Wide Track	1						
		Har	dware						
16	N/A N/A M3 by 6Lg. SHCS		2**						
17	N/A	N/A	M4 by 6Lg. SHCS]**					
18	N/A	N/A	M4 by 12Lg. BHCS	2**					
19	N/A	N/A	M4 by 50Lg. SHCS	2** 1**					
20	N/A	N/A							
21	N/A	N/A N/A 3MM by 6Lg. Roll Pin							
22	N/A	N/A	#10-32 by 1/4"Lg. BHCS]**					
*	** Available from an industrial supply company such as MSC (1-800-645-7270).								

Doc No. 63855-6200 **UNCONTROLLED COPY** Page 3 of 6 Release Date: 05-03-06 Revision Date: 06-01-06

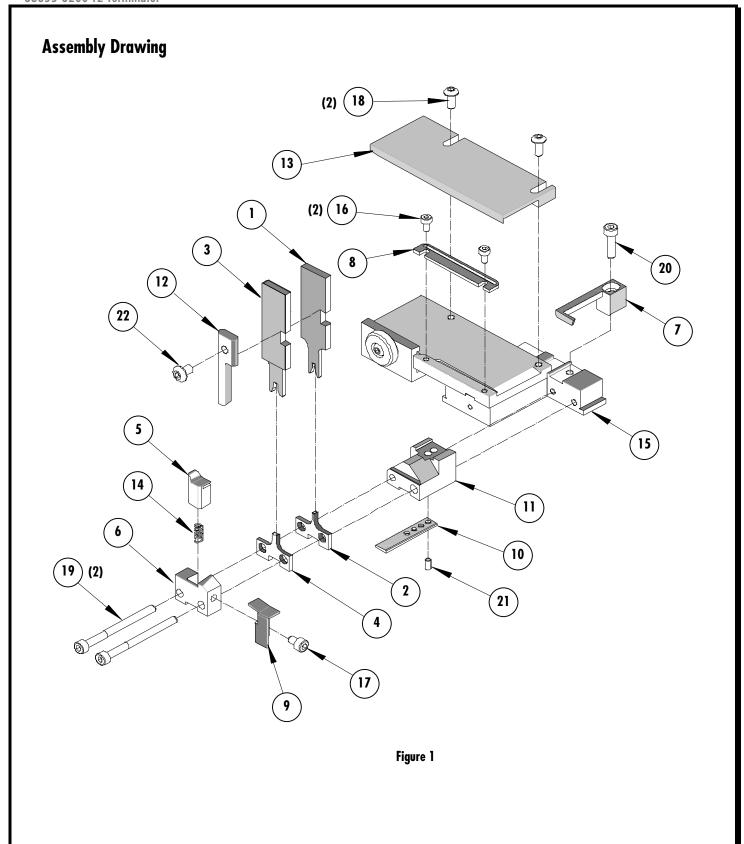

Doc No. 63855-6200 Revision: C Release Date: 05-03-06 Revision Date: 06-01-06

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

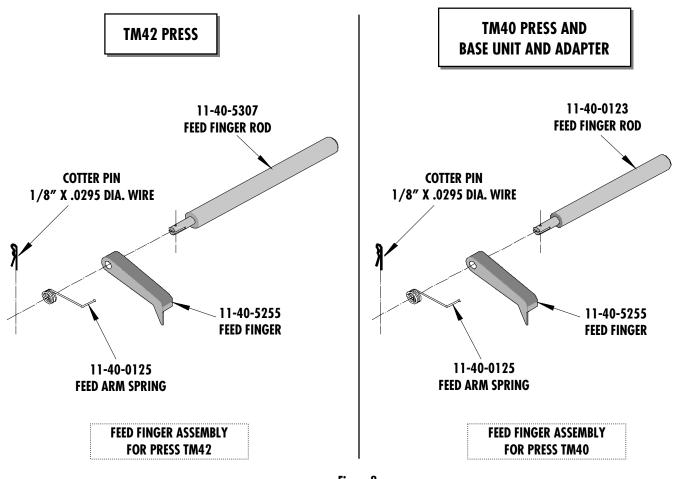


Figure 2

Doc No. 63855-6200 Release Date: 05-03-06 **UNCONTROLLED COPY** Page 5 of 6 Revision Date: 06-01-06

Revision: C

NOTES

- Molex recommends an extra perishable tooling kit be maintained at your facility.
- Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com

Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No. 63855-6200 Release Date: 05-03-06 **UNCONTROLLED COPY** Page 6 of 6 Revision Date: 06-01-06

Revision: C