

## **RT2101AGQW Evaluation Board**

### **Purpose**

The RT2101A is a synchronous step-down converter with the input voltage range from 2.95V to 6V and provides 3A output current. This document explains the function and use of the RT2101A evaluation board (EVB), and provides information to enable operation, modification of the evaluation board and circuit to suit individual requirements.

## **Table of Contents**

Purpose	1
Introduction	
Key Performance Summary Table	
Bench Test Setup Conditions	3
Schematic, Bill of Materials & Board Layout	5
More Information	7
Important Notice for Richtek Evaluation Board	7



#### Introduction

#### General Product Information

The RT2101A is a high efficiency step-down converter and capable of delivering 3A output current over a wide input voltage range from 2.95V to 6V. The RT2101A provides accurate regulation for a variety of loads with  $\pm 3\%$  accuracy. For reducing inductor size, it provides up to 2MHz switching frequency. The efficiency is maximized through the integrated  $45m\Omega$  MOSFETs and  $550\mu$ A typical supply current. Under voltage lockout voltage of the RT2101A is 2.7V, and it also provides external setting by a resistor network on the enable pin. The RT2101A provides protections such as inductor current limit under voltage lockout and thermal shutdown. The over temperature threshold is  $145^{\circ}$ C. The RT2101A is available in WQFN-16L 3x3 package.

#### **Product Feature**

Integrated 45mΩ MOSFETs
Input Range : 2.95V to 6V

• Adjustable PWM Frequency: 700kHz to 2MHz

Output Current : 3A95% Efficiency

• Adjustable Soft-Start

• Power Good Indicator

Enable Control

• Under Voltage Lockout

Current Limit

Thermal Shutdown

### Key Performance Summary Table

Key Features	Evaluation Board Number : PCB038_V1	
Input Voltage Range	2.95V to 6V	
Max Output Current	3A	
Default Output Voltage	1.8V	
Default Marking & Package Type	RT2101AGQW, WQFN-16L 3x3	
Operation Frequency	Adjustable from 700kHz to 2MHz	



## **Bench Test Setup Conditions**

### Headers Description and Placement



Carefully inspect all the components used in the EVB according to the following Bill of Materials table, and then make sure all the components are undamaged and correctly installed. If there is any missing or damaged component, which may occur during transportation, please contact our distributors or e-mail us at <a href="mailto:evb\_service@richtek.com">evb\_service@richtek.com</a>.

#### **Test Points**

The EVB is provided with the test points and pin names listed in the table below.

Test point/ Pin name	Signal	Comment (expected waveforms or voltage levels on test points)			
VIN	Input voltage	Power input.			
EN	Enable test point	Chip Enable. Externally pulled high to enable and pulled low to disable thischip. It is internally pulled up to high when the pin is floating.			
GND	Ground	Power Ground.			
PGOOD	Power good test point	Output of power good indicator.			
воот	Bootstrap supply test point	Bootstrap supply for high-side gate driver. Connect a 0.7 ceramic capacitor between the BOOT and SW pins.			
LX	Switch node test point	Connect this pin to an external L-C filter.			
RT/SYNC	Clock input	Frequency Setting and External Synchronous.			



#### Power-up & Measurement Procedure

- 1. Apply a 12V nominal input power supply (2.95V < V<sub>IN</sub> < 6V) to the VIN and GND terminals.
- 2. Set the jumper at JP1 to connect terminals 1 and 2, connecting EN to enable operation.
- 3. Verify the output voltage (approximately 1.8V) between VOUT and GND.
- 4. Connect an external load up to 3A to the VOUT and GND terminals and verify the output voltage and current.

### **Output Voltage Setting**


Set the output voltage with the resistive divider (R1, R2) between VOUT and GND with the midpoint connected to FB. The output is set by the following formula:

$$V_{OUT} = 0.827 \times (1 + \frac{R1}{R2})$$



# Schematic, Bill of Materials & Board Layout

### **EVB Schematic Diagram**

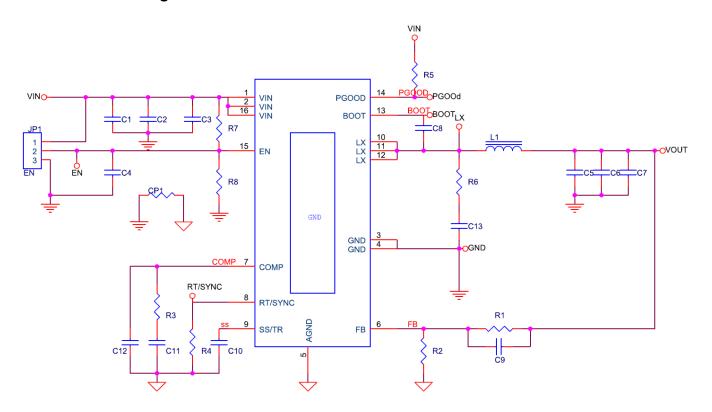


#### Bill of Materials


Din or materials							
Reference	Qty	Part number	Description	Package	Manufacturer		
U1	1	RT2101AGQW	DC-DC Converter	WQFN-16L 3x3	Richtek		
R1	1	RTT031182FTP	11.8k	R-0603	旺詮		
R2	1	WR06X1002FTL	10k	R-0603	WALSIN		
R3	1	WR06X7871FTL	7.68k	R-0603	WALSIN		
R4	1	WR06X1803FTL	180k	R-0603	WALSIN		
R5	1	WR06X1003FTL	100k	R-0603	WALSIN		
C1	1	C2012X5R1C106KT	10μF/16V/X5R	C-0805	TDK		
C3	1	C1608X5R1E105KT000E	1µF/25V/X5R	C-0603	TDK		
C5, C6	2	GRM32ER61C226KE20L	22µF/16V/X7R	C-1210	muRata		
C8	1	C1608X7R1H104KT000N	0.1µF/50V/X7R	C-0603	TDK		
C10	1	0603B103K500	10nF/50V/x7R	C-0603	WALSIN		
C11	1	0603B332K500	3.3nF/50V/X7R	R-0603	WALSIN		
L1	1	7447714015	1.5µH/10A	10 x 10 x 5 mm	WE		



## PCB Layout

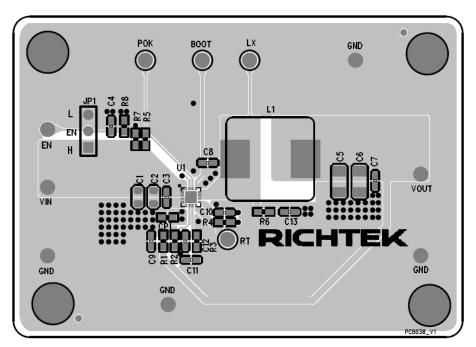

Top View (1<sup>st</sup> layer)

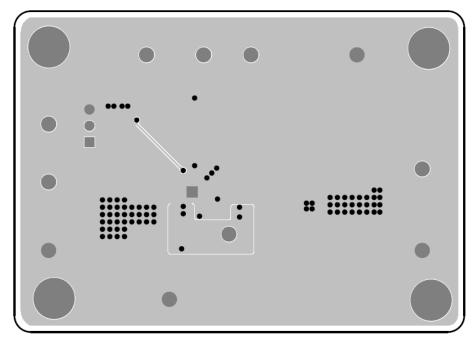

Bottom View (4<sup>th</sup> Layer)



### **More Information**

For more information, please find the related datasheet or application notes from Richtek website http://www.richtek.com.

## Important Notice for Richtek Evaluation Board

THIS DOCUMENT IS FOR REFERENCE ONLY, NOTHING CONTAINED IN THIS DOCUMENT SHALL BE CONSTRUED AS RICHTEK'S WARRANTY, EXPRESS OR IMPLIED, UNDER CONTRACT, TORT OR STATUTORY, WITH RESPECT TO THE PRESENTATION HEREIN. IN NO EVENT SHALL RICHTEK BE LIABLE TO BUYER OR USER FOR ANY AND ALL DAMAGES INCLUDING WITHOUT LIMITATION TO DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.