

### DEMO MANUAL DC1533A

LTM8045

# Inverting/SEPIC µModule Converter with Up to 700mA Output

#### DESCRIPTION

Demo circuit DC1533A features the LTM®8045, an inverting/ SEPIC  $\mu$ Module converter delivering up to 700mA of output current. DC1533A is configured as an inverting converter, but can be easily changed to a SEPIC configuration for non-inverting step-up or step-down functionality. The user adjustable features of the LTM8045 such as output voltage, switching frequency, soft-start period and undervoltage lockout can be changed on DC1533A simply by

modifying or installing the appropriate resistors or capacitor. The LTM8045 data sheet must be read in conjunction with this demo manual to properly use or modify demo circuit DC1533A.

Design files for this circuit board are available at http://www.linear.com/demo

#### PERFORMANCE SUMMARY (T<sub>A</sub> = 25°C)

PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
Minimum Input Voltage, V <sub>IN</sub>				2.8	V
Maximum Input Voltage, V <sub>IN</sub>		18			V
Regulator Output Voltage, V <sub>OUT</sub> <sup>-</sup>	R2 = 60.4k	-4.83		-5.19	V
Maximum Output Current, I <sub>OUT</sub> <sup>-</sup>	V <sub>IN</sub> = 5V V <sub>IN</sub> = 12V	430 580			mA mA
Efficiency	$V_{IN} = 5V, I_{OUT}^- = 400 \text{mA}$		80		%
Switching Frequency	R1 = 130k		700		kHz

#### **BOARD PHOTO**





#### **QUICK START PROCEDURE**

Demo circuit DC1533A is an easy way to evaluate the performance of the LTM8045. Refer to Figure 1 for the proper measurement equipment setup and Figure 2 for the maximum output current versus input voltage, then follow the procedure below:

NOTE: Do not hot-plug the  $V_{IN}$  terminal at high input voltages. Hot-plugging a power supply through wire leads to the demonstration circuit can cause the voltage on the extremely low ESR ceramic input capacitor to ring to twice its DC value. In order to protect the LTM8045, an aluminum electrolytic capacitor with higher ESR is placed at the input terminals. This may protect against some, but not all, input transients due to a hot-plugged power supply. See Application Note 88 for more details.

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the  $V_{\text{IN}}$  or

 $V_{\text{OUT}}$  and GND terminals. See Figure 3 for proper scope probe technique.

- 1. Place JP1 in the ON position.
- 2. Connect the power supply (with power off), load, and meters as shown in Figure 1.
- 3. After all connections are made, turn on the input power and verify that the output voltage is –5V.

NOTE: If the output voltage is too low, temporarily disconnect the load to make sure that the load is not set too high.

4. Once the proper output voltage is established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

NOTE: See the section that follows for instructions to convert DC1533A to a  $5V_{OUT}$  SEPIC with a positive  $V_{OUT}$ .

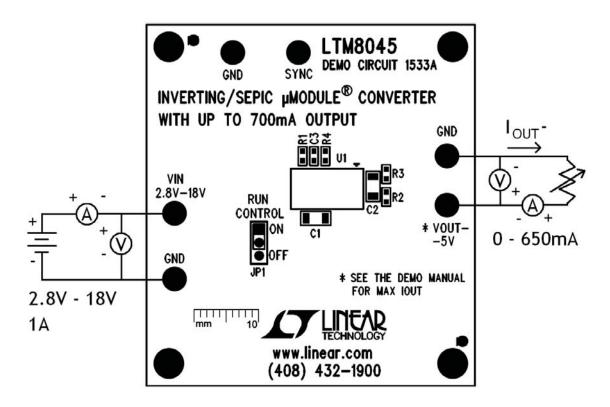


Figure 1. Proper Measurement Equipment Setup



# **QUICK START PROCEDURE**

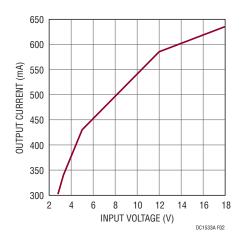


Figure 2. Maximum Output Current vs Input Voltage for  $V_{OUT} = -5V$ 

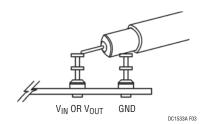


Figure 3. Proper Scope Probe Technique

#### Instructions to Convert DC1533A to a $5V_{OUT}$ SEPIC with a Positive $V_{OUT}$

- 1. Start with DC1533A. Disconnect all supplies and loads.
- 2. Remove R2 and install R3 = 45.3k as shown in Figure 4. R3 MUST BE PRESENT BEFORE OPERATION OTHERWISE THE LTM8045 MAY BE DAMAGED.

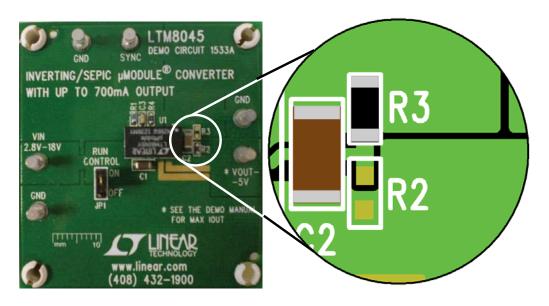


Figure 4

3. Make three cuts on the top copper to separate the terminal labeled GND from the ground plane, as shown in Figure 5. The terminal labeled GND is now  $V_{OUT}^+$ .

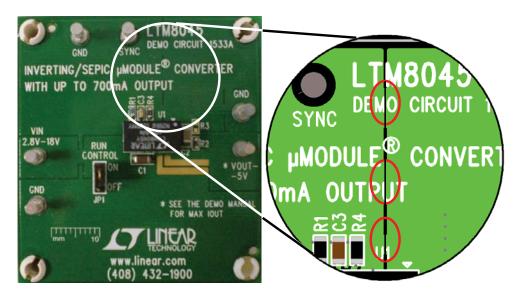


Figure 5



dc1533af

4. Solder the exposed copper together with braid to connect the terminal labeled  $V_{OUT}^-$  to the ground plane, as shown in Figure 6. The terminal labeled  $V_{OUT}^-$  is now GND.

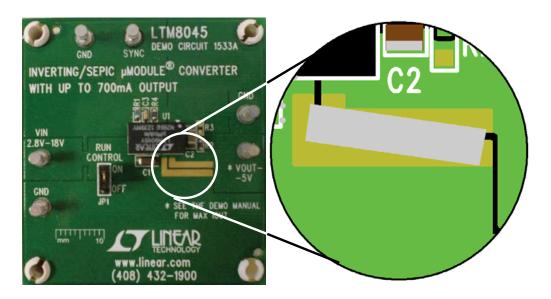


Figure 6


5. Change C2 to 100µF 6.3V 1206 or 1210. Change R1 to 115k to optimize the switching frequency.

# DEMO MANUAL DC1533A

# **PARTS LIST**

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER	
Required Ci	rcuit Compo	nents			
1	1	C1	CAP., X7R, 4.7µF, 25V, 10%, 1206	NIC, NMC1206X7R475K25TRPLPF	
2	1	C2	CAP., X5R, 22µF, 16V, 10%, 1206	AVX, 1206YD226KAT2A	
3	1	C3	CAP., X7R, 10nF, 16V, 10%, 0603	AVX, 0603YC103KAT2A	
4	1	R1	RES., CHIP, 130k, 1%,0603	VIAHSY, CRCW0603130KFKEA	
5	1	R2	RES., CHIP, 60.4k, 1%, 0603	VISHAY, CRCW060360K4FKED	
6	1	U1	I.C., LTM8045EY#PBF, BGA	LINEAR TECH., LTM8045EY#PBF	
Optional De	mo Circuit C	Components	·		
1	0	CIN1	CAP., SMT, 47μF, 50V	SUNCON, 50CE47BS	
2	0	C4	CAP., X7R, 47µF, 16V, 20%, 1210		
3	0	C5	CAP., X7R, 4.7µF, 25V, 10%, 1206		
4	0	L1, L2	IND., 1.0μH, 20%,1812	MURATA, LQH43CN1R0M03	
5	0	R3	RES., 0603		
6	0	R4	RES., CHIP, 0Ω, 0603	VISHAY, CRCW06030000Z0EA	
7	0	R5, R6	RES., CHIP, 0603		
Hardware					
1	6	E1-E6	TESTPOINT, TURRET, .095"	MILL-MAX, 2501-2-00-80-00-00-07-0	
2	1	JP1	2MM SINGLE ROW HEADER, 3 PIN	SAMTEC, TMM-103-02-L-S	
3	1	XJP1	SHUNT, .079" CENTER	SAMTEC, 2SN-BK-G	
4	4	(STAND-OFF)	STAND-OFF, NYLON 0.375" TALL	KEYSTONE, 8832(SNAP ON)	

#### **SCHEMATIC DIAGRAM**

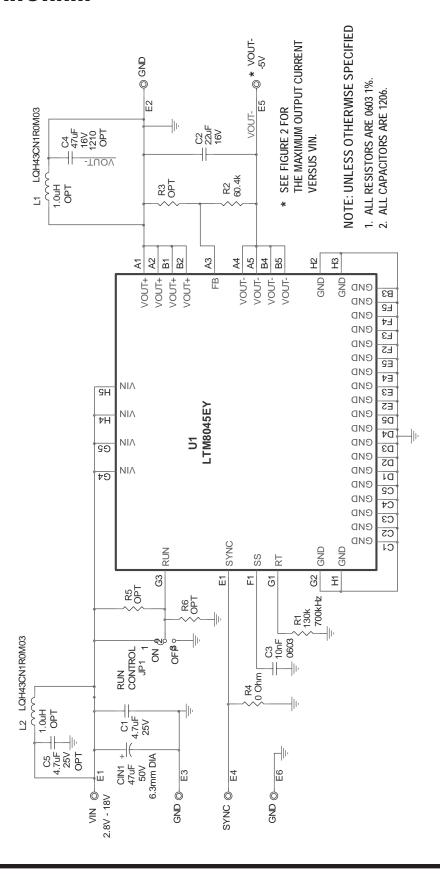



#### DEMO MANUAL DC1533A

#### DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

**Please read the DEMO BOARD manual prior to handling the product**. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged**.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

