


Extractor Tool Instruction Sheet Order No. 63813-2300

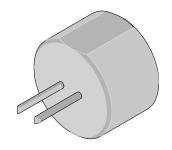

FEATURES

This Extractor Tool is for the removal of 98915 & 64323 Series female terminals from CMC connector.

SCOPE


Products: 1.50mm (.059") CP Crimp Terminal for CMC connector.

| Terminal Series No. | Terminal Order No. |
|---------------------|--------------------|
| 98915 | 98915-1029 |
| | 98915-1039 |
| | 98915-1219 |
| | 98915-1319 |
| 64323 | 64323-1029 |
| | 64323-1039 |
| | 64323-1219 |
| | 64323-1319 |

OPERATION:


When removing a damaged crimped wire from the CMC connector follow the steps below:

- 1. The secondary lock on the CMC connector will need to be opened first. See Figure 1.
- 2. Using a screwdriver insert the flat edge under the tab of the secondary lock and pull up. Use your fingers to open the lock completely.

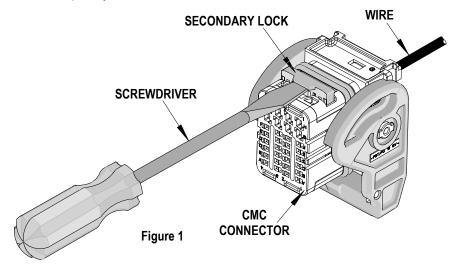

Doc No: ATS-638132300 Release Date: 04-11-07 **UNCONTROLLED COPY** Page 1 of 2 Revision: B Revision Date: 01-27-09

3. Position the blades of the extraction tool into the two small cavities of the slot in the front face of the housing as shown in Figure 2. Use the identifying markings on both the front and back of the connector to locate the opening used to extract the crimped wire.

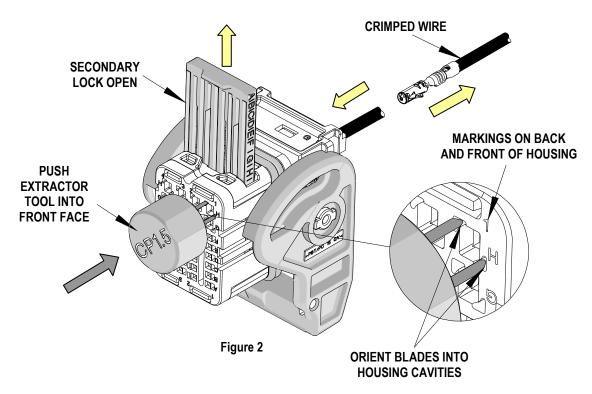

- 4. Push extractor tool into the desired slot until it clicks or comes to a stop. Do not force the extractor tool any further or there can be damage to the housing.
- 5. Gently push the wire forward towards the housing and then pull out of the CMC housing.
- 6. Molex does not offer repair parts for Extractor Tools due to the inexpensive nature of these tools.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638132300 Release Date: 04-11-07 **UNCONTROLLED COPY** Page 2 of 2 Revision: B Revision Date: 01-27-09