





#### **Features**

- Universal AC input range 70 to 255 VAC with PFC
- Class I equipment
- · DC output for 24 and 48 V loads
- Battery charging for 24 and 48 V batteries with remote temperature control
- 4 kVAC I/O electric strength test voltage
- · Telecom rectifier applications
- · Very high efficiency, typically 93%
- Power factor >0.96, harmonics according to IEC/EN 61000-3-2, low RFI
- · No inrush current, hot swap capability
- High power density, rugged mechanical design, all boards covered with a protective lacquer
- Very compact 19" cassette (28 TE, 3 U, 160 mm)

Safety according to IEC/EN 60950-1 and UL/CSA 60950-1 2<sup>nd</sup> Ed.





### Description

The T Series converters are electrically isolated AC-DC converters with an output power of up to 550 W. For higher power requirements several converters may be connected in parallel.

The input is ideally adapted to the mains: Full power factor correction, no inrush current, low RFI level, and high transient and surge immunity are key design features. A T Series converter behaves similar to a resistive load.

The LT models can be operated from a universal AC-input range from 85 to 255 VAC. It is the preferred type for 230 VAC mains, whereas the UT models are optimized for 110/120 VAC mains. The output delivers an electrically isolated Safety Extra Low Voltage (SELV) and is short-circuit and noload proof. Depending on the type, two output characteristics are available, intended either for rectifier applications or for battery charging purposes.

The latter types can be integrated into systems, where the

output voltage is backed-up by a battery. The float charge of the battery can be set by a cell-voltage selector switch according to the battery type used. These converters are equipped with a temperature sensor input, in order to improve the life expectancy of the battery.

The rectifier models are suited for DC-bus applications at constant voltage. As the output voltage is SELV, even electrically non-isolated switching regulators, such as the PSx models, may be connected to the output.

The LT/UT1701 models are especially optimized to build distributed power systems together with the 48Q, CQ, or CP Series DC-DC converters, as the signalling capabilities of both families are matched. Distributed power systems have as one advantage less power losses over load lines and fewer regulation problems.

Power-One also offers backplanes for fast and simple set-up of 19" DIN-rack systems with T Series converters; see *Accessories*.

# Table of Contents Page

Description	1
Model Selection	
Functional Description	3
Electrical Input Data	4
Electrical Output Data	6
Control Features of the Battery Chargers	11
Auxiliary Functions	13

	Different Configurations and Applications	18
)	Electromagnetic Compatibility (EMC)	21
3	Environmental Conditions	22
ļ	Mechanical Data	24
6	Safety and Installation Instructions	25
	Description of Options	28
3	Accessories	29

Page



### **Model Selection**


Table 1: All models. For all models and options, contact Power-One for availibility and lead times!

Output voltage	Output current	Operating in	nput voltag	e range and efficiency		Options
V <sub>o set</sub> at V <sub>i nom</sub> , 0.5 I <sub>o nom</sub> [VDC]	/ <sub>o nom</sub> [A]	V <sub>i min</sub> – V <sub>i max</sub> 70 – 140 VAC	η <sub>min</sub> <sup>1</sup> [%]	V <sub>i min</sub> – V <sub>i max</sub> 85 – 255 VAC	η <sub>min</sub> <sup>1</sup> [%]	
24.25	16	UT1201-7 <sup>2, 4</sup>	91	LT1201-7 <sup>2, 6</sup>	90.5	D
25.25 - (27.25) - 28.25	14.5	UT1240-7Z <sup>4, 3</sup>	91	LT1240-7Z <sup>3, 6</sup>	91	F B1
37.9 - (40.88) - 42.4	11	_	_	LT1840-7Z <sup>3, 6</sup>	91	
48	11	_	_	LT1702-7 <sup>2,6</sup>	92.5	
54.5	10	UT1701-7 <sup>5</sup>	92	LT1701-7 <sup>6</sup>	92.5	
50.5 - (54.5) - 56.5	10	UT1740-7Z <sup>5, 3</sup>	92	LT1740-7Z <sup>3,6</sup>	92	

- <sup>1</sup> Min. efficiency measured at  $V_{i \text{ nom}}$  and  $I_{o \text{ nom}}$ ; typ. values are approx. 1% better.
- <sup>2</sup> Instead of output power limitation, output current limitation.
- <sup>3</sup> Output voltage range controlled by input  $V_{cr}$ , remote temperature sensor, and cell voltage selector switch.
- <sup>4</sup> Reduced output power for  $V_i = 70 95$  VAC; see *Output Power Limitation*.
- <sup>5</sup> Reduced output power for  $V_i = 70 100$  VAC; see *Output Power Limitation*.
- <sup>6</sup> Reduced output power for  $V_i = 85 155$  VAC; see *Output Power Limitation*.

NFND Not for new designs

### **Part Number Description**

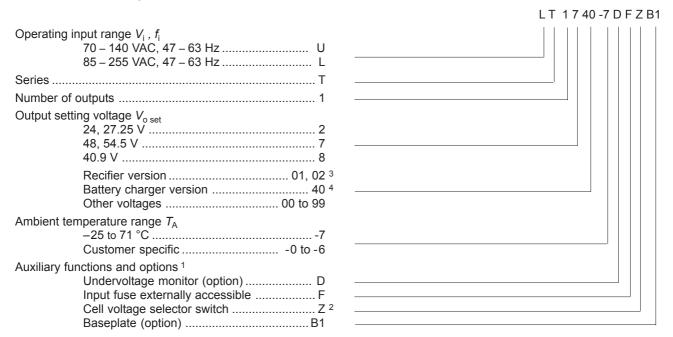

- 1 See Description of Options
- <sup>2</sup> Only for T1240/1740/1840
- No input for battery temperature sensor
- <sup>4</sup> With input for battery temperature sensor

Example: LT1740-7Z: AC-DC converter, input voltage range 85 - 255 VAC, single output 50.5 - 56.5 V, 10 A, operational ambient temperature -25 to 71 °C, with cell voltage selector switch.

### **Product Marking**

Basic type designation, applicable safety approval and recognition marks, CE mark, warnings, pin designation, Power-One company logo.

Specific type designation, input voltage range, nominal output voltage and current, degree of protection, batch no., serial no., and data code including production site, version, and date of production.





### **Functional Description**

The T Series AC-DC converters are primary controlled with a constant switching frequency of 65.5 kHz. The power factor corrected single step conversion of the line input voltage to a low output voltage results in extremely high efficiency.

The input voltage is fed via input fuse, filter, and rectifier to the main transformer. The wideband input filter with small input capacitance generates virtually no inrush current. Transient suppressors protect the converter against overvoltage and surges. An auxiliary converter generates an internal supply voltage for the primary control logic. The input voltage waveform is sensed by the primary control logic to provide active power factor correction.

The main transformer is connected to a rectifier, large output capacitors, and an efficient output filter, which ensures low output ripple and spikes, and provides the necessary hold-up time. The output voltage is fed back to the primary control logic via a signal transformer.

The inhibit signal and the T failure signal are transferred by a second signal transformer (no opto-couplers are used !).

System Good and Output OK are each indicated by a green LED; inhibit and T System Failure by a red LED.

System Good and Power Down are available as open collector signals at the connector. The threshold level of the Power Down signal can be externally adjusted at the D set input.

Test sockets at the front panel allow for the measurement of the output voltage.

The battery charger version provides additional features to control the output voltage. To set it to different battery float-charge voltages, a 16-step selector switch (Z) is standard.

A control input to control the output voltage by an external temperature sensor is available at a control pin. A trimpotentiometer allows fine adjustment of the output voltage.

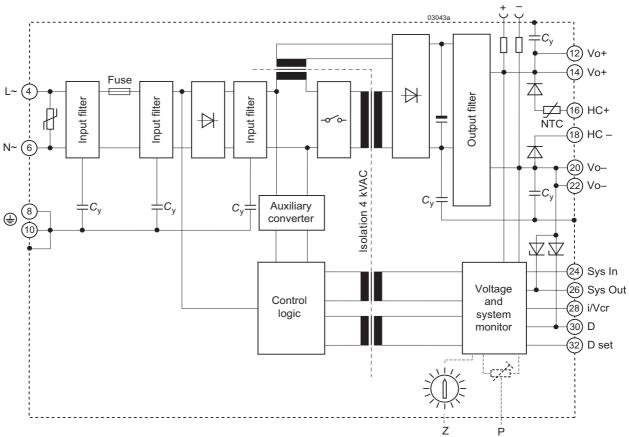


Fig. 1 Block diagram



# **Electrical Input Data**

General condition:  $T_A = 20 \, ^{\circ}\text{C}$ Table 2a: Input data of LT models

Input			LT12xx		LT17xx			LT18xx			Unit	
Charact	eristic	Conditions	min	typ	max	min	typ	max	min	typ	max	
Vi	Operating input voltage range with full output power	47 – 63 Hz <sup>2</sup>	155		255	155		255	130		255	VAC
V <sub>i red</sub>	Operating input voltage range with reduced output power <sup>1</sup>		85		155	85		155	85		130	
V <sub>i</sub> (V <sub>i nom</sub> )	Rated (nominal) input voltage	50 – 60 Hz <sup>2</sup>	100	(230)	240	100	(230)	240	100	(230)	240	
I <sub>i nom</sub>	Nominal input current	V <sub>i nom</sub> , P <sub>o nom</sub>		1.9			2.6			2.2		Α
I <sub>i L</sub>	Input current limit			3			4			4		
P <sub>i 0</sub>	No-load input power	$V_{i \min} - V_{i \max}, I_o = 0$		6			8			8		W
P <sub>i inh</sub>	Input power when inhibited	$V_{i \min} - V_{i \max}$ , inhibit = low		3			3			3		
PF	Power factor	V <sub>i nom</sub> , I <sub>o nom</sub>	96			98			98			%
Ci	Input capacitance 3			4			4			4		μF
ton	Switch on delay	V <sub>i nom</sub> , P <sub>o nom</sub>		400			400			400		ms
	Conducted emissions	V <sub>i nom</sub> , V <sub>o nom</sub> , I <sub>o nom</sub>		Α			Α			Α		
	Radiated emissions	EN55022		Α			Α			Α		
V <sub>i p</sub>	Input overvoltage protection <sup>4</sup>			264			264			264		VAC
V <sub>i L</sub>	Input undervoltage lockout			65			65			65		

### Table 2b: Input data of UT models

Input				UT12xx			Unit		
Chara	cteristic	Conditions	min	min typ max			typ	max	
Vi	Operating input voltage range with full output power	47 – 63 Hz <sup>2</sup>	95		140	95		140	VAC
V <sub>i red</sub>	Operating input voltage range with reduced output power <sup>1</sup>		70		95	70		100	
V <sub>i</sub> (V <sub>i no</sub>	nm) Rated (nominal) input voltage	50 – 60 Hz <sup>2</sup>	100	(110)	125	100	(110)	125	
I <sub>i nom</sub>	Nominal input current	V <sub>i nom</sub> , P <sub>o nom</sub>		3.8			5.2		Α
I <sub>i L</sub>	Input current limit			5			6		
<b>P</b> i 0	No-load input power	$V_{i \min} - V_{i \max}, I_o = 0$		6			8		W
P <sub>i inh</sub>	Input power when inhibited	$V_{i \min} - V_{i \max}$ , inhibit = low		3			3		1
PF	Power factor	V <sub>i nom</sub> , I <sub>o nom</sub>	98			98			%
Ci	Input capacitance 3			4			4		μF
<i>t</i> <sub>on</sub>	Switch on delay	V <sub>i nom</sub> , P <sub>o nom</sub>		400			400		ms
	Conducted emissions	V <sub>i nom</sub> , V <sub>o nom</sub> , I <sub>o nom</sub>		Α			Α		
	Radiated emissions	EN55022		Α			Α		1
V <sub>i p</sub>	Input overvoltage protection <sup>4</sup>			165			165		VAC
V <sub>i L</sub>	Input undervoltage lockout			65			65		

<sup>&</sup>lt;sup>1</sup> See Output Power Limitation

<sup>&</sup>lt;sup>4</sup> In the case of an overvoltage, the converter switches temporarily off, resulting in reduced output power.



<sup>&</sup>lt;sup>2</sup> Contact Power-One for operation with other input frequencies or different waveforms!

<sup>&</sup>lt;sup>3</sup> Inrush current stays factor 10 below ETS 300132-1.



### **Input Fuse**

An input fuse (5  $\times$  20 mm) in series with the input line (L) inside the converter protects against severe defects; see also Safety and Installation Instructions. For applications with accessible fuse, see Option F.

Table 3: Fuse Type

Series	Schurter type	Part number		
LT	SPF 6.3 A, 250 V	0001.1012		
UT	SPT 10 A, 250 V	0001.2514		

#### **Inrush Current**

The converters exhibit an input capacitance of only 4  $\mu$ F, resulting in a low and short peak current, when the converter is connected to the mains. During switch-on, the converter current can rise up to the input current limit  $I_{i \perp}$ .

As a direct result of the low and short inrush current and controlled charging procedure of the output capacitors, the converter can be hot swapped. The LT inrush current is a factor 10 smaller than defined in the ETS 300132-1 standard for Telecom systems. However the converter should be plugged-in smoothly, giving time to the output capacitors to be charged.

### Input Under-/Overvoltage Lockout

If the specified input voltage range  $V_i$  is exceeded, the converter stops operation temporarily resulting in reduced output power and increased RFI. The input is protected by varistors. Continuous overvoltage will destroy the converter.

If the sinusoidal input voltage stays below the input undervoltage lockout threshold  $V_i$ , the converter will be inhibited.

### **Power Factor, Harmonics**

Power factor correction PFC is achieved by controlling the input current waveform synchronously with the input voltage.

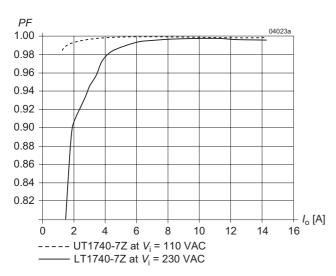


Fig. 2 Power factor

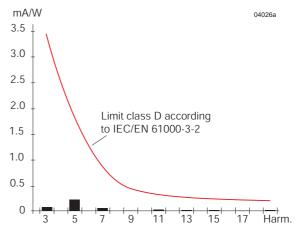


Fig. 3 Harmonic distortion at input LT1740-7Z,  $V_i = V_{inom}$ ,  $I_o = I_{o nom}$ 

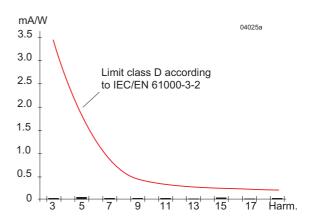


Fig. 4
Harmonic distortion at input UT1740-7Z,  $V_i = V_{inom}$ ,  $I_o = I_{o nom}$ 

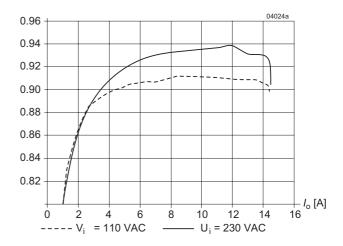


Fig. 5 Efficiency versus load of LT1701





PFC is active in all operating conditions (voltage regulation, output power limitation, current limitation).

The power factor control also works with different input voltage waveforms and frequencies. For special applications with different frequencies or non-sinusoidal waveforms, please contact Power-One.

### **Efficiency**

The extremely high efficiency (see fig. 5) is achieved by using a single-step power factor corrected topology together with the most advanced technology in power conversion. It allows a very compact design in a fully enclosed case without forced cooling.

### **Electrical Output Data**

General conditions:

- $T_A = 20$  °C, unless specified.
- $V_i = V_{i \text{ nom}}, f_i = 50 \text{ Hz}$

Table 4: Output data of rectifier versions

Output				LT/	UT12	01	LT	/UT17	'01	L	T170	2	Unit
Charac	teristic		Conditions	min	typ	max	min	typ	max	min	typ	max	
V <sub>o set</sub>	Output voltage adjustment		V <sub>i nom</sub>		24.25	j		54.5			48.0		V
V <sub>o set tol</sub>	V₀ setting tolerance		$I_{\rm o} = 0.5 \cdot I_{\rm o nom}$	24.0		24.5	54.25		54.75	47.75		48.25	
Vo	Output voltage over input vo	oltage and load <sup>1</sup>	$V_{i  min} - V_{i  max},$ (0.01 - 1) • $I_{o  nom}$	23.35		24.95	52.8		55.8	46.3		49.3	
V <sub>oL</sub>	Overvoltage protection by se	econd control loop				32.5			59.3			59.3	
$\alpha_{Vo}$	Temperature coefficient of o	output voltage			-5			-5			-5		mV/K
I <sub>o nom</sub>	Nominal output current				16			10			11		Α
I <sub>o L</sub>	Current limit <sup>2</sup>		V <sub>o</sub> = 20 V		184			14.5			14.5		
PoL	Output power limit <sup>2</sup>		V <sub>i nom</sub>		400			550			550		W
v <sub>o</sub>	Output voltage noise	Low frequency	I <sub>o nom</sub> IEC/EN 61204		850			1000			1000		mV <sub>pp</sub>
		Switching freq.		IEC/EN 61204 BW = 20 MHz		40			40			40	
		Total	DVV - 20 WII IZ		900			1000			1100		
$\Delta V_{\text{ol}}$	Static load regulation (droop	D) <sup>1</sup>	(0.01 – 1) • I <sub>o nom</sub>		-0.6			-1.2			-1.2		V
ΔV <sub>o V</sub>	Static line regulation		$V_{\text{i min}} - V_{\text{i max}},$ $I_{\text{o nom}}$			0.3			0.8			0.8	
V <sub>od</sub>	Dynamic load regulation <sup>3</sup>	Voltage deviation	V <sub>i nom</sub>		1.7			2.2			2.2		
t <sub>d</sub>		Recovery time	$0.1 \cdot I_{\text{o nom}} \leftrightarrow I_{\text{o nom}}$ IEC/EN 61204 <sup>5</sup>		0.25			0.25			0.25		s
Co	Internal output capacitance				86			41			41		mF

- <sup>1</sup> Output voltage decreases with rising output current due to the droop characteristic to ease current sharing; see fig. 7.
- <sup>2</sup> Due to the large output capacitance, the maximum transient value can be much higher.
- 3 Deviation limited by output overvoltage protection
- <sup>4</sup> No power limitation, but current limitation
- <sup>5</sup> See fig. Dynamic load regulation.





### General conditions:

- $T_A$  = 20 °C, unless specified.
- $V_i = V_{i \text{ nom}}, f_i = 50 \text{ Hz}$

Table 5: Output data of battery charger versions

Output				LT/U	T1240	)-7Z	LT/U	IT174	0-7Z	LT	1840-	7 <b>Z</b>	Unit
Charac	teristic		Conditions	min	typ	max	min	typ	max	min	typ	max	
V <sub>o set</sub>	Output voltage adjustment 6	5	V <sub>i nom</sub>		27.25			54.5			40.88		V
V <sub>o set tol</sub>	V <sub>o</sub> setting tolerance <sup>4</sup>		$I_0 = 0.5 \cdot I_{\text{o nom}}$	27.2		27.3	54.45		54.55	40.83		40.93	
Vo	Output voltage range <sup>1</sup>			25.25		28.25	50.5		56.5	37.9		42.4	
Vo	Output voltage over input			26.8		27.6	53.8		55	40.3		41.3	
	voltage and load 1	UT	(0.01 – 1) • I <sub>o nom</sub>	26.9		27.6	53.8		56.6				
V <sub>o L</sub>	Overvoltage protection by s	econd control loop				32.5			59.3			48.4	
$\alpha_{Vo}$	Temperature coefficient of	output voltage			-3			-3			-3		mV/K
I <sub>o nom</sub>	Nominal output current				14.5			10			11		Α
I <sub>o L</sub>	Current limit <sup>2</sup>	Current limit <sup>2</sup>			20			14.5			16		
PoL	Output power limit <sup>2</sup>		V <sub>i nom</sub>		400			550			450		W
V <sub>0</sub>	Output voltage noise	Low frequency	I <sub>o nom</sub>		700			1000			850		mV <sub>pp</sub>
		Switching freq.	IEC/EN 61204 BW = 20 MHz		40			40			40		
		Total	20 11112		750			1000			900		-
ΔV <sub>ol</sub>	Static load regulation (droo	p) <sup>1</sup>	(0.01 – 1) • I <sub>o nom</sub>		-0.4			-0.6			-0.6		V
ΔV <sub>o V</sub>	Static line regulation <sup>1</sup>		$V_{i \min} - V_{i \max},$ $I_{o \text{ nom}}$			0.2			0.35			0.25	
V <sub>o d</sub>	Dynamic load regulation <sup>3</sup>	Voltage deviation	V <sub>i nom</sub>		1.6			2.0			2.5		
t <sub>d</sub>		Recovery time	$0.1 \cdot I_{\text{o nom}} \leftrightarrow I_{\text{o nom}}$ IEC/EN 61204 <sup>5</sup>		0.2			0.2			0.2		s
Co	Internal output capacitance				86			41			49		mF

- $^{1}$   $V_{o}$  decreases with rising output current due to the droop characteristic to ease current sharing; see fig. 8.
- <sup>2</sup> Due to the large output capacitance, the maximum transient value can be much higher.
- <sup>3</sup> Deviation limited by output overvoltage protection
- <sup>4</sup> Defined by temperature sensor, by remote control, and by voltage selector switch
- <sup>5</sup> See fig. Dynamic load regulation.
- <sup>6</sup> Output voltage adjustment with  $V_{cr} = 9.5 \text{ V}$  (2.27 V/cell)

### **Output Characteristic**

The models T1701/1702 and the battery chargers T1240/1740/1840 can be operated in 3 different modes:

- Output voltage regulation
- Output power limitation
- Output current limitation.

**Caution:** In output power or current limitation mode, the max. ambient temperature  $T_{\rm A}$  should not exceed 65 °C with free air convection cooling.

The output of all models is fully protected against continuous short circuit. The maximum constant current is limited to  $I_{\rm 0\ L}$  (see table *Electrical output data*). As the LEDs indicating the system status are driven from the output voltage, all LEDs switch off in the case of a short circuit.

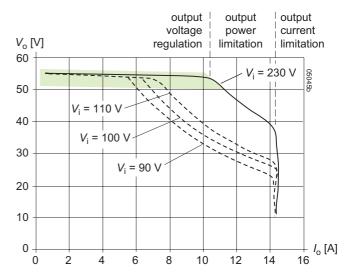


Fig. 6
Output characteristics LT1701-7 and LT1740-7Z





### **Output Overvoltage Protection**

A slight output voltage overshoot may occur at turn-on, inhibit release, or during fast load changes. A second, independent control loop interrupts the operation above  $V_{0\,L}$  and indicate it by the red warning LED. The output voltage remains below 60 V (SELV) under all operating conditions.

**Note:** There is no specific built-in protection against externally applied overvoltages or transients.

### **Output Voltage Regulation (Rectifier Version)**

The output voltage is adjusted to a fixed value  $V_{\rm o \, set}$ . It relates to the output current and the input voltage, which ensures current sharing without further precautions, when several converters are connected in parallel. Rising output current and falling input voltage lead to a decrease of the output voltage, according to the formula:

 $V_0 \approx V_{\text{o set tol}} + (0.5 - I_0/I_{\text{o nom}}) \cdot \Delta V_{\text{o I}} + (\Delta V_{\text{i}} - \Delta V_{\text{i nom}})/100 \text{ V} \cdot \Delta V_{\text{o V}}$ 

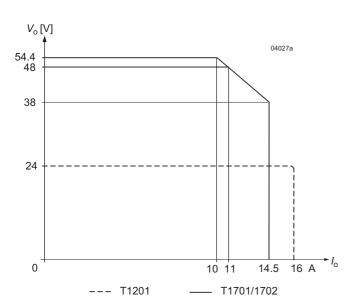


Fig. 7
Output characteristic of T1201 and T1701/1702 (typ.). The droop is shown in fig. 8.

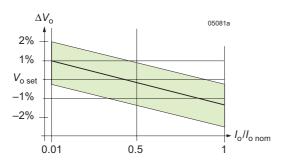


Fig. 8
Typical output droop (LT 1701)

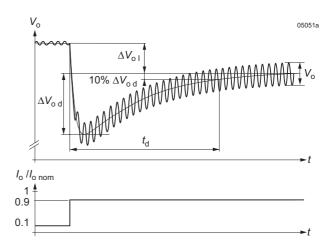


Fig. 9
Typ. dynamic characteristics (at load step)

### **Output Power Limitation (Rectifier Version)**

Especially for power systems with an output voltage of 48 V, the rectifier models T1701/1702 exhibit an output power limitation mode. The output power is kept constant down to an output voltage of approximately 38 V. This provides improved start-up capability of power systems including switched-mode power supplies connected to the output (e.g. 48Q Series). At maximum load there is no need for a special start-up procedure.

The maximum input current is limited to  $I_{\rm i}$  L. At lower input voltage  $V_{\rm i}$  red the maximum output power is limited to:

$$P_0 \approx \eta \cdot V_{\text{i red}} \cdot I_{\text{i L}}$$
 ( $\eta$  = efficiency approx. 90%)

T1201 models have no output power limitation mode.

#### **Pulse Loading (Rectifier Version)**

To prevent the output and filter capacitors from overload, the superimposed AC ripple current at the output should be limited as shown in the figure below. For high-current pulse loads, external capacitors are recommended.

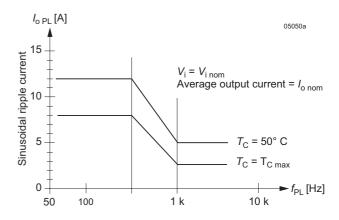


Fig. 10
Maximum AC ripple output current superimposed on the average output current I<sub>o nom</sub> for LT1701.





### **Output Voltage Regulation (Battery Charger)**

In normal operating mode (neither in power limitation nor in current limitation) the output is regulated by a voltage feedback loop. It is adjusted to  $V_{\rm 0~set}$  and can be set by the cell voltage selector switch to the appropriate float charge voltage of the battery.

A control input (pin 28) allows for adjustment of the output voltage either by a voltage source, a temperature sensor, or an external potential divider (see *External Output Voltage Control*). For fine tuning, the converter is fitted with a trim potentiometer accessible from the rear side.

The output voltage relates to the output current and the input

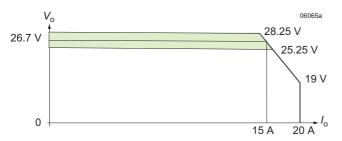


Fig. 11a Output characteristic of T1240 (typ.). The droop is shown in fig. 12.

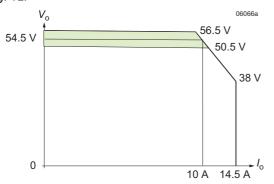


Fig. 11b
Output characteristic of T1740 (typ.). The droop is shown in fig. 12.

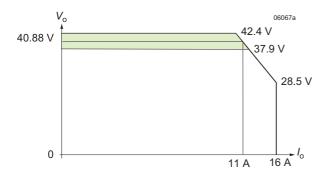


Fig. 11c Output characteristic of LT1840 (typ.). The droop is shown in fig. 12.

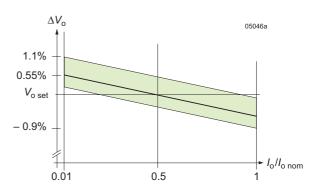


Fig. 12 Typical output droop T1240/1740/1840

voltage, which ensures current sharing without further precautions, when several converters are connected in parallel. An increase in output current and a decrease in input voltage decrease the output voltage, according to the formula:

 $V_{\text{o}} \approx V_{\text{o} \, \text{set tol}} + (0.5 - I_{\text{o}}/I_{\text{o} \, \text{nom}}) \cdot \Delta V_{\text{o} \, \text{l}} + (\Delta V_{\text{i}} - \Delta V_{\text{i} \, \text{nom}})/100 \, \text{V} \cdot \Delta V_{\text{o} \, \text{V}}$ The dynamic characteristic is shown in fig. 9.

### **Output Power Limitation (Battery Charger)**

All battery charger versions exhibit an output power limitation mode, where the output power is kept constant from 2.35 V/cell (for lead acid batteries) to 1.6 V/cell.

The maximum input current is limited to  $I_{i L}$ . At lower input voltage  $V_{i red}$ , the maximum output power is limited to:

$$P_0 \approx \eta \cdot V_{i \text{ red}} \cdot I_{i \text{ L}}$$
 ( $\eta$  = efficiency approx. 90%).

### Inhibit (Rectifier Version)

The rectifier version converters are equipped with a simple inhibit function (with no adjustment of  $V_{\text{o}}$ ). The converter is enabled by a logic high signal and disabled by a logic low signal. This input is TTL/CMOS compatible, a resistor <50  $\Omega$  disables the converter, a resistor >30  $k\Omega$  enables it. The switch-on time  $t_{\rm r}$ , i.e., the time delay between powering until the full output power is available, is typically 100 ms.

The hold-up time at the output after inhibiting depends on the load, the internal and external capacitance at the output.

Note: The inhibit input is protected against overvoltage up to 60 V.

Table 6: Characteristics of the inhibit signal

Char	acteristics	Conditions	min	typ	max	Unit	
V <sub>inh</sub>	Inhibit voltage	V <sub>o</sub> = on	$V_{i \min} - V_{i \max}$ $T_{C \min} - T_{C \max}$	2.5		60	V
R <sub>inh</sub>	Resistance to Vo-	$V_{\rm o}$ = on		30			kΩ
V <sub>inh</sub>	Inhibit voltage	$V_{\rm o}$ = off		-0.7		0.4	٧
R <sub>inh</sub>	Resistance	$V_0 = off$				50	Ω
tr	Switch-on ti until full pov		V <sub>i nom</sub>		100		ms
P <sub>inh</sub>	Input power inhibited un				3		W





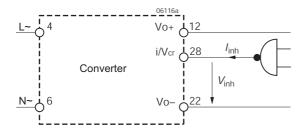


Fig. 13 Inhibit connection

### **Hold-Up Time**

The hold-up time depends upon the output voltage at the time of failure, the minimum acceptable output voltage, and the load according to the formula:

$$t_{\text{hold}} = \frac{V_0^2 - V_0^2_{\text{min v}}}{2 \cdot P_0} \cdot (C_0 + C_{\text{ext}})$$

where:

 $V_0$  = Output voltage at the moment of mains' failure

 $V_{\text{omin}\,\text{v}}$  = Minimum acceptable output voltage

 $P_0$  = Average output power during hold-up time

 $C_{\text{o}}$  = Internal output capacitance  $C_{\text{ext}}$  = External output capacitance

Examples of  $t_{hold}$  are given in the table below:

Table 7: Hold-up time thold for T1701

V <sub>o</sub> = 54 V		V <sub>o min v</sub>								
<i>P</i> <sub>o</sub> [W]	46 V	43 V	40 V	38 V						
100	164	219	270	302	ms					
200	82	109	135	151						
300	55	73	90	101						
400	41	55	67	75						
500	33	44	54	60						
550	30	40	49	55						

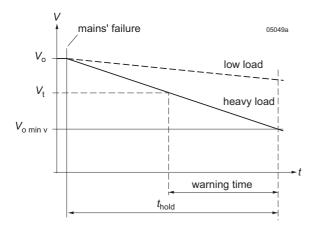


Fig. 14
Hold-up and warning time with Power Down output signal.

**Note:** The table *Hold-up time* also informs about the warning time of the Power Down signal. For example, if the threshold level  $V_t$  of the Power Down signal is set to 43 V and the minimum acceptable voltage of the load is 38 V, the time between the activation of the power-down signal and the switch-off of the load (550 W) will be 15 ms (= 55 ms - 40 ms).

### **Series and Parallel Connection**

The output of the T Series converters may either be connected in series or in parallel.

Connection in parallel: Current sharing between paralleled converters is ensured by the output droop (slope) characteristic.

**Note:** Several Txx40 battery chargers connected in parallel can be controlled by a single voltage source or a single sensor wired to the inputs i/Vcr.

Connection in series: A maximum of two T Series converters may be connected in series, however the resulting output voltage of up to 110 V would no longer be SELV.





### **Control Features of the Battery Chargers**

According to the recommendations of battery manufacturers, the float-charge voltage of lead-acid batteries should be temperature-compensated. Depending on the battery type and size, charging with different temperature coefficients may be required. An excessive float-charge voltage may damage the battery through overcharging.

Most lead-acid battery manufacturers recommend cell voltages between 2.23 V and 2.32 V, with the nominal cell voltage defined at 20  $^{\circ}$ C and temperature coefficients per cell between –3 and –4 mV/K.

The value of the negative temperature coefficient is specified by the type of T temperature sensor.

With the cell voltage selector switch Z, the required cell voltage can be adjusted at the rear of the converter, making the system flexible to different float-charge voltages. If the selector switch Z is not applicable, a cell voltage adjustment can also be provided by the temperature sensor; see *Temperature Sensor T*).

Although it is not recommended, the output voltage can be set to a fixed value without temperature compensation by an external voltage source or a resistive voltage divider at the remote control input, for instance if the battery temperature shall be controlled by other systems; see *External Output Voltage Control*.

### Cell Voltage Selector Switch Z

The battery chargers are equipped with the cell voltage selector switch at the rear side, which provides an easy way of external adjustment to the required float-charge voltage. Each switch position allows a step in the output voltage of 10 mV per cell, whereby the switch position "0" represents a cell voltage of 2.23 V at 20 °C; position "C" gives 2.35 V per cell.

The cell voltage selector switch fits together with the 2.23 V temperature sensor. The float-charge voltage is set by the switch, and the temperature coefficient is specified by the sensor type.

**Caution:** Setting the switch to the correct battery cell voltage is vital for the proper operation of a battery system.

**Note:** Switching to a different cell voltage while the battery charger is operating may cause a short distortion of the output voltage.

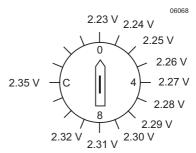


Fig. 15 Cell voltage selector switch

### **Potentiometer for Fine Tuning**

The battery chargers are equipped with a one-turn potentiometer for fine tuning of the output voltage to within  $\pm 3.7^{\circ}/_{\circ\circ}$  of  $V_{\circ}$ . The potentiometer is protected by a plastic cover. To adjust the output voltage for improved current sharing or compensation for voltage drops over the load lines, each battery charger in a system should be unplugged and adjusted individually to the same output voltage at equal load; otherwise current sharing may adversely be affected.

### **External Output Voltage Control**

The i/Vcr control input (pin 28) provides two functions:

- External adjustment of the output voltage
- Inhibiting of the converter.

A voltage <0.4 V inhibits the output, a voltage >2.5 V enables it.

With the i/Vcr input in the range of 5.5 V to 11.5 V, the output voltage  $V_{\rm o\ set}$  can be adjusted within a range of +3.6% to -7.9%. This feature is optimized to control the float-charge of a lead acid batteriy.

Outside of the control range, the sensor monitoring circuit generates a system error signal (see also *System Good*).

In the case of a excessively high control voltage, the output voltage is reduced.

The remote control input is protected against DC overvoltage up to 60 V.

**Note:** An open inhibit/Vcr remote control input leads to a sensor error signal which is indicated by the Error LED at the front and high impedance of the "System good" signal. The output voltage is reduced to  $V_{\rm cr}$  fail condition.

Table 8: Characteristics of the remote control


Char	acteristics	Conditions	LT/UT1240 typ	LT1840 typ	LT/UT1740	Unit
Vo	Output voltage at: V <sub>cr</sub> fail 2.5 – 5.5 V	Voltage selector switch Z set at 2.23 V/cell or	25.25	37.85	50.5	V
	V <sub>cr</sub> control 5.5 – 11.5 V	without selector switch Z selector switch Z	22.5 + V <sub>cr</sub> • 0.5	22.5 + V <sub>cr</sub> • 0.5	45 + V <sub>cr</sub>	
	V <sub>cr</sub> clamp 11.5 – 14 V	V <sub>i nom</sub> , 0.5 • I <sub>o nom</sub>	28.25	42.37	56.5	
	V <sub>cr</sub> fail 14 – 60 V		25.25	37.85	50.5	
Rcr	Input impedance		1	1	1	ΜΩ
$f_{ m cr}$	Frequency limit		1	1	1	Hz





Table 9: Characteristics of the inhibit signal

Chara	cteristics		Conditions	min	typ	max	Unit
$V_{inh}$	Inhibit voltage	V <sub>o</sub> = on	$V_{i min} - V_{i max}$	2.5		60	V
R <sub>inh</sub>	Resistance to Vo-	V <sub>o</sub> = on	T <sub>C min</sub> -T <sub>C max</sub>	30 k			Ω
$V_{inh}$	Inhibit voltage $V_o = off$			- 0.7		0.4	V
R <sub>inh</sub>	Resistance to Vo-	Resistance to Vo- VU <sub>o</sub> = off				50	Ω
t <sub>r</sub>	Switch on time until full power available		V <sub>i nom</sub>		100		ms
$P_{inh}$	Input power at inhibited converter	V <sub>i nom</sub>		3		W	

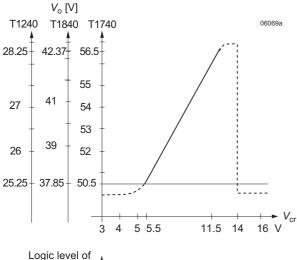




Fig. 16 Output voltage  $V_o$  versus control voltage  $V_{cr}$ , with the corresponding signal System Good

If the voltage selector switch Z is not set at 2.23 V per cell, the  $V_{\rm cr}$  fail voltage rises accordingly.

The inhibit input of battery charger models is not TTL/CMOS compatible and should be triggered by a switch, a relay, or an open-collector transistor.

### Control by external resistors

With a resistive potential divider or a potentiometer connected to the remote control input, a fixed output voltage can be programmed:

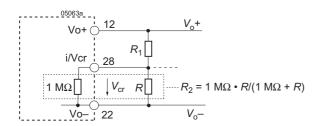


Fig. 17 Voltage setting by external resistors

$$V_{cr} = V_{o} - 45 \text{ V}$$

$$V_{cr} = {}^{4}/_{3} \cdot V_{o} - 33.7 \text{ V}$$

$$V_{cr} = 2 \cdot V_{o} - 45 \text{ V}$$

$$V_{cr} = \frac{V_{o} \cdot R_{2}}{(R_{1} + R_{2})}$$
(T1740)

 $R_2$ : Value with 1 MW internal resistance in parallel with R.

It is mandatory that:

$$\frac{(R_1 \cdot R_2)}{(R_1 + R_2)} > 35 \text{ k}\Omega$$

otherwise the converter might not be able to start.

### Control by an external voltage source




Fig. 18 Voltage setting by an external voltage source

### Control by the temperature sensor T

The temperature sensor provides a temperature-compensated charging process for lead-acid batteries; see *Accessories, Temperature Sensor T*.





### **Auxiliary Functions**

### **Available Signals and Status Monitoring**

The T Series exhibits an inhibit function as well as several voltage monitoring and indicating functions for easy control and surveillance of a complete customer-specific power supply system. All the surveillance functions are driven from the output. Consequently, it also operates, when the input voltage is off, down to an output voltage of 5 V. The power consumption of the surveillance circuit is typically 10 to 20 mA.

#### Available functions:

<ul><li>Power Down</li></ul>	D	pin 30
	D set	pin 32
<ul> <li>System Good</li> </ul>	Sys In	pin 24
	Sys Out	pin 26
<ul> <li>Inhibit/Vcr remote control</li> </ul>	i/Vcr	pin 28

The status is indicated by 3 LEDs on the front panel:

- System	(OK)	green
- V <sub>o</sub>	(OK)	greer
<ul><li>Error</li></ul>		red

Test sockets at the front panel allow easy measurement of  $V_0$ .

### **Power Down Function**

The power down circuitry monitors  $V_{\rm o}$  and changes the status of output D (pin 30) from low to high impedance, when  $V_{\rm o}$  falls below the low threshold level, and changes back to low impedance, when  $V_{\rm o}$  exceeds the upper threshold level.

The rectifier versions have a relatively small hysteresis of 1 V, the battery charger versions have a large hysteresis. The upper threshold level is given, but the low threshold level is externally adjustable at the D set pin 32. The Power Down signal D (pin 30) can for example be used as a save data signal, for low voltage warning, as a low-battery signal to avoid deep discharge of the battery, or to prevent connected converters from starting-up at a low bus voltage. For application examples, see figures below using the signal D.

As it is driven from the output, the power pown circuitry operates independently of the input voltage and the load conditions, even if the converter is inhibited.

The standard version monitors  $V_0$  internally; see fig. below.

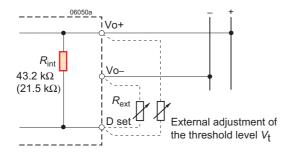


Fig. 20 Standard version; the power down circuitry monitors directly  $V_0$  via  $R_{\text{int}}$ .  $R_{\text{ext}}$  is not necessary.

With option D, the output voltage can be sensed externally, for example, to monitor the system bus decoupled from the power supplies by diodes or fuses. An external resistor of 43.2 k $\Omega$  1% (21.5 k $\Omega$  for T1840) must be fitted into the sense line to the bus; see fig. below.

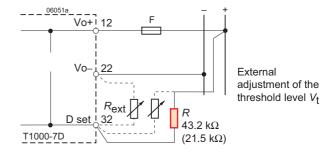


Fig. 21
Option D (D-set internally not connected); the power down circuitry monitors the power bus decoupled by the fuse F.

### Adjustment of the threshold level

With the resistor ( $R_{\rm ext}$ ) connected to D set (pin 32) and Vo– (or Vo+), the low threshold level can be increased (or decreased) respectively; see fig. 20 and 21.

If the D set input is left open-circuit, the low threshold level of the power down circuitry is factory-set to:

T12xx:	$V_{\text{t set}}$ = 21 V	±0.2 V
T17xx:	$V_{\text{t set}} = 42.5 \text{ V}$	±0.5 V
VT18xx:	$V_{\text{t set}}$ = 32 V	±0.4 V

The approximate resistor values for given threshold levels can be calculated from the table below:

Table 10: Calculation of Rext

Model	V <sub>t</sub> > V <sub>t set</sub> (R <sub>ext</sub> connected to Vo–)	V <sub>t</sub> < V <sub>t set</sub> (R <sub>ext</sub> connected to Vo+)
T12xx	$R_{\text{ext}}(V_{\text{t}}) = \frac{463.5}{V_{\text{t}} - 21.0} [\text{k}\Omega]$	$R_{\text{ext}}(V_{\text{t}}) = \frac{43.2 \ V_{\text{t}} - 463.5}{21.0 - V_{\text{t}}} \ [\text{k}\Omega]$
T17xx	$R_{\text{ext}}(V_{\text{t}}) = \frac{933}{V_{\text{t}} - 42.5} [\text{k}\Omega]$	$R_{\text{ext}}(V_{\text{t}}) = \frac{43.2 \ V_{\text{t}} - 933}{42.5 - V_{\text{t}}} \ [\text{k}\Omega]$
T18xx	$R_{\text{ext}}(V_{\text{t}}) = \frac{461}{V_{\text{t}} - 32} [\text{k}\Omega]$	$R_{\text{ext}}(V_{\text{t}}) = \frac{21.4V_{\text{t}} - 461}{32 - V_{\text{t}}} [k\Omega]$

The threshold level is adjusted for a DC output voltage. If in operation a sinusoidal low frequency output ripple is superimposed to the DC output voltage, it can be estimated with  $V_{\rm ov} = I_{\rm o}/(2 \cdot \pi \cdot f \cdot C_{\rm o})$ , where  $C_{\rm o}$  is the internal output capacitance.

Table 11: Typ. values for R<sub>ext</sub> for a given V<sub>t</sub> value for LT1740

Characteristics		Conditions	<b>V</b> <sub>t</sub>	Unit
$V_{t}$	Power down threshold	69 kΩ to Vo+	34.4	V
	level,	106 kΩ to Vo+	36.4	
	set by R <sub>ext</sub>	254 kΩ to Vo+	39.5	
		left open-circuit	42.5	
		309 kΩ to Vo-	45.5	
		154 kΩ to Vo–	48.5	
		102 kΩ to Vo–	51.6	





### Upper threshold level

The upper threshold level of the power down function is given.

The rectifier models have a relatively small hysteresis of 1 V to prevent the signal from oscillation.

The battery chargers have a larger hysteresis. The upper level is set at 2.05 V/cell.

To avoid deep discharge of the battery, the load should be disconnected from the battery at the low level of the power down signal. The battery voltage will then recover slowly up to its chemical equilibrium, about 2 V/cell. The load may not be connected again to the battery, until the T converter is operating and charging it. Then the output voltage will be higher than 2.05 V/cell.

High level of output signal D (pin 30):

LT/UT1240:	24.6 V	±0.3 V
LT/UT1840:	49.2 V	±0.5 V
LT/UT1740:	43.9 V	±0.4 V

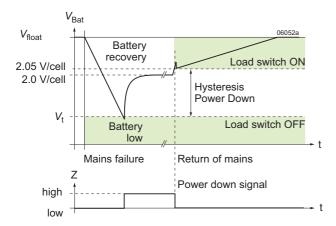


Fig. 22 Hysteresis of D output signal for battery chargers with corresponding level of Power Down signal

### Signal output characteristics


Output D (pin 30) is an open-collector signal, referenced to Vo-, protected by a 62 V Zener diode; it is well suited to drive an external relay.

Under normal operating conditions ( $V_0 > V_t$ ), output D has low impedance. If the output voltage drops below the power down threshold level, output D becomes high impedance.

Table 12: Characteristics of power down functions

Characteristics		Conditions	min	typ	max	Unit
$I_{D}$	Output sink current	$T_{\text{C min}} - T_{\text{C max}}$			50 <sup>1</sup>	mA
V <sub>sat</sub>	Saturation voltage	I <sub>D</sub> = 50 mA			0.2	V
$V_{z}$	Zener voltage			62		
$P_z$	Z-diode P <sub>Loss</sub>	T <sub>C</sub> = 95 °C			500	mW

<sup>&</sup>lt;sup>1</sup> To be limited to 50 mA by the external circuitry.

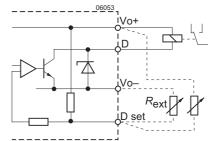

- External adjustment of threshold level V<sub>t</sub>
- Signal electrically isolated by an external relay

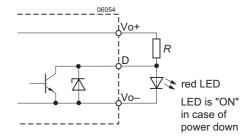


Fig. 24
Remote indication of signal D by LED

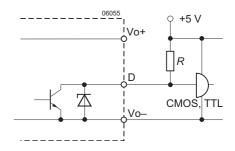


Fig. 25
Remote indication of the output voltage status (output D) by CMOS/TTL interface (e.g., for data saving)

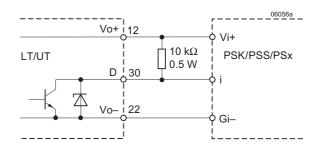


Fig. 26
Output D signal used as inhibit to enable a system start-up in the case of subsequently connected step-down converters PSK/PSS/PSx with low start-up voltage. (For 48Q/CQ units, no pull-up resistor is required.)





Table 13: Characteristics of System Good input and output

Chara	cteristics	Conditions	min	typ	max	Unit	
I <sub>Trig</sub>	Trigger level for logic	current-driven	$V_{\text{i min}} - V_{\text{i max}}$		100		μA
$V_{Trig}$	low input (= System OK)	nput (= System OK) voltage-driven	$T_{\text{C min}} - T_{\text{C max}}$	- 0.4		6.2	V
I <sub>Trig</sub>	Trigger level for logic	current-driven			0		А
$V_{Trig}$	high input (= System Failure)	voltage-driven			>7.5	60	V
I <sub>sys</sub>	Output sink current 1					50	mA
V <sub>sat</sub>	Saturation voltage		I <sub>Sys Out</sub> = 50 mA			0.2	V
Vz	Zener voltage protection diode				62		
Pz	Power disipation Zener diode		T <sub>C</sub> = 95 °C			500	mW

To be limited to 50 mA by the external circuitry.

### **System Good Function**

The Sys Out signal (pin 26) provides information about the general function of the converter. It can be used to monitor the status of a single T Series converter, or can be linked with other signals within a power system to drive one single-logic signal for the status of the whole system by connecting the output Sys Out of one converter to the input Sys In (pin 24) of the next one. Low voltage (impedance) of the input and output has the meaning of "system good". The first input of the system has to be connected to Vo—.

The signal Sys Out is activated (low impedance), if the following conditions are met:

No external fault

 the Sys In signal (pin 24) is logic low, AND:

No faults monitored by the T Series converter, such as:

- Input overvoltage
- Input undervoltage (mains failure)
- Output overvoltage
- Output short circuit
- Internal overtemperature
- Internal circuit fault.
- i/Vcr input error such as voltage < 2.5 V (rectifier type); control voltage out of range 5.3 V > V<sub>cr</sub> > 14 V (battery charger), or sensor not connected, open remote control input.

### Signal input

The input Sys In (pin 24) can be voltage- or current- driven. To trigger the internal comparator, the voltage at the Sys In pin has to be <6.2 V, if voltage-driven. If current-driven, the sink current to Vo— has to be >100  $\mu A.$  An easy way to drive this input is achieved by means of an open collector transistor, or a 10 V CMOS interface.

**Note:** If only the internal status of a T Series converter should be monitored, Sys In has to be connected to Vo–.

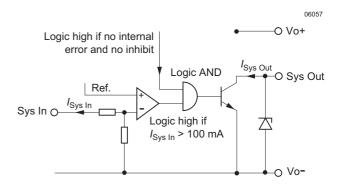


Fig. 27
Equivalent circuit of Sys In and Sys Out

### Signal output

The signal Sys Out (pin 26) has the meaning of "system good". It is built by an open collector transistor referenced to Vo–, protected by a 62 V Zener diode.

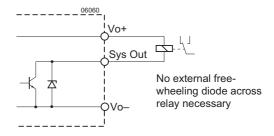



Fig. 28 System status signal electrically isolated by an external relay



### Series and Parallel Connection of Power Down and System Good

To achieve a logic-OR function of the signals Sys Out and D, connect the D output to Sys In. The desired function is then obtained from the Sys Out output. The output signal becomes high, if the output voltage is lower than the threshold of the power down circuit, inhibit is applied, or an internal error has occurred.

To achieve a logic AND function of the Sys Out and D, connect the D output with the Sys Out. This combination generates an output signal only in the case of severe system errors. Only a T system fault together with a simultaneous power down of the output voltage will cause this output signal to become high impedance.

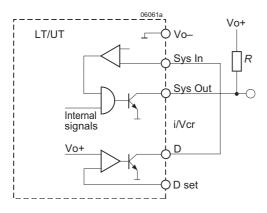

LT/UT

Sys In

R

Sys Out

Internal signals

O i/Vcr

Vo+

D

D set

Fig. 29 Sys out and D connected in series. The output signal will indicate an error at start-up.

Fig. 31
Sys out and D connected in parallel.

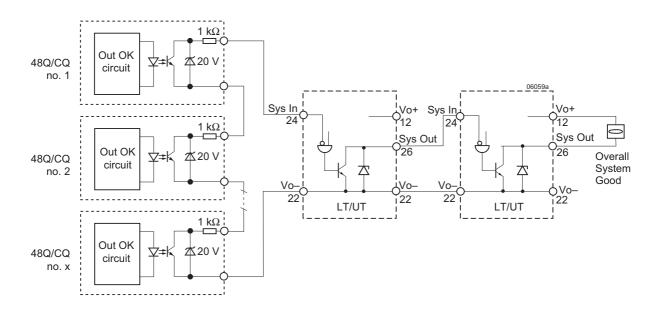


Fig. 30
Wired AND of isolated open collector signals (e.g. the OUT OK signal of 48/CQ units) with the Sys Out signals of T units in series to achieve one signal about the status of the whole system





Table 14: System monitoring.

Signal status and LED display status depending on the situation of the various system elements

Possible Situation		Open colle	ctor output		LED	
		System Good	Power Down	Sys OK	V₀ OK	Error
All OK		low	low	on	on	off
No mains and battery OK or no mains and $V_0 > V_t$	2	high	low	off	on	on
Unit inhibited and battery OK or unit inhibited and $V_{\rm o} > V_{\rm t}$	2					
Internal error	2					
Sys In input	3	high	low	off	on	off
No mains and battery low or no mains and $V_{\rm o} < V_{\rm t}$	2	high	high	off	off	on <sup>1</sup>
Short circuit on LT/UT output, $V_0 < 4 \text{ V}$		high	high	off	off	off
Current limit LT/UT output, $V_0 > 4$ V, $V_0 < V_t$	2	low	high	on	off	on
Battery chargers: sensor not connected or out of range		high	low	off	on	on

- <sup>1</sup> LED is on until the output capacitors are discharged.
- <sup>2</sup> Sys In connected to Vo-.
- <sup>3</sup> Sys In not connected to Vo– (single T status monitoring) or system status monitoring.

### **Display Status of LEDs**

#### **LED Sys OK**

A green LED corresponds to the signal System Good. It lights, if no internal or external error is detected.

### LED Vo OK

Another green LED indicates the output voltage status, corresponding to the signal Power Down. The LED lights, as long as  $V_{\rm o}$  exceeds the upper threshold level and has not fallen below the low threshold level  $V_{\rm t}$ .

### **LED Error**

This red LED lights, if one or more of the following conditions are detected:

- Input overvoltage
- Input undervoltage (mains failure)
- Output overvoltage
- Output short circuit
- Output voltage below threshold V<sub>t</sub>
- Internal overtemperature
- Internal circuit fault
- i/Vcr remote control input error, such as:
  - Inhibit voltage <2.5 V (rectifier models)
  - Remote control voltage V<sub>cr</sub> out of range 5.3 14 V (battery chargers)
  - Sensor not connected, open remote control input.





### **Different Configurations and Applications**

# Power Boosting, Redundant Configuration, Hot Swap

For redundant configurations the outputs should be decoupled by ORing diodes, protecting the DC-bus in case of an internal short circuit at the output of one converter.

Decoupling can also be done using appropriate fuses in the output path of each converter. If the battery voltage has to be monitored, choose option D.

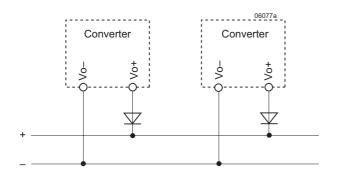


Fig. 32 Redundant configuration without battery back-up

ORing diodes provide reverse polarity protection with no reverse current in case of hot plug-in, but have the disadvantage of some forward voltage drop.

For battery applications, decoupling with fuses is recommended, since the voltage drop over the diodes would decrease the battery voltage. In case of an internal short circuit of a converter, the battery will deliver a very large current causing the respective fuse to blow. The fuse should be mounted in the positive power path of the converter, since the monitoring signals are referenced to the negative path. The fuse type should be suitable for DC application having a current rating of 20 A or more with high breaking capability, e.g., Littlefuse, series 314.

To enable hot plug-in in systems decoupled with fuses, the T Series converters are fitted with an NTC resistor, limiting the reverse current flowing into the discharged output capacitors (see *Functional Description*).

For this purpose HC+ (pin 16) and HC- (pin 18) have to be connected to Vo+ and Vo- respectively; see fig. 33. Since pins 16 and 18 are leading pins, the output capacitors are precharged through the internal NTC resistor, before any other pin makes contact. This protects the connector and prevents the DC bus voltage from dropping during hot plug-in. Hot swap should be done gently. Subsequent hot-swap actions should be avoided. After disconnecting an operating converter, it should be cooled down prior to reconnecting to the bus to avoid damage of the fuse or the converter.

Note: The internal NTC limits the reverse charge current flowing into the output capacitors, when the converter is plugged into a

battery-buffered bus. Should however the converter already be connected, when the battery is switched to the bus, the resulting charge current will not be limited. To avoid having the fuse blow or a possible arc across the circuit breaker, the battery charger

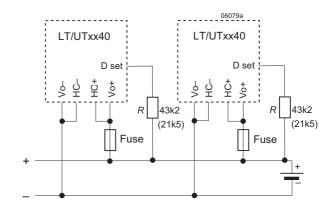


Fig. 33 T xx40 with battery back-up. Power Down signal monitoring the battery voltage.

should be powered by the mains prior to connecting the battery. With ORing diodes, no reverse charge current flows from the power bus into the output capacitors.

### **Battery Size and Ripple Current**

Some consideration should be given to the battery size. According to VDE 0510 part 2, the low frequency ripple current of the floating charge current should not exceed 5 A per 100 Ah capacity (0.05 C). The power factor corrected single step conversion of the line input voltage to the low DC output voltage generates a ripple voltage at the output of twice the input frequency, causing a ripple current into the connected battery.

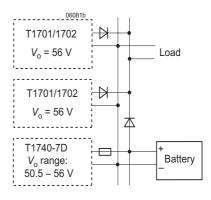


Fig. 34
Configuration for a larger system with only a small battery





For systems, where only a small battery back-up time is required, battery charging by one T unit may be sufficient; see also fig. below.

**Caution:** Lead-acid batteries can generate certain amounts of  $H_2$  and  $O_2$  gas, which can form explosive gas mixtures. Sufficient ventilation must be provided in battery cabinets and installation rooms.

**Note:** Local regulations must be observed. Further information about designing battery systems is contained in VDE 0510, part 2.

#### **Combination with DC-DC Converters**

The T Series converters are designed to be operated with DC-DC converter loads. Particularily suitable are 48Q models, as they start working at approx. 38 V, thus avoiding high currents at ramp-up. But also other series may be used, for instance our CQ or P Series.

In a complete power system consisting of several T converters connected in parallel combined with 48Q/CQ units, it may be desirable to have one common signal indicating the status of the whole system.

The DC-DC converters provide a galvanically isolated signal Out OK. To obtain a logic AND, all Out OK signals should be connected in series; see fig. below:

If in a system with 2 redundant T Series converters Power Down is desired as one common signal, simply connect the D pins of the two T converters. Then, Power Down only becomes active, if both T converters fail, which would result in the bus voltage failing (see fig. below).

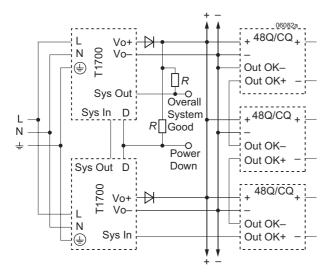


Fig. 35 Overall System Good and Power Down signal in a redundant system

### **Low-Battery Discharge Protection**

Since all monitoring functions are powered by the output of the T converter or the battery, in the case of a mains' failure, Power Down can be used to monitor the status of the battery and to disconnect the load or part of it via the inhibit of the connected DC/DC converters, when the battery voltage drops below the

threshold level of Power Down. This prevents further discharge of the battery.

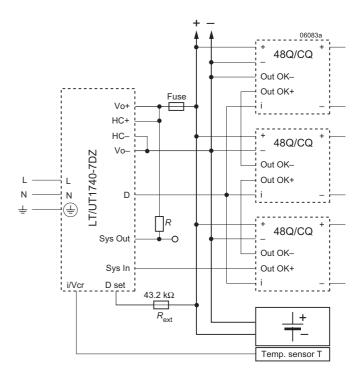


Fig. 36
Disconnecting the loads at low battery voltage in case of mains' failure

### Storing the System Good Signal

For battery back-up systems located in inaccessible areas it could be of interest to know, whether there has been a Power Fail (interruption of the mains). To obtain this information, Sys Out should be connected to Sys In with a reset button connected to Vo—. In this way a system failure like an interruption of the mains will be stored at Sys Out until, the reset button is pressed.

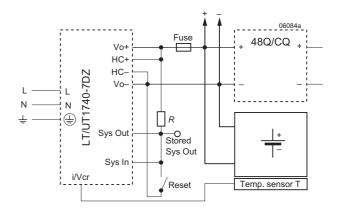
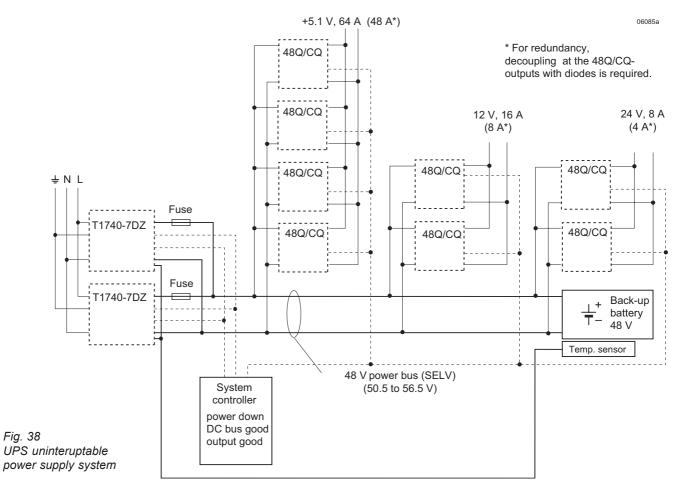


Fig. 37 Storing the System Good signal







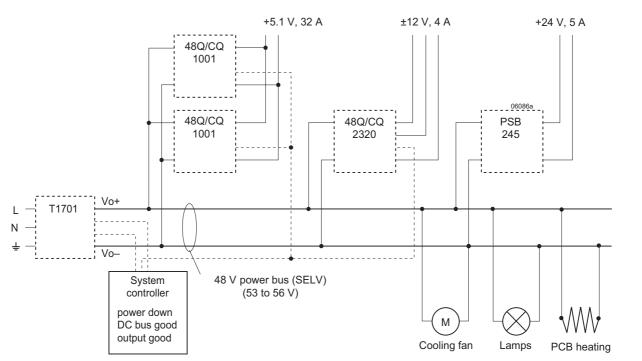


Fig. 39
Front end with various loads (example)



### **Electromagnetic Compatibility (EMC)**

A suppressor diode or a metal oxide VDR (depending on type) together with an input fuse and an input filter form an effective

protection against input transient voltages, which typically occur in most installations, but especially in battery-driven mobile applications. The T Series has been successfully tested to the following specifications:

### **Electromagnetic Immunity**

Table 15: Immunity type tests

Phenomenon	Standard	Level	Coupling mode <sup>1</sup>	Value applied	Waveform	Source imped.	Test procedure	In oper.	Perf. crit. <sup>2</sup>							
Electrostatic discharge (to case)	IEC/EN 61000-4-2	4	contact discharge air discharge	8000 V <sub>p</sub> 15000 V <sub>p</sub>	1/50 ns	330 Ω	10 positive and 10 negative discharges	yes	A							
Electromagnetic field	IEC/EN 61000-4-3	3	antenna	10 V/m	AM 80% 1 kHz	n.a.	26 – 1000 MHz	yes	А							
Electrical fast	IEC/EN	4	capacitive, o/c	2000 V <sub>p</sub>	bursts of 5/50 ns	50 Ω	60 s positive	yes	Α							
transient/burst	ent/burst 61000-4-4		direct, ±i/c, +i/–i	±4000 V <sub>p</sub> 15 ms; bu	V <sub>p</sub> 2.5/5 kHz over 15 ms; burst period: 300 ms	15 ms; burst	15 ms; burst	15 ms; burst	15 ms; burst	15 ms; burst	15 ms; burst	<sup>p</sup> 15 ms; burst		60 s negative transient per coupling mode		
Surge	IEC/EN	3	±i/c	±2000 V <sub>p</sub>	1.2/50 µs	12 Ω	5 pos. and 5 neg.	yes	В							
	61000-4-5		+i/—i			2 Ω	surges per coupling mode									
Conducted disturbances	IEC/EN 61000-4-6	3	i, o, signal wires	10 VAC (140 dBμV)	AM 80% 1 kHz	150 Ω	0.15 – 80 MHz	yes	А							

i = input, o = output, c = case.

### **Electromagnetic Emission**

The radiated noise in the frequency range of 30 MHz to 300 MHz on the input- and the output-side stays below class A according to EN 55022 measured with an antenna.

The radiated noise between 30 MHz and 1 GHz is reduced if the converter is built into a conductive 19" rack, fitted with a front panel. For converters mounted otherwise, e.g. wall-mounted with option B1 (base plate), the radiated noise may be above level A.

Table 16: Electromagnetic emissions

Phenomenon	Standards	Conditions	Results
Harmonics	EN 61000-3-2:2006	$V_i$ = 230 V, $V_{o \text{ nom}}$ , $I_{o \text{ nom}}$	Class A, D
Voltage fluctuation and flicker	EN 61000-3-3 + A2:2005	$V_{\rm i}$ = 230 V, $V_{\rm o \ nom}$ , $I_{\rm o \ nom}$	Complied

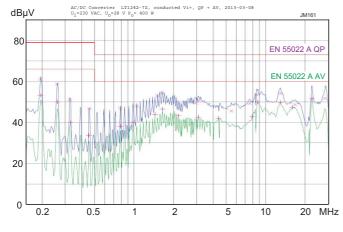


Fig. 40 Conducted emissions (quasi-peak, average) at the input, accord. EN 55022, LT1242 ( $V_i$  = 230 V,  $V_o$  = 28 V,  $P_o$  = 400 W)

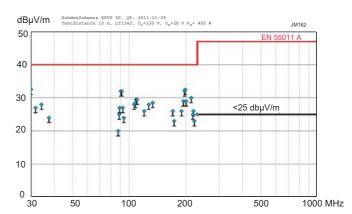


Fig. 41 Radiated emissions (quasi peak) accord. to EN 55022, distance 10 m, LT1242 ( $V_i$  = 230 V,  $V_o$  = 28 V,  $P_o$  = 400 W)



<sup>&</sup>lt;sup>2</sup> A = Normal performance, B = Temporary loss of function or degradation of performance, not requiring an operator.



# **Environmental Conditions**

Table 17: Mechanical and climatic stress

Test	method	Standard	Test conditions		Status
Cab	Damp heat steady state	IEC/EN 60068-2-78	Temperature: Relative humidity: Duration:	40±2°C 93 +2/-3 % 56 days	Unit not operating
Ea	Shock (half-sinusoidal)	IEC/EN 60068-2-27	Acceleration amplitude: Bump duration: Number of bumps:	100 g <sub>n</sub> = 981 m/s <sup>2</sup> 6 ms 18 (3 each direction)	Unit operating
Eb	Bump (half-sinusoidal)	IEC/EN 60068-2-29	Acceleration amplitude: Bump duration: Number of bumps:	$40 \text{ g}_n = 392 \text{ m/s}^2$ 6 ms 6000 (1000 in each direction)	Unit operating
Fc	Vibration (sinusoidal)	IEC/EN 60068-2-6	Acceleration amplitude:  Frequency (1 Oct/min): Test duration:	0.21 mm (10 – 60 Hz) 3 g <sub>n</sub> = 29.4 m/s <sup>2</sup> (60 – 2000 Hz) 10 – 2000 Hz 7.5 h (2.5 h each axis)	Unit operating
Fda	Random vibration wide band Reproducibility high	IEC/EN 60068-2-35 DIN 40046 part 23	Acceleration spectral density: Frequency band: Acceleration magnitude: Test duration:	0.05 g <sub>n rms</sub> 20 – 500 Hz 4.9 g <sub>n rms</sub> 3 h (1 h each axis)	Unit operating
Kb	Salt mist, cyclic (sodium chloride NaCl solution)	IEC/EN 60068-2-52	Concentration: Duration: Storage: Storage duration: Number of cycles:	5% (30 °C) 2 h per cycle 40 °C, 93% rel. humidity 22 h per cycle 3	Unit not operating

Table 18 Temperature specifications

				<b>-</b> 7		
Chara	cteristic	Conditions	min	typ	max	
T <sub>A</sub>	Ambient operational temperature range	$I_0 = 0 - I_{0 \text{ nom}}$	-25		71	°C
		$I_{\rm o} > I_{\rm o nom}$	-25		65	
T <sub>C</sub>	Case temperature range	$I_0 = 0 - I_{0 \text{ nom}}$	-25		95	
	at measurement point; see <i>Mechanical Data</i>	$I_{\rm o} > I_{\rm o \ nom}$	-25		90	
T <sub>S</sub>	Storage temperature range (not operating)		-40		100	
T <sub>Cs</sub>	Case temperature, when shut down				100	
R <sub>th CA</sub>	Thermal resistance case to ambient	convection cooling		0.5		K/W
t <sub>C</sub>	Thermal time constant of case			1		h

Table 19: Reliability

Values at specified case temperature	Model	Ground benign 40°C	Ground 40°C	d fixed 70°C	Ground mobile 50°C	Unit
MTBF <sup>1</sup>	LT1701-7	198 000	56 000	26 000	20 000	h
Device hours <sup>2</sup>			810	000		

<sup>&</sup>lt;sup>1</sup> Calculated in accordance with MIL-HDBK-217E (calculation accord. to edition F would show even better results)

<sup>&</sup>lt;sup>2</sup> Statistical values, based on an average of 4300 working hours per year and in general field use, over 3 years





#### **Thermal Considerations**

Even though the T Series converters have a very high efficiency, the operating losses will heat the case. The two heat sinks are designed to dissipate the power losses at maximum output power over the specified temperature range without forced cooling, if the convection cooling provides sufficient air volume, without any obstruction for vertical air exchange below and above the converter.

Due to the slightly higher power losses in output power and current limitation mode, the maximum admissible ambient and case temperature is then lower than in output voltage regulation mode.

A built-in sensor disables the output in case of overtemperature. The converter automatically recovers, when the temperature falls below the limit.

Derating is required for applications with higher operational ambient temperature. The fig. below shows the derating of the output power versus operational temperature above the ambient temperature of 71 °C of an LT17xx unit. Two different conditions are shown:

- a) Converter operating with convection cooling (solid line). For example if the operational ambient temperature reaches 80 °C, the output power should be limited to approx. 290 W. In this case steady operation in output power or current limitation mode is not possible.
- b) Converter operating with forced cooling (dotted line). Under these conditions, the case temperature  $T_{\rm C}$  is decisive. With sufficient cooling provided (air flow!), the converter still delivers 550 Watts in voltage regulation mode even at  $T_{\rm A}$  = 85 °C, provided that  $T_{\rm C} \leq$  95 °C ( $T_{\rm C}$  = measuring point of case temperature; see *Mechanical Data*). At  $T_{\rm C} \leq$  90 °C, steady operation in output power or current limitation mode is still possible. Nevertheless, it is not recommended to operate the converter continuously close to  $T_{\rm C\ max}$ , since lifetime will be affected.


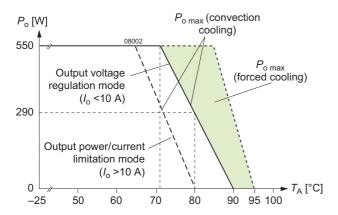


Fig. 42
Output power versus ambient temperature of T17xx

Since the operating temperature is of major importance to reliability, the following conditions should be observed:

- 1. Do not cover heat sinks.
- 2. Do not obstruct air flow around the heat sinks.
- 3. Maximize free space around the converter!
- 4. If the power supplies and the loads are located in the same enclosure, forced cooling is recommended. The T units should be placed on the bottom of the enclosure.
- 5. Always check the maximum ambient and case temperature after system integration.

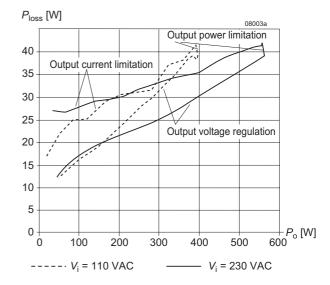


Internal power losses versus nominal output power (T17xx)





### **Mechanical Data**

Dimensions in mm. The converters are designed to be inserted into a 19" rack, 160 mm long, according to IEC 60297-3.

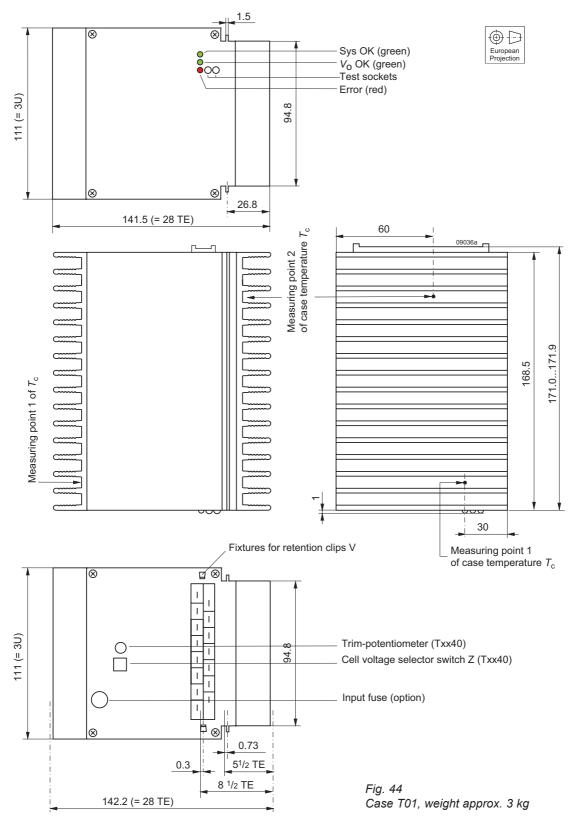



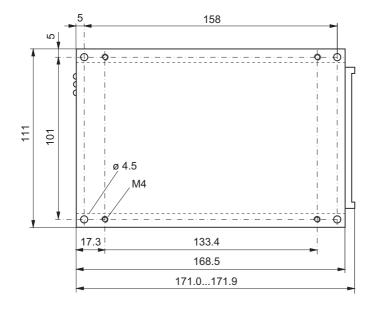

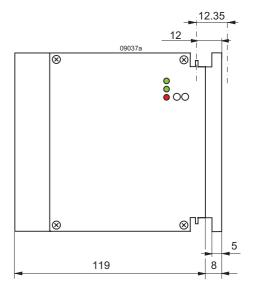

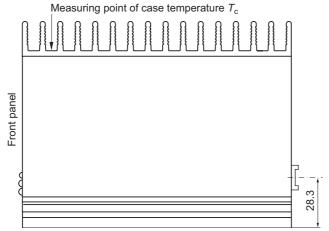




Fig. 45 Case T01 with option B1 (cooling plate)

# Safety and Installation Instructions

#### **Connector Pin Allocation**

The connector pin allocation table defines the electrical potentials and the physical pin positions at the H15 connector. Pin 8 and 10 (protective earth) are reliably connected to the case of the converter. They are leading pins, ensuring that they make contact with the female connector first.

Pin 16 (HC+) and pin 18 (HC-) are also leading pins to enable hot-swapping of the converter.

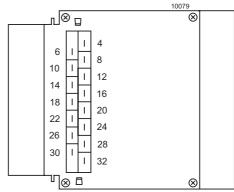


Fig. 46 H15 male connector





Table 20: Connector pin allocation

Pin	Electrical determination	Designation
4	Phase line input	L~
6	Neutral line input	N~
8 <sup>1</sup>	Protective earth PE 1	<b>(</b>
10 <sup>1</sup>	Protective earth PE 1	<b>(b)</b>
12	Output voltage positive	Vo+
14	Output voltage positive	Vo+
16 <sup>1</sup>	Hot plug-in contact positive	HC+
18 <sup>1</sup>	Hot plug-in contact negative	HC-
20	Output voltage negative	Vo-
22	Output voltage negative	Vo-
24	System Good signal input	Sys In
26	System Good signal output	Sys Out
28	Inhibit or remote control input	i/Vcr
30	Power Down signal	D
32	Power Down signal threshold of $V_{\rm o}$	D set

<sup>&</sup>lt;sup>1</sup> Leading pin (pre-connecting)

#### **Installation Instruction**

All T Series converters are components, intended exclusively for inclusion within other equipment by an industrial assembly operation or by professional installers. Installation must strictly follow the national safety regulations in compliance with the enclosure, mounting, creepage, clearance, casualty, markings, and segregation requirements of the end-use application.

Connection to the system shall be made via the female connector H15 (see *Accessories*). Other installation methods may not meet the safety requirements.

The converters are provided with pins 8 and 10 ( $\textcircled{\oplus}$ ), which are reliably connected to the case. For safety reasons it is essential to connect at least one of these pins reliably to the protective earth (PE) of the supply system.

Input L~ (pin 4) is internally fused. This fuse is designed to protect the converter in case of overcurrent and may not be able to satisfy all customer requirements. External fuses in the wiring to one or both inputs (pin 4 and/or pin 6) may therefore be necessary to ensure compliance with local requirements. A second fuse in the wiring to the neutral line N~ is needed, if:

- Local requirements demand an individual fuse in each source line
- Neutral to earth impedance is high or undefined
- Phase and neutral of the mains are not defined or cannot be assigned to the corresponding terminals (L~ to phase and N~ to neutral).

**Important:** Do not open the converter, or warranty will be invalidated.

**Caution:** Prior to handling, the converter must be disconnected from mains and from other sources (such as batteries).

Hazardous energy levels may be present at the output terminals for 3 minutes, even after the input voltage has been disconnected or switched off. This is indicated by the red error LED.

To prevent an unwanted short-circuit across the output of a disconnected converter, pins 16 and 18 are leading pins. In case of a short-circuit across the output of a T unit, all LEDs will be off, even though the mains may be present.

Due to high output current value, the T Series converters provide for each the positive and the negative output path two internally parallel connected contacts (pins 12/14 and pins 20/22). It is recommended to connect the load to both female connector pins of each path, in order to keep the voltage drop and power loss across the connector pins as small as possible.

If a T Series converter is used for battery charging, check whether the position of the cell voltage selector switch corresponds to the required battery cell voltage.

**Caution:** Lead-acid batteries can generate  $H_2$  and  $O_2$  gas, which can form explosive mixtures. Sufficient ventilation must be provided in battery cabinets and installation rooms.

Further information about designing battery systems is contained in VDE 0510, part 2.

If a T Series converters are connected in parallel, it is recommended to connect the two hot plug-in pins of each female connector, HC+ (pin 16) and HC- (pin 18), to their respective output pins Vo+ and Vo-.

Make sure that there is sufficient air flow available for convection cooling. This should be verified by measuring the case temperature, when the converter is installed and operated in the end-use application. The maximum specified case temperature  $T_{\rm C\ max}$  must not be exceeded. See also *Thermal Considerations*.

If the end-product is to be UL certified, the temperature test may be repeated as part of the end-product investigation.

Ensure that a converter failure (e.g., by an internal short-circuit) does not result in a hazardous condition. See also Safety of Operator-Accessible Output.

### **Protection Degree and Cleaning Agents**

If the female connector is fitted, the protection degree is IP30. Since the converters are not hermetically sealed, any penetration of cleaning fluids must be prevented.

### **Audible Noise**

Under certain operating conditions, a T Series converter may generate a slight audible noise due to magneto-striction in the transformer. This noise does neither affect the function of the converter, nor is it detrimental to its performance over time.

### **Standards and Approvals**

All T Series converters correspond to class I equipment. They comply with IEC/EN 60950-1, are CE-marked and safety-approved by CSA to UL/CSA 60950-1. They have been evaluated according for:





- · Building in
- Basic insulation between input and case, based on 250 VAC
- Double or reinforced insulation between input and output, based on 250 VAC
- · Operational insulation between output and case
- · The use in a pollution degree 2 environment
- Connecting the input to a primary circuit with a maximum transient rating of 2500 V (overvoltage class III based on a 110 VAC primary circuit, overvoltage class II based on a 230 VAC primary circuit).

Table 21: Isolation

The converters are subject to manufacturing surveillance in accordance with the above mentioned UL standards and with ISO9001:2000.

For details see the Declaration of Conformity.

#### Isolation

The electric strength test is performed in the factory as routine test in accordance with EN 50116 and IEC/EN 60950 and should not be repeated in the field. Power-One will not honor any warranty claims resulting from electric strength field tests.

Characteristic		Input to case and output	Output to case	Temp. Sensor T output to case	Unit
Electric	Factory test ≥1 s	2.81	1.4	1.4	kVDC
strength test	AC test voltage equivalent to factory test	2.0	1.0	1.0	kVAC
Insulation resistance at 500 VDC		>300	>300	>100	ΜΩ

According to EN 50116 and IEC/EN 60950-1, transformers and subassemblies connecting input to output are pretested with 5.6 kVDC or 4.0 kVAC.

### **Leakage Currents**

Leakage currents flow due to internal leakage capacitance and RFI suppression Y-capacitors. The current values are proportional to the input voltage and frequency. They are specified at maximum operating input voltage, where phase, neutral, and protective earth are correctly connected, as required for class I equipment.

Under test conditions, the leakage current flows through a measuring instrument (MI) as described in the fig. below, which takes into account impedance and sensitivity of a person touching unearthed accessible parts. The current value is calculated by dividing the measured voltage by  $500\ \Omega.$  If inputs and/or outputs of converters are connected in parallel, their individual leakage currents are added.

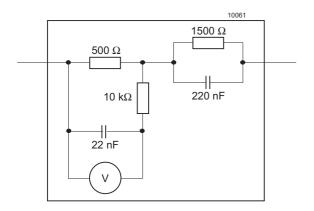


Fig. 47
Measuring instrument (MI) for earth leakage current test according to IEC/EN 60950, Annex D.

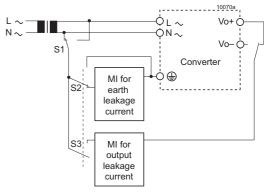


Fig. 48
Test set-up for leakage current in single phase configuration.
S1 is used to simulate the interchanging of phase and neutral. S2, S3 select either the earth or output leakage current test, S4 selects either the positive or negative output.

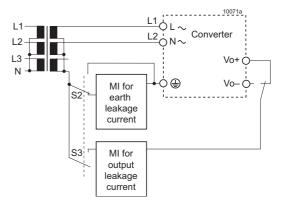


Fig. 49
Test set-up for leakage current in 208 V phase to phase configuration. S2, S3 select either the earth or output leakage current test, S4 selects either the positive or negative output.





Table 22: Leakage currents

Characteristic		LT/UT	Unit	
Earth leakage	Permissible according to IEC/EN 60950	3.5	mA	
current	Specified value at 255 V, 50 Hz (LT)	1.8 1		
	Specified value at 127 V, 60 Hz (LT or UT)	1.1 <sup>1</sup>		
Output leakage	Permissible according to IEC/EN 60950	0.25		
current	Specified value at 255 V, 50 Hz (LT)	<0.1		
	Specified value at 127 V, 60 Hz (LT or UT)	<0.1		

<sup>&</sup>lt;sup>1</sup> In phase to phase configuration, the leakage current is lower.

### Safety of Operator-Accessible Output Circuits

If the output circuit of a converter is operator-accessible, it shall be an SELV according to the safety standard IEC/EN 60950.

The following table shows a possible installation configuration, compliance with which causes the output circuit to be an SELV circuit up to a configured output voltage (sum of nominal voltages if in series or +/— configuration) of 56.5 V.

However, it is the sole responsibility of the installer to assure the compliance with the relevant and applicable safety regulations.




Fig. 50 Schematic safety concept

Table 23: Safety concept leading to an SELV circuit

Conditions	AC-DC converter	Installation	Result
Supply voltage	Grade of isolation between input and output, provided by the AC-DC converter	Measures to achieve the resulting safety status of the output circuit	Safety status of the AC-DC converter ouput circuit
Mains ≤250 VAC	Double or reinforced	Installation according to the applicable standards	SELV circuit

### **Description of Options**

### **D** Undervoltage Monitor

This option is designed for systems using backplanes or is intended for use in applications, where a fuse or a decoupling diode is fitted into the positive supply line to the system bus. The status of the system bus/battery voltage can be monitored rather than the output status of a single T unit. Input D set (pin 32) is not internally connected to Vo+ ( $R_{\rm int}$  is missing; see fig. 20).

To maintain the adjustment capabilities and resistor values for setting the different threshold values, a 43.2 k $\Omega$  (21.5 k $\Omega$ ) resistor should be fitted into the sense line to the bus. If D set (pin 32) is left open, output D (pin 30) is permanently signaling low bus voltage.

For details see also Auxiliary functions, Power Down.

### F Externally Accessible Fuse

The standard T converters have a non-accessible fuse,  $5\times 20$  mm. Some applications require an externally accessible fuse. Option F provides a fuse mounted on the rear side; see *Mechanical Data*.

#### **B1 Cooling Plate**

If a cooling surface is available, the converters can be provided with a mounting plate (option B1) instead of the standard heat sink on the right-hand side; see *Mechanical Data*.

Since approximately 50% of the losses have to be dissipated through the remaining heat sink on the left-hand side, sufficient free air flow must still be provided.





#### **Accessories**

A variety of electrical and mechanical accessories are available:

#### T Series Front Panels 28 TE

These front panels fit to all T Series converters (case size T01).

Table 24: T case front panel selection

Width		Case	Part no.	HZZ no.
TE	mm	size		
28	141.9	T01	G28-T01METSLEEVE	HZZ00890
28	141.9	T01	G28-T01	HZZ00837

Delivery content: G28-T01:

Front panel with 2 grey plastic handles, 3 countersunk screws, set of 4 plastic or metal retainers with captive screws, and assembly instructions.

G28-T01METSLEEVE [HZZ00890]: metal screw retainers; G28-T01 [HZZ00837]: plastic screw retainers.

Blind plates: To close a non fully equipped 19" DIN-rack (only one or two converters fitted), 28 TE wide blind plates without holes are available:

G28-T01-BLANKMET [HZZ00847]: metal screw retainers, G28-T01-BLANKPLAS [HZZ00848]: plastic screw retainers.

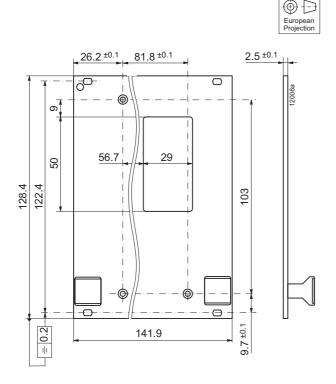


Fig. 51
Front panels for T Series (case T01)

Different female connectors are listed in the see **Mating Connectors Data Sheet**, BCD20022 posted to our web site:

- Female H15 connectors with screw, solder, faston, or pressfit terminals
- Code key system for connector coding
- Connector retention clips and brackets
- Different cable hoods.

Fig. 52 H15 female connector (with code system)



Rack Systems are described in our Cassette Rack Data Sheet:

 19" DIN-racks for system integration: MBQ02002 MBQ02020G (1 slot shielded)



 Backplanes for system integration matching to 19" DINrails: Series BPD, BPF.



Fig. 54
Backplane for system intergration

For additional information go to www.power-one.com.





### **Temperature Sensors T**

The T Series battery chargers exhibit a cell voltage selector switch Z to set the required floating charge voltage at 20  $^{\circ}$ C directly at the converter. If this Z switch is used, the 2.23 V/cell sensor types should be selected in any case as a basis, and the selection criteria are only the temperature coefficient and the nominal voltage of the battery. For example, if a 24 V battery is used, which has a cell voltage of 2.23 V and a cell temperature coefficient of -3.5 mV/K, the sensor type is S24-2.23-35-02. The setting on the Z switch should be 2.23.

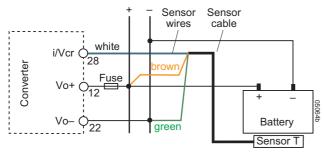


Fig. 55 Wiring diagram sensor

For T Series converters without Z selector switch, a sensor according to both criteria should be selected. In our example it should be S24-2.23-35-02.

The active temperature sensor T is of robust construction, mounted into a sealed aluminium tube of 12 mm outer diameter and 50 mm length. The sensors are waterproof (IP 66) and high-voltage tested with 1.4 kVDC. Connection should be done via the colored 3 wire cable to the output of the converter (Vo+ and Vo-) and the remote control input i/Vcr (pin 28).

Caution: Wrong connection may damage the sensor and the converter.

**Note:** Battery specific sensors with cell voltages from 2.23 V up to 2.32 V and temperature coefficients from -2 up to -4.5 mV/K per cell or different cable lengths are available upon request.

**Note:** For installation of batteries, see VDE 510 as well as the recommendations of the battery manufacturers.

Table 25: Type survey temperature sensors T

Nominal battery Sensor type voltage [V]		Cell voltage [V]	Temp. coefficient per cell [mV/K]	Cable length [m]	
24	S24-2.23-30-02	2.23	-3.0	2	
24	S24-2.23-35-02	2.23	-3.5	2	
24	S24-2.23-45-02	2.23	-4.5	2	
36	S36-2.23-30-02	2.23	-3.0	2	
36	S36-2.23-35-02	2.23	-3.5	2	
36	S36-2.27-35-02	2.27	-3.5	2	
48	S48-2.23-30-02	2.23	-3.0	2	
48	S48-2.23-35-02	2.23	-3.5	2	
48	S48-2.23-40-02	2.23	-4.0	2	
48	S48-2.23-45-02	2.23	-4.5	2	
48	S48-2.27-30-02	2.27	-3.0	2	
48	S48-2.27-35-02	2.27	-3.5	2	
48	S48-2.27-45-02	2.27	-4.5	2	

Table 26: Sensor data

Characteristics		Condition	min	typ	max	Unit
T <sub>sensor</sub>	Sensor temperature range	$V_{\rm cr}$ = 5.5 $-$ 11.5 V	-10		60	°C
V <sub>cr</sub>	Control voltage range	Absolute ratings	3.9		15	V
V <sub>cr td</sub>	Control voltage tolerance	T <sub>sensor</sub> = 20 °C			±0.1	
		$T_{\text{sensor}} = 0 - 53  ^{\circ}\text{C}$		±0.2		





If sensors are connected in parallel (redundant configuration), they should be decoupled by 200  $k\Omega$  resistors; see fig. below. An individual sensor for each parallel connected T converter is not recommended, because current sharing is affected by the sensor tolerance.

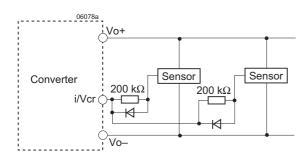


Fig. 58
Temperature sensor T with mounting fixture.

Fig. 56 Sensors connected in parallel.

Sensors in parallel provide redundant voltage adjustment in case of one of the sensors goes into an open-circuit or short-circuit condition (add. external components required)

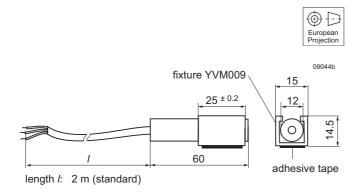


Fig. 57 Mechanical dimensions (in mm)

NUCLEAR AND MEDICAL APPLICATIONS - Power-One products are not designed, intended for use in, or authorized for use as critical components in life support systems, equipment used in hazardous environments, or nuclear control systems without the express written consent of the respective divisional president of Power-One, Inc.

TECHNICAL REVISIONS - The appearance of products, including safety agency certifications pictured on labels, may change depending on the date manufactured. Specifications are subject to change without notice.

