



Simplifying System Integration™

OMU1-S-RF Demo Unit User Manual

**February 18, 2010
Rev. 1.2
UM_6612_016**

© 2010 Teridian Semiconductor Corporation. All rights reserved.

Teridian Semiconductor Corporation is a registered trademark of Teridian Semiconductor Corporation.

Simplifying System Integration is a trademark of Teridian Semiconductor Corporation.

Microsoft, Windows, Vista, and Excel are registered trademarks of Microsoft Corporation.

CA51 is a trademark of Keil, An ARM® Company.

Signum Systems is a trademark of Signum Systems Corp.

LabVIEW, NI and NI-VISA are trademarks of National Instruments.

All other trademarks are the property of their respective owners.

Teridian Semiconductor Corporation makes no warranty for the use of its products, other than expressly contained in the Company's warranty detailed in the Teridian Semiconductor Corporation Standard Terms and Conditions. The company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice and does not make any commitment to update the information contained herein. Accordingly, the reader is cautioned to verify that this document is current by comparing it to the latest version on <http://www.teridian.com> or by checking with your sales representative.

Teridian Semiconductor Corp., 6440 Oak Canyon, Suite 100, Irvine, CA 92618
TEL (714) 508-8800, FAX (714) 508-8877, <http://www.teridian.com>

Table of Contents

1	Introduction.....	5
1.1	Package Contents.....	5
1.2	System Requirements.....	5
1.3	Safety and ESD Notes	6
1.4	Firmware Demo Code Introduction.....	6
1.5	Testing the Demo Unit Prior to Shipping.....	6
2	Installation	7
2.1	USB Driver Installation	7
2.2	Basic Connection Setup.....	8
2.2.1	Attaching the USB-OPTO Daughter Board to the OMU1-S-RF.....	9
2.2.2	Attaching the UART-ISO Daughter Board to the OMU1-S-RF	10
2.2.3	Attaching a Customer-Supplied COM Module to the OMU1-S-RF	11
2.3	Confirm COM Port Mapping	12
2.4	Verify Serial Connection to the PC	13
2.5	NITM RunTime Installation	15
2.6	Install LabWindowsTM XP Pro Update	18
3	Operating the Dashboard GUI.....	21
3.1	Port Selection	21
3.2	Creating a Measurement Data Log File	22
3.3	Selecting the Power Display Parameter.....	22
3.4	Selecting the Display Scales	23
3.5	Resetting the Min and Max Indicators to Their Current Values.....	23
3.6	Begin Tracking Minimum and Maximum Conditions.....	24
3.7	Selecting Outlet1	24
3.8	Selecting Wide Band or Narrow Band Measurement	25
3.9	Selecting the Sample Interval.....	25
3.10	Alarm Status	25
3.11	Neutral Voltage Alarm	26
3.12	Line Frequency	26
3.13	Accumulated Energy Usage and Expense Tracking	27
3.14	Displaying Narrowband and Wideband Values Simultaneously.....	27
3.15	Using the Parameter Graph	28
3.16	Setting Alarm Status Thresholds	28
3.17	Relay Configuration Controls.....	29
3.18	Log File Import to Excel	30
4	Schematics, Bill of Materials and PCB Layouts	33
4.1	OMU1-S-RF Demo Board Schematics	33
4.2	OMU1-S-RF Demo Board Bill of Materials.....	35
4.3	OMU1-S-RF Board PCB Layouts	37
4.4	USB Daughter Board Schematic	39
4.5	UART-ISO Daughter Board Schematic.....	40
5	Ordering Information	41
6	Included Documentation	41
7	Contact Information.....	41
	Revision History	41

Figures

Figure 1: OMU1-S-RF Application Diagram.....	8
Figure 2: HyperTerminal Window with the Disconnect Button.....	14
Figure 3: OMU1-S-RF Demo Board Electrical Schematic (1 of 2).....	33
Figure 4: OMU1-S-RF Demo Board Electrical Schematic (2 of 2).....	34
Figure 5: 78M6612 Evaluation Board PCB Top View.....	37
Figure 6: 78M6612 Evaluation Board PCB Bottom View.....	37
Figure 7: 78M6612 Evaluation Board Copper Top View	38
Figure 8: 78M6612 Evaluation Board Copper Bottom View	38
Figure 9: USB Daughter Board Electrical Schematic.....	39
Figure 10: UART-ISO Daughter Board Electrical Schematic.....	40

Tables

Table 1: COM Port Setup Parameters.....	13
Table 2: OMU1-S-RF Demo Board Bill of Materials	35

1 Introduction

The Teridian Outlet Measurement Unit, Model OMU1-S-RF, is a low-cost power monitor utilizing the Teridian 78M6612 SOC. The Teridian 78M6612 monitors the AC line voltages and load current, and controls switching of an internal load relay. The embedded firmware calculates the RMS line voltage and RMS load current, watts, VA, VAR and power factor. The real time data is transmitted to a PC for display in a Windows® based Graphical User Interface (GUI). The 78M6612's UART interface is used as the communications link to a customer supplied RF module for the OMU1-S-RF.

The OMU1-S-RF evaluation kit is intended to be used for development and integration of a separate communications interface. Included with the OMU1-S-RF is a pair of isolated daughter boards and a Windows® based Graphical User Interface (GUI) for simplified access to the following measurement data and controls:

- Power, current, voltage and power factor indicator dials
- Adjustable display scales
- Minimum and peak parameter tracking
- Selectable strip chart display format
- Narrow-band versus Wide-band measurement
- Selectable sample size averaging
- Accumulated energy usage and expense tracking
- Line frequency
- Alarm indicators
- Programmable Alarm thresholds
- Internal load relay (16A) control
- Data log to file

Alternatively, the user can directly query the device with the command set using HyperTerminal and the provided *6612_OMU_S2_URT_V1_13 Firmware Description Document*.

1.1 Package Contents

The OMU1-S-RF Demo Kit includes:

- OMU1-S-RF module
- USB A/B cable
- USB-OPTO Daughter Board
- UART-ISO Daughter Board
- CD with Software and Documentation

1.2 System Requirements

The OMU1-S-RF GUI requires use of a PC with the following features:

- PC (1 GHz, 1 GB) with Microsoft® Windows XP or Win2000, equipped with USB port.
- Minimum 1024 x 768 video display resolution.

1.3 Safety and ESD Notes



EXERCISE CAUTION WHEN LIVE AC VOLTAGES ARE PRESENT!



Standard ESD precautions must be taken when handling electronic equipment. The OMU1-S-RF contains ESD protected interfaces.

Do not connect test equipment, ICE emulators or external development boards directly to the OMU-RF hardware. Damage to the OMU1-S-RF and external equipment will occur due to the 78M6612's "high side" reference topology. The 78M6612's V3P3 (i.e. "high side") is connected directly to Neutral (Earth Ground) creating a ground reference disparity with any properly grounded external equipment.

Always use the provided UART-ISO daughter board for connecting external development boards. Contact Teridian for instructions on connecting other types of test equipment.

1.4 Firmware Demo Code Introduction

The Firmware Demo Code provides the following features:

- Basic energy measurement data such as Watts, Volts, current, VAR, VA, phase angle, power factor, accumulated energy, frequency, date/time, and various alarm statuses.
- Control of alarm thresholds, calibration coefficients, temperature compensation, etc.

There are two means to facilitate performance evaluation between the user at the PC host and the firmware code in the OMU1-S-RF Demo Unit:

- The Graphical User Interface (GUI). This document describes the installation and use of the Windows based GUI.
- The Command Line Interface (CLI) via HyperTerminal or comparable terminal emulator on a different operating system. For information about the CLI, see the *6612_OMU_S2_UTR_V1_13 Firmware Description Document*.

The OMU1-S-RF Demo Unit is shipped with Demo Code Revision 1.13 or later loaded in the 78M6612 chip and included on the CD. The code revision can be verified by entering the command **>i** via the command line interface. Firmware for the Demo Unit can be updated using either the Teridian TFP1 or an in-circuit emulator such as the Signum Systems™ ADM-51 (<http://www.signum.com/Signum.htm>).

The board components and firmware settings are designed to operate with the following nominal AC electrical ranges:

Voltage	Current	Line Frequency
110-240 VAC	10 mA – 20A	46-64 Hz

1.5 Testing the Demo Unit Prior to Shipping

Before every OMU1-S-RF Demo Unit is shipped, the following procedures have been performed at the factory:


- Full Calibration – Precise energy source equipment is used to calibrate the current and voltage. The temperature is also calibrated at the same time.
- Accuracy Test – This "bench" level test ensures the energy measurement accuracy is within +/-0.5%.

2 Installation

2.1 USB Driver Installation

This evaluation kit includes an optically isolated USB adaptor board for serial communications with a PC. The FTDI USB controller IC FT232RL performs the USB functions. The FTDI Windows driver presents a virtual COM port for enabling serial communications. Control of the OMU1-S-RF module can be managed using either a terminal emulation program or using the supplied Windows Dashboard GUI. The FTDI Windows driver is a certified driver for Windows 2000 and XP.

1. Upon attaching the OMU1-S-RF module to the PC, the Found New Hardware Wizard automatically launches and installs the appropriate driver files. If your PC does not find the FTDI driver files on its local hard disk drive, locate and reference the FTDI USB Driver and Utilities subdirectory on the CD. The FT232RL controller is powered from the USB cable and is active even when no AC power is applied to the OMU1-S-RF.

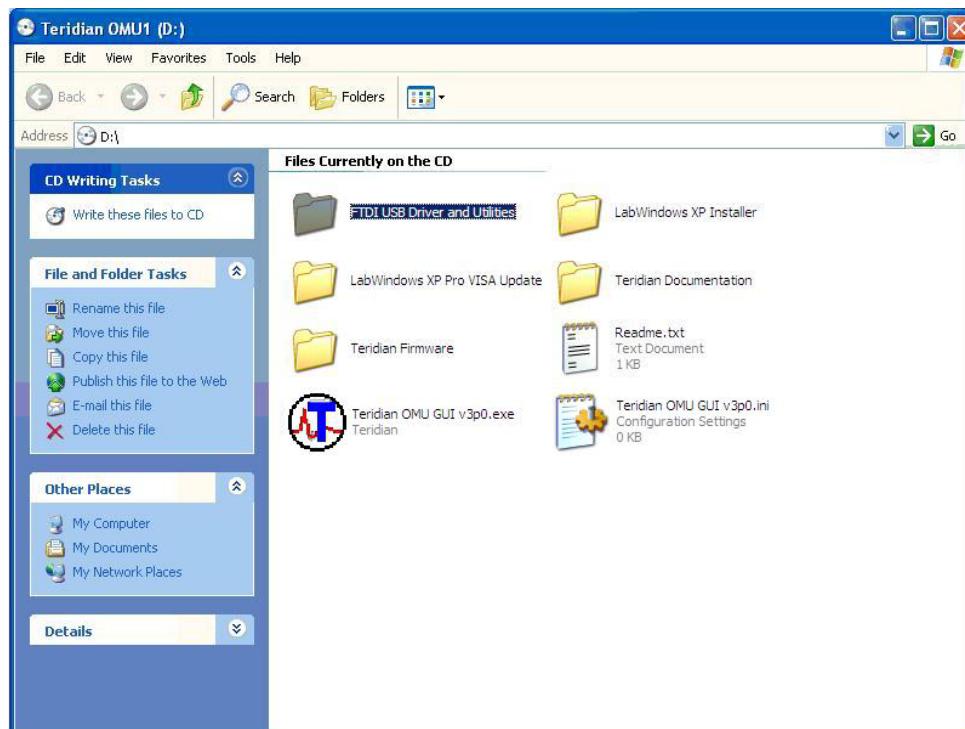

Notes: If an older FTDI driver has been previously installed, it is recommended to remove the older version before installing this newer FTDI driver. Execute the **ftdiClean.exe** utility from the FTDI USB Driver and Utilities subdirectory.

For FTDI driver support on other operating systems, please check FTDI's website at (<http://www.ftdichip.com/FTDrivers.htm>).

2.2 Basic Connection Setup

Figure 1 shows the basic connections of the OMU1-S-RF with the external equipment. The OMU1-S-RF is powered by an internal switch-mode power supply (SMPS) module and is not powered through the USB cable. The USB connection only provides the communications link between the host PC and the OMU1-S-RF.

The OMU1-S-RF has two NEMA connectors, one male and one female. The male connector is for inlet and the female connector is for outlet. The male connector is connected to a wall outlet or a power strip. The female connector connects to the load to be measured.


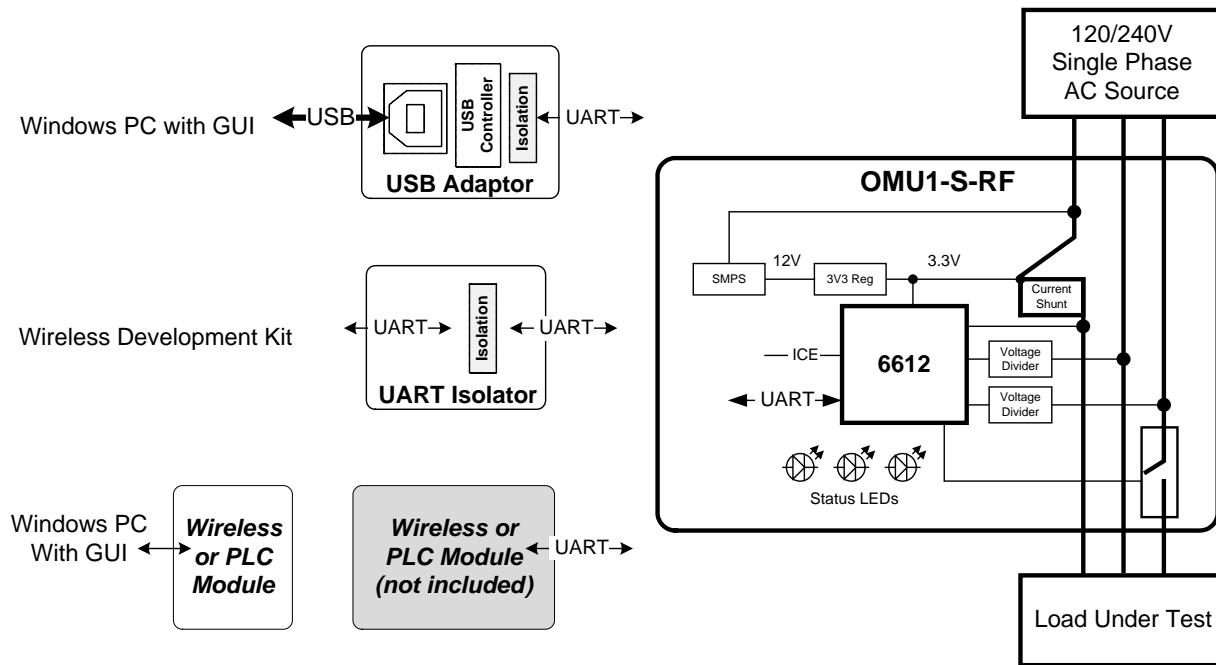


Figure 1: OMU1-S-RF Application Diagram

2.2.1 Attaching the USB-OPTO Daughter Board to the OMU1-S-RF

Attach the USB-OPTO daughter board to the OMU1-S-RF for use with the supplied GUI. This hardware interface provides an easy way to explore the 78M6612 firmware features. The USB daughter board incorporates signal isolators to protect the connected PC.

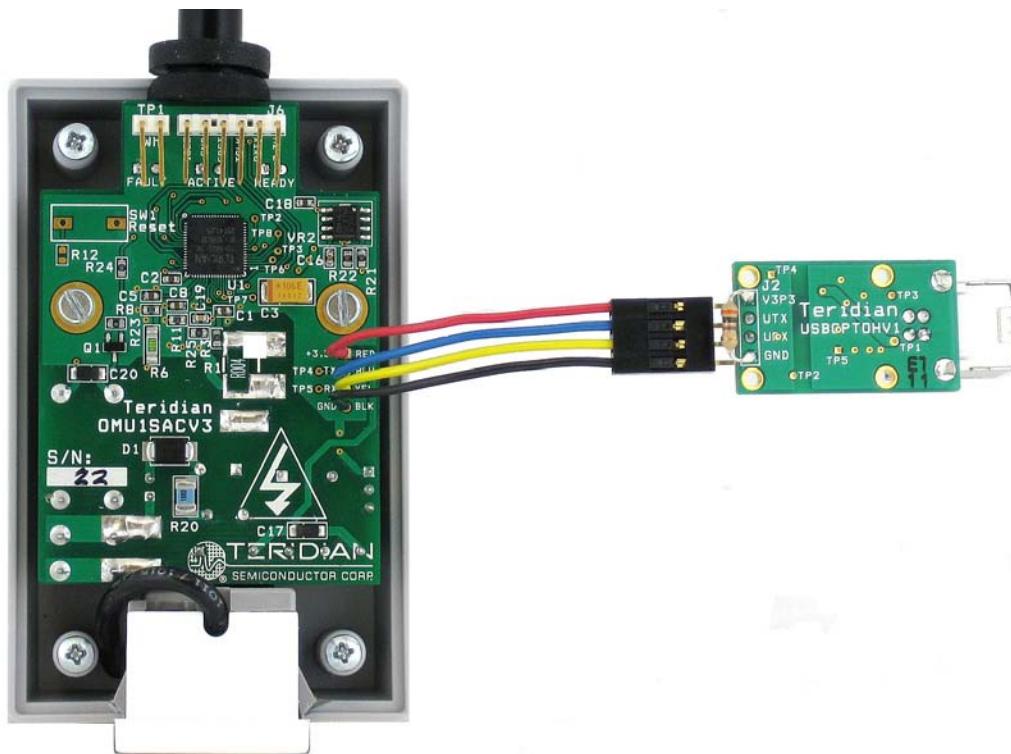

Attach the USB-OPTO daughter board to the OMU1-S-RF's UART cable as shown. Take note of the cable's **Red** wire (+V) with regards to the daughter board's connector pin assignments.




Do not attach external equipment to the OMU1-S-RF when using the USB-OPTO.

If it is necessary to attach test equipment, contact Teridian for instructions.

2.2.2 Attaching the UART-ISO Daughter Board to the OMU1-S-RF

Attach the UART-ISO daughter board to the OMU1-S-RF for use with **external development boards**. External development boards are customer-supplied hardware incorporating their communications module and debug interfaces. Their debug interfaces are typically RS-232 or USB cables with direct connections to a PC. The daughter board incorporates signal isolators to protect the external development board hardware and its attached PC.

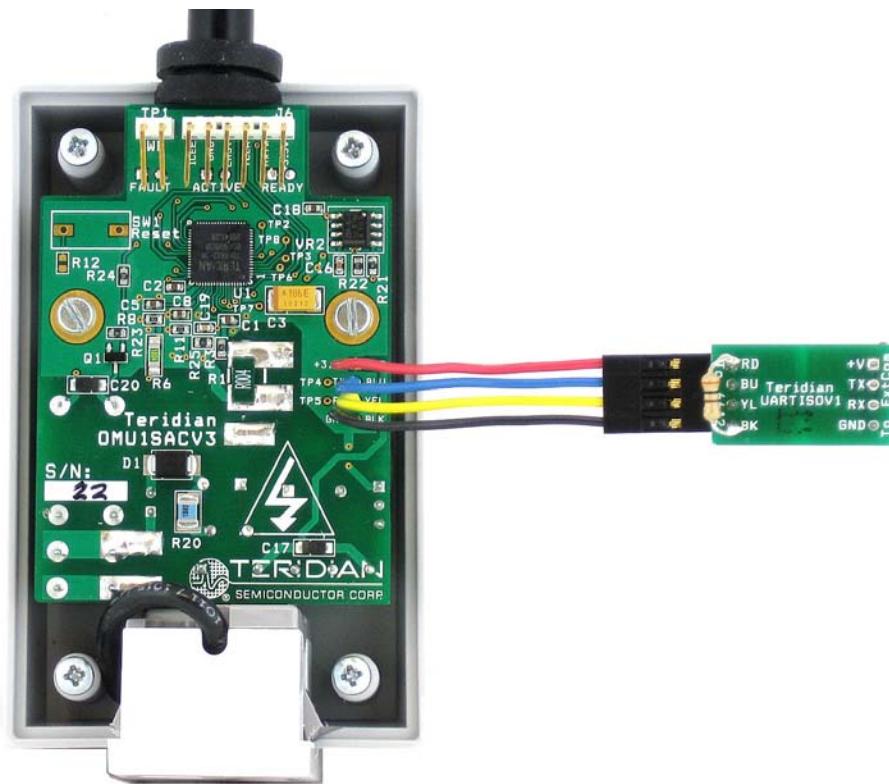

Attach the UART-ISO daughter board to the OMU1-S-RF's UART cable as shown. Take note of the cable's **Red** wire (+V) with regards to the daughter board's connector pin assignments.

The UART-ISO daughter board does not supply power to the attached external development board. The female connector J2 is provided for attaching the external development board. The J2 pin assignments are as follows:

Pin 1	+3.3V or +5V (input, required to power signal isolator)
Pin 2	TX (78M6612 output, Vout dependent on voltage at pin 1)
Pin 3	RX (78M6612 input, Vin threshold dependent on voltage at pin 1)
Pin 4	GND

The UART-ISO daughter board does not support 1.8V signal levels.




Do not attach external equipment to the OMU1-S-RF when using the UART-ISO.

If it is necessary to attach test equipment, contact Teridian for instructions.

2.2.3 Attaching a Customer-Supplied COM Module to the OMU1-S-RF

A fully isolated external communications board (i.e. Wireless or PLC module) may be attached to the OMU1-S-RF's UART cable without using the UART-ISO daughter board. The OMU1-S-RF UART cable supplies 100 ma max at +3.3 V.

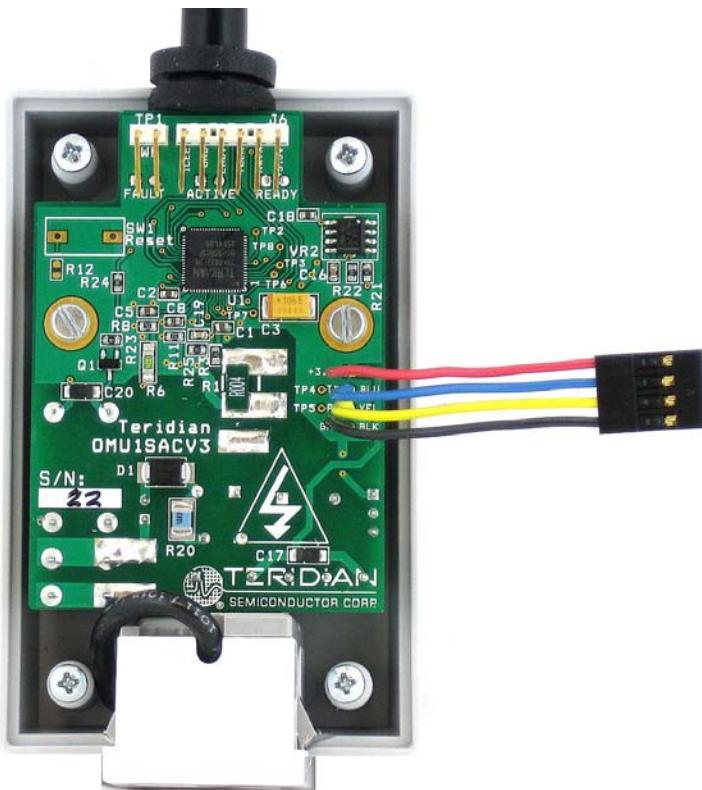

The OMU1-S-RF UART cable pin assignments are as follows:

Pin 1	Red	+3.3V (output, 100ma max)
Pin 2	Blue	TX (78M6612 output, Vout: +3.3V/0V)
Pin 3	Yellow	RX (78M6612 input, Vin: +3.3V/0V)
Pin 4	Black	GND

The OMU1-S-RF UART cable does not support 1.8V signal levels.


Do not attach external equipment to the OMU1-S-RF when using the UART cable.




If it is necessary to attach test equipment, contact Teridian for instructions.

2.3 Confirm COM Port Mapping


1. Launch the **Control Panel** and click on the **System** icon.

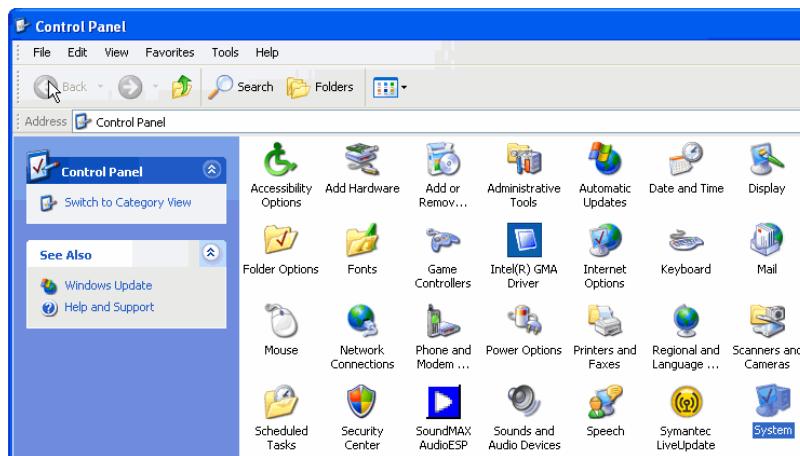

2. The **System Properties** screen appears. Click on the **Hardware** tab. Click on **Device Manager**. Under Ports (COM & LPT), look for the **USB Serial Port** assignment.

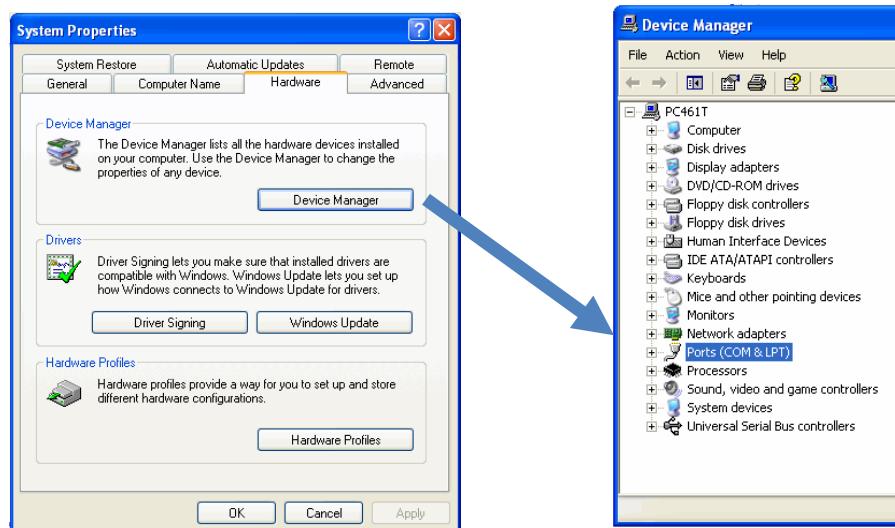

3. Take note of the COM port assignment for the USB Serial Port.

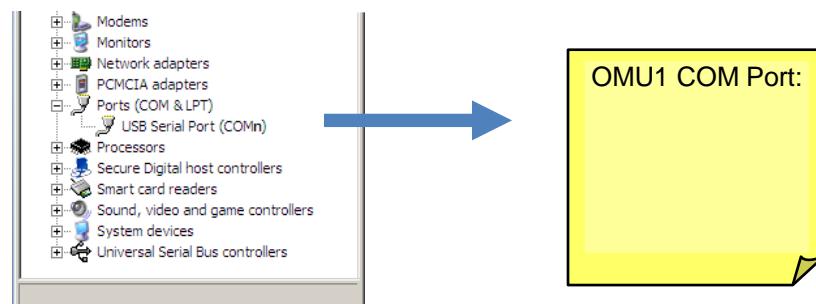


2.4 Verify Serial Connection to the PC

After connecting the USB cable from the OMU1-S-RF to the host PC, start the HyperTerminal application (or another suitable communication program) and create a session using the communication parameters show in Table 1.


Table 1: COM Port Setup Parameters

Setup Parameter	78M6612
Port speed (baud)	38400
Data bits	8
Parity	None
Stop bits	1
Flow control	Xon/Xoff

HyperTerminal can be found in Windows by selecting **Start → All Programs → Accessories → Communications → HyperTerminal**. The connection parameters are configured by selecting **File → Properties**. The **New Connection Properties** menu appears.

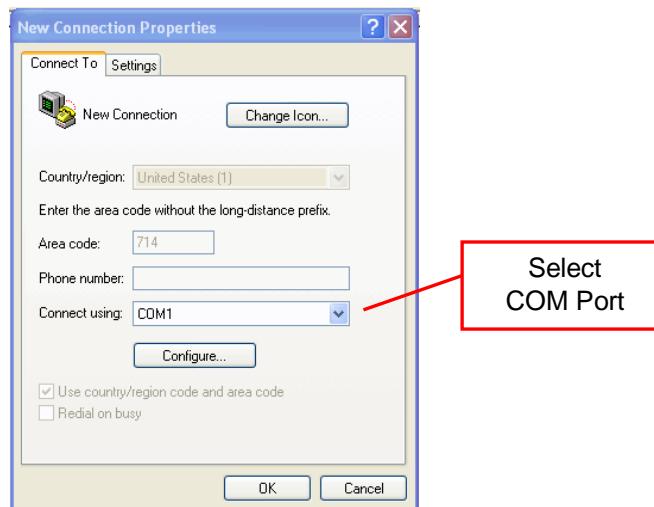

Select the appropriate COM port and click **Configure**. The **COMn Properties** menu appears.

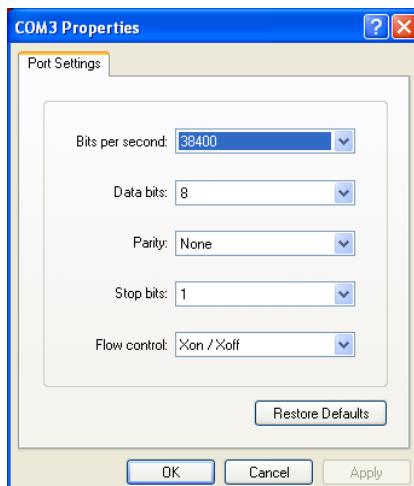

Note that port parameters can only be adjusted when the connection is not active. It may be necessary to click the Disconnect Button (shown in Figure 2) to disconnect the port.


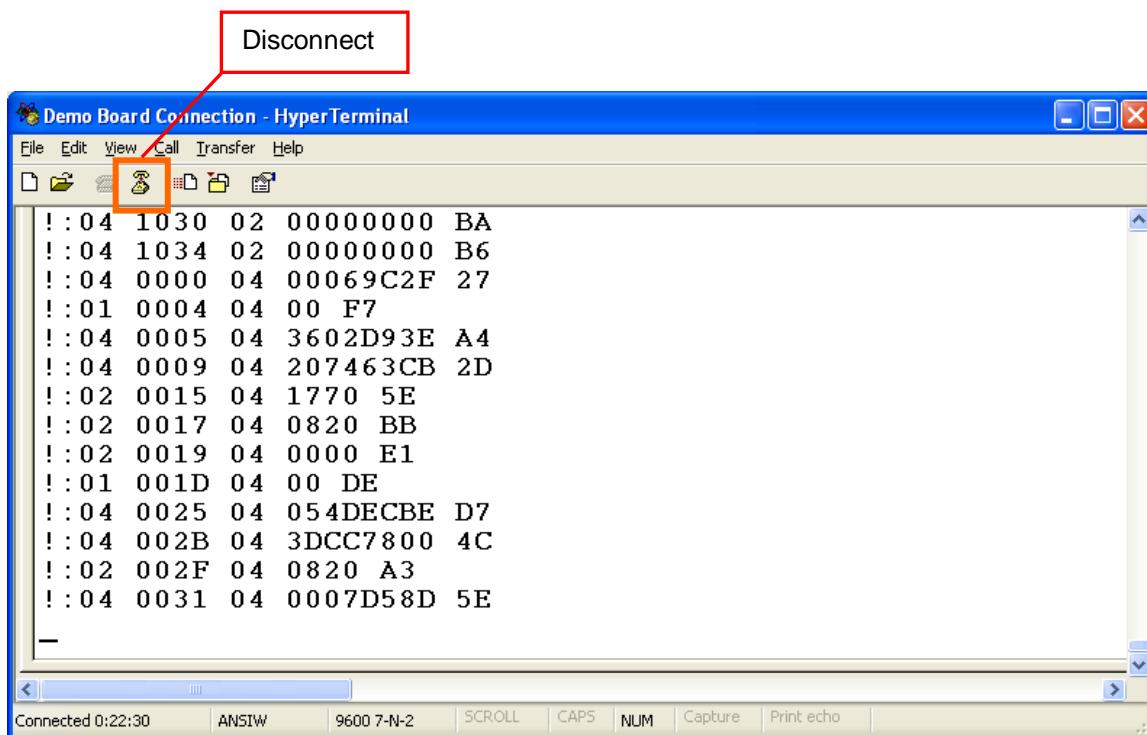


Figure 2: HyperTerminal Window with the Disconnect Button


2.5 NI™ RunTime Installation

The GUI Dashboard program is created using National Instruments LabVIEW™. The NI RunTime Engine must be installed first before launching the Dashboard GUI.


1. Open the **LabWindows XP Installer** directory on the CD.

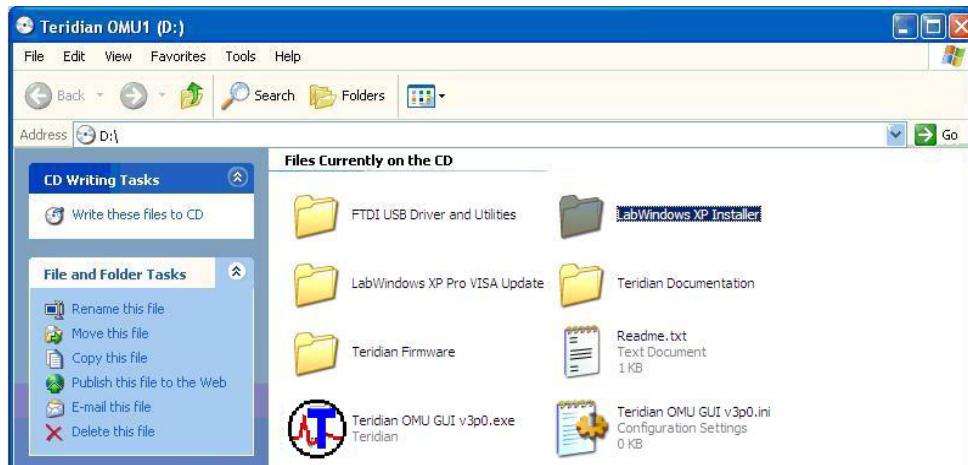


2. Execute the **setup.exe** file.

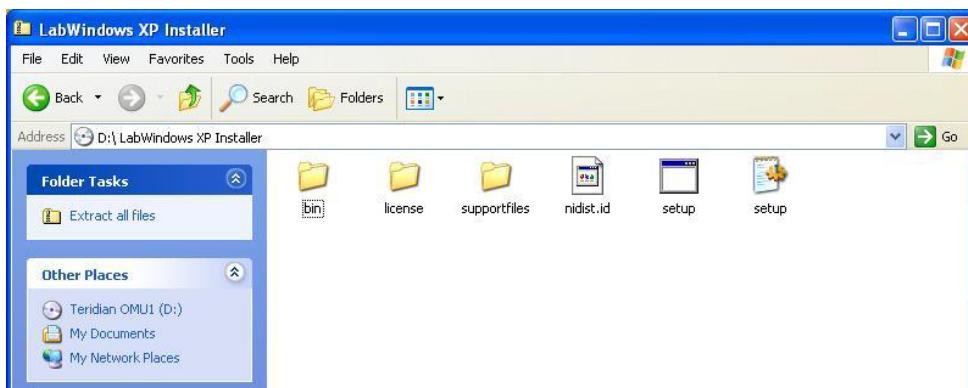


3. Select the destination directory.

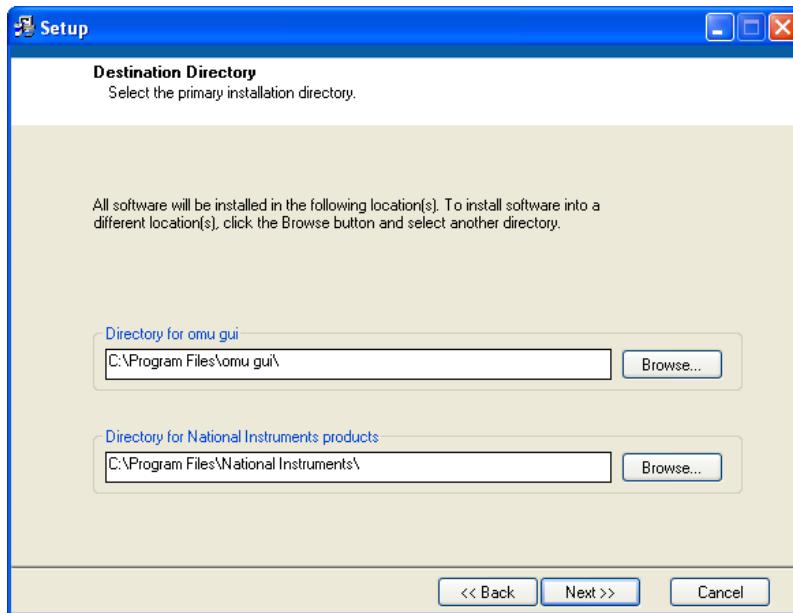

4. Accept the License Agreement.

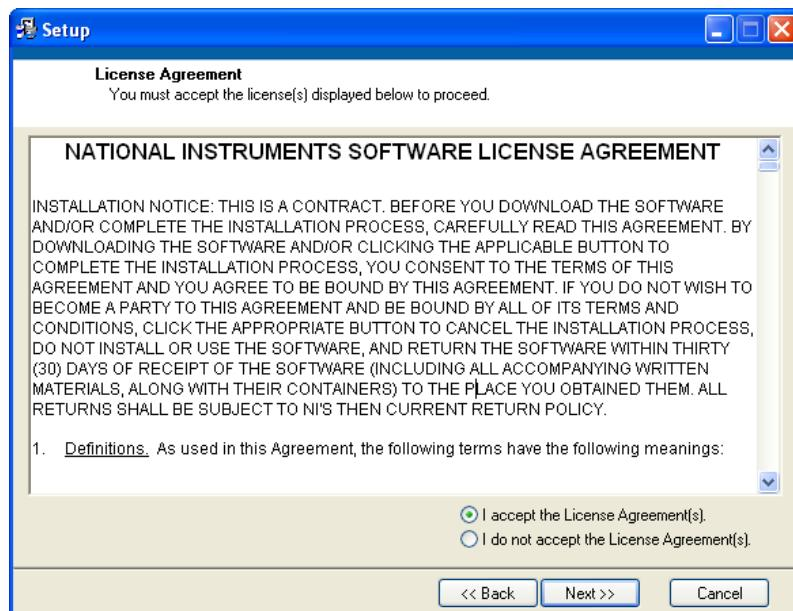

5. Start the installation.

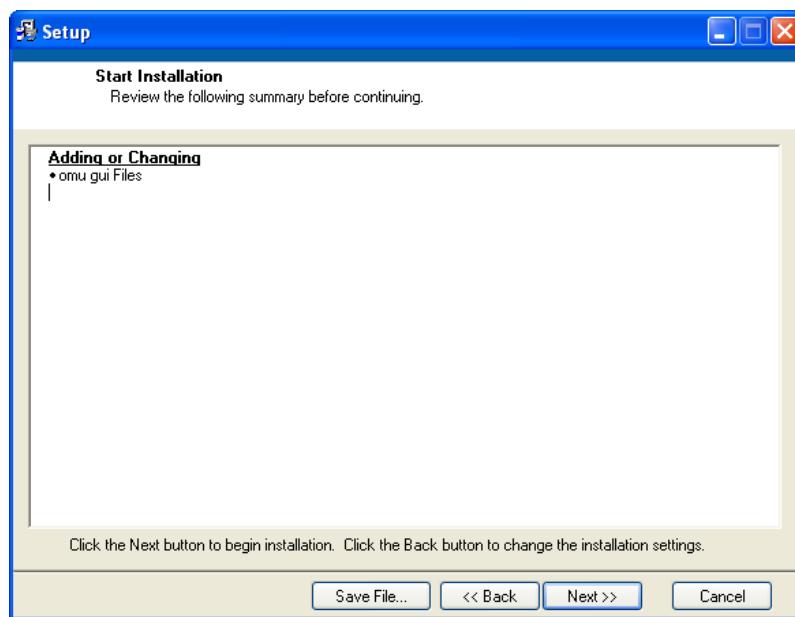


6. When the installation is complete, restart your computer.



2.6 Install LabWindows™ XP Pro Update

Do not install LabWindows XP Pro Update on Win2k.


1. Launch the **LabWindows XP Pro VISA Update.exe** installation file on the CD.

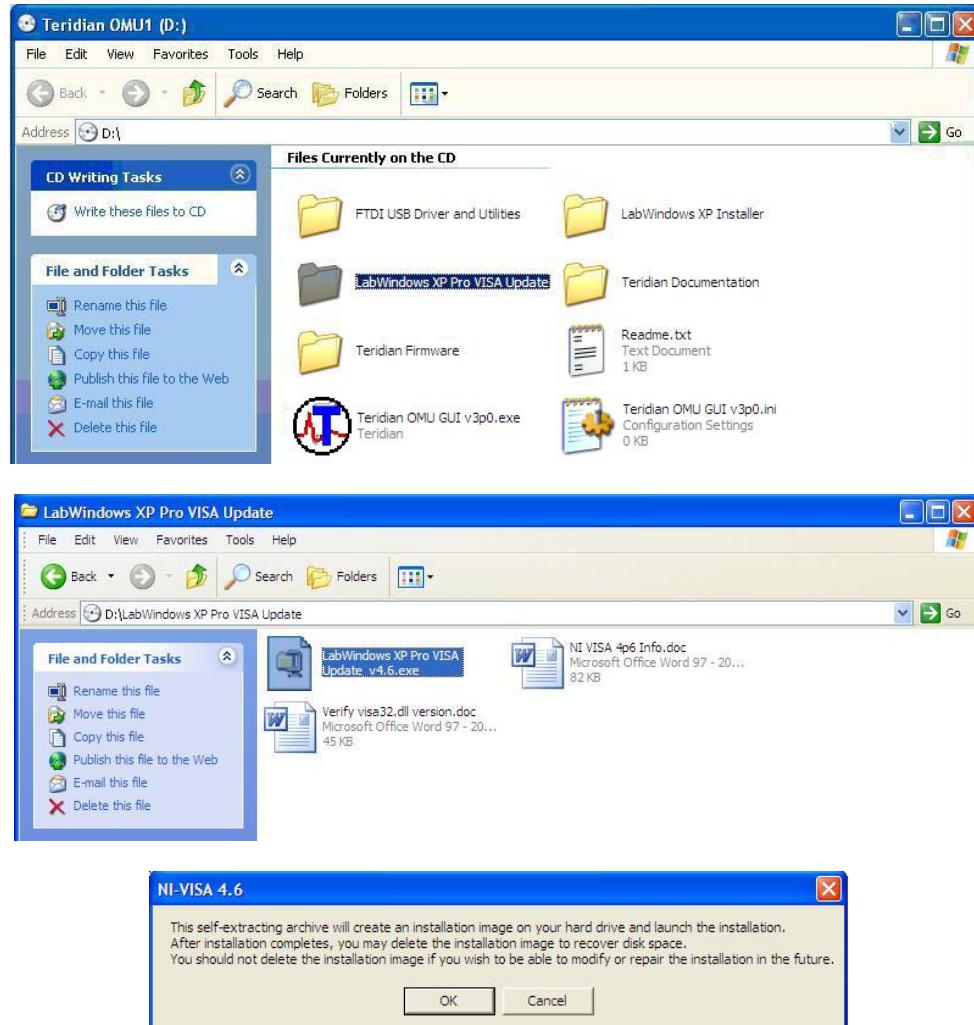


2. Un-zip the file to the proper folder.




3. Start the installation.

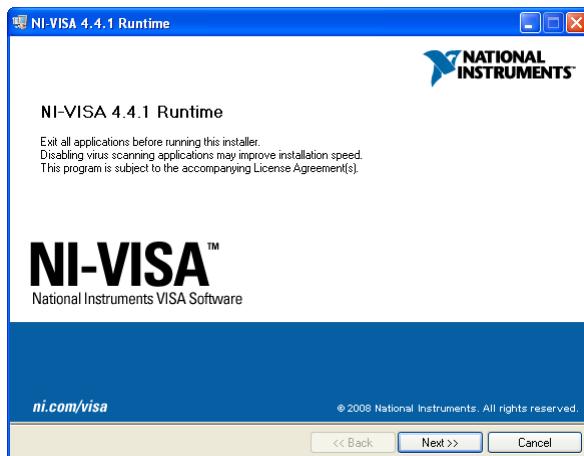


4. Select the proper destination directories.

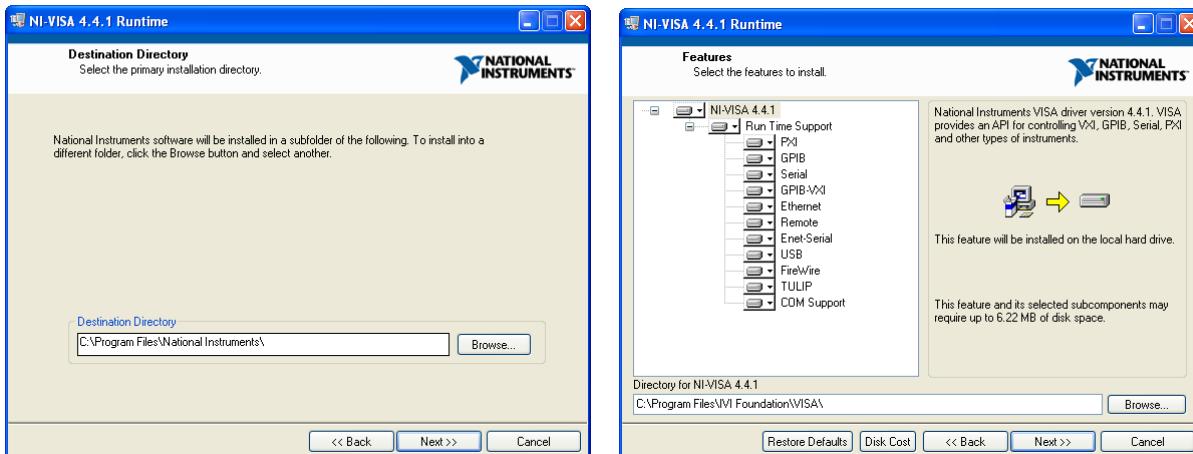


5. Accept the License Agreements.

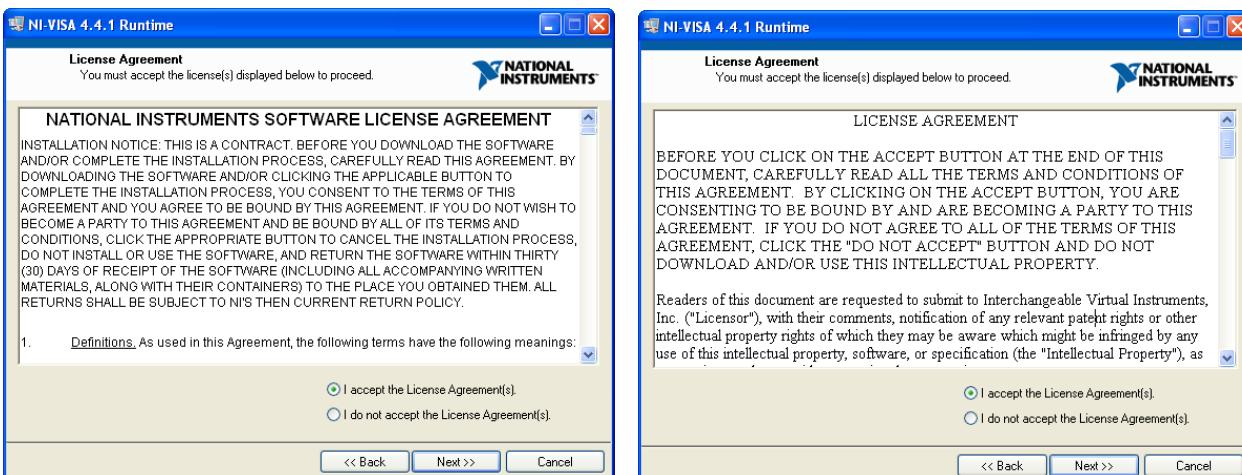

6. The following screen appears. Click **Next**.

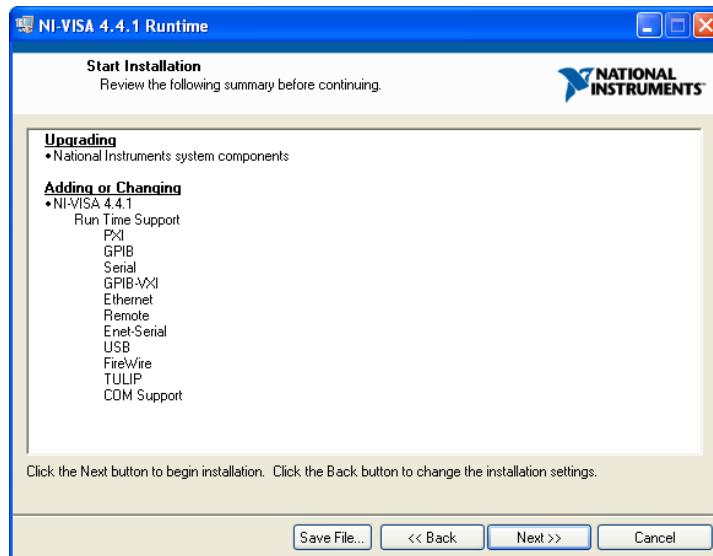

7. Click **Finish**.

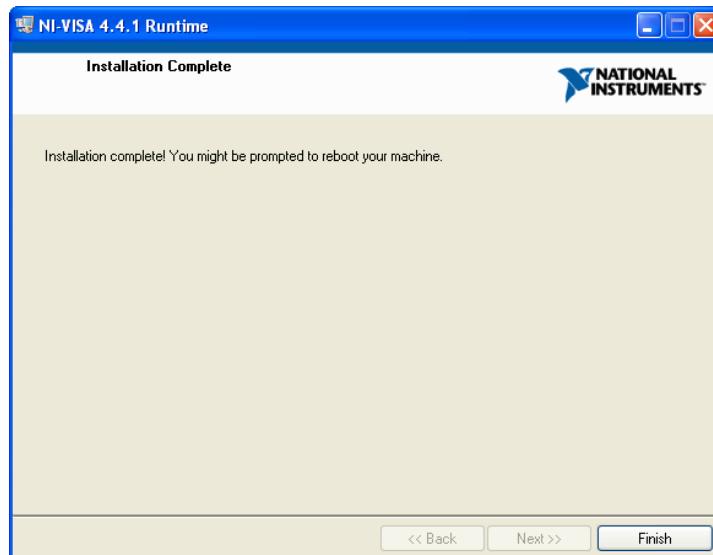

8. Copy the OMU GUI V3p0.exe application file from the CD to your PC.


9. Restart your computer.

3 Operating the Dashboard GUI


Start the Dashboard Program using launching **Teridian OMU GUI V3p0.exe**.

3.1 Port Selection

The COM port must be selected before data can be received from the OMU1. Select the appropriate COM port assignment previously defined on the Device Manager screen in [Section 2.2](#).

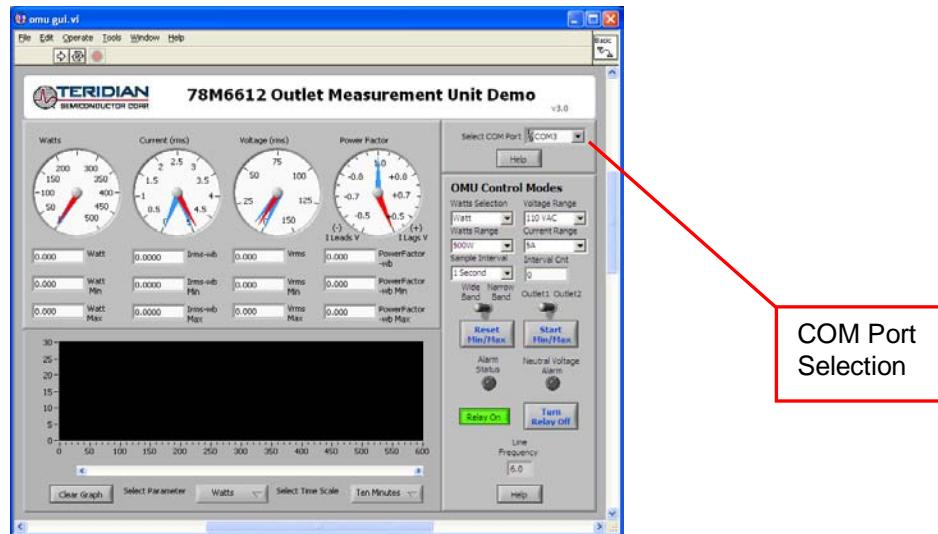


The **Run** and **Stop** buttons are located above the Teridian logo.

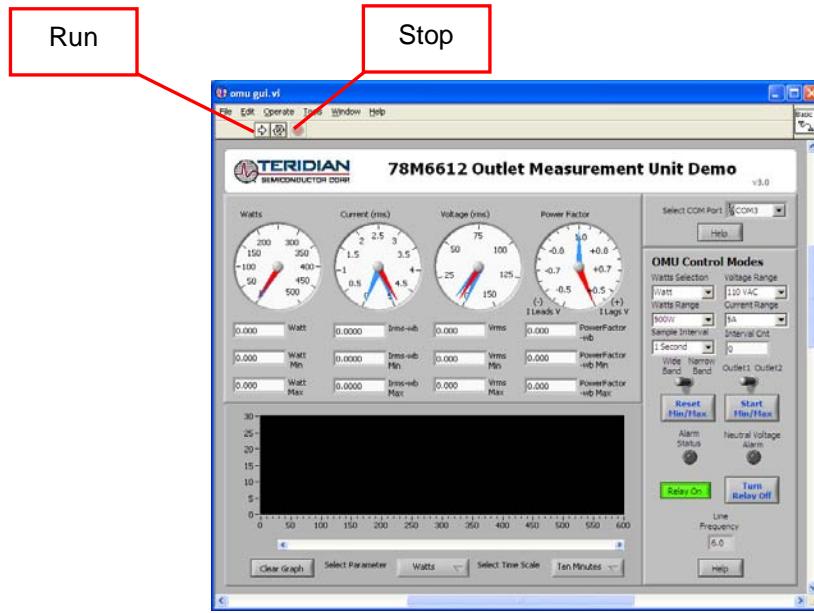

If the OMU1 is disconnected from the USB cable, close and restart the GUI to re-establish the USB COM port connection.

3.2 Creating a Measurement Data Log File


Upon clicking the **Run** button, a File Write dialog box appears. The GUI stores retrieved measurement data to a file for post processing. Enter the desired subdirectory and file name. Click **OK** to launch the main GUI display.

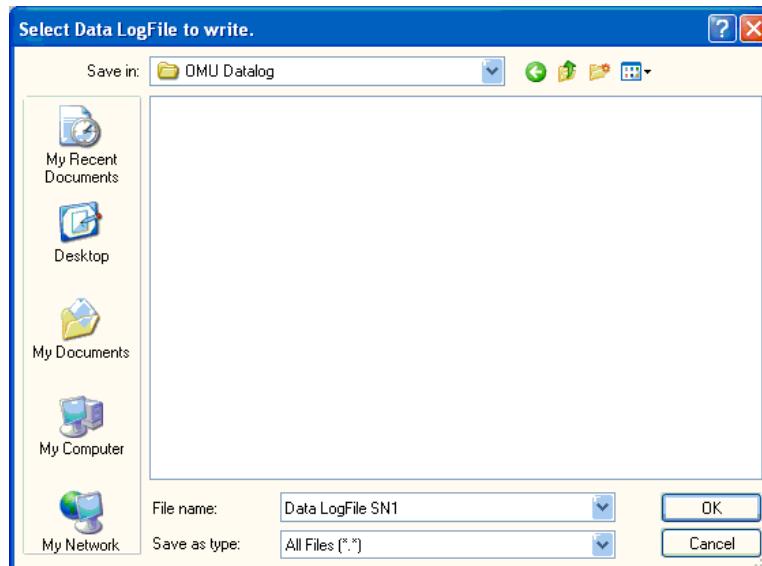

The measurement data is stored as text characters delimited by commas. Click the **Stop** button to close the text file and end the data logging function. New data log files are created wherever the **Run** button is clicked. The data log capture automatically stops after 12 hours. 12 hours of data results in a 12 MB file. To import the data log file into Excel, see [Section 4.19](#).

3.3 Selecting the Power Display Parameter


Using the **Watts Selection** menu under **OMU Control Modes**, select **Watt**, **VA** or **VAR** as the power display parameter.

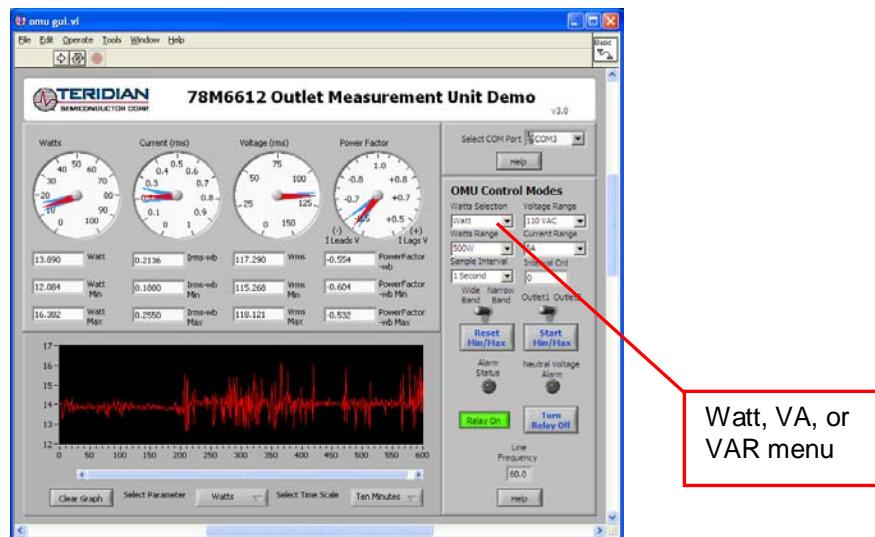

Real power is the time average of the instantaneous product of voltage and current (**Watt**). Apparent power is the product of rms (root mean square) volts and rms amps (**VA**, volt-amps). Reactive power is the time average of the instantaneous product of the voltage and current, with current phase shifted 90 degrees (**VAR**, voltamps reactive).

3.4 Selecting the Display Scales


The range of values displayed in the **Watts** dial, the **Current (rms)** dial, and the **Voltage (rms)** dial can be changed. Use the **Voltage Range**, **Watts Range** and **Current Range** menus under **OMU Control Modes** to select the display scales for Watts, Current, and Voltage.

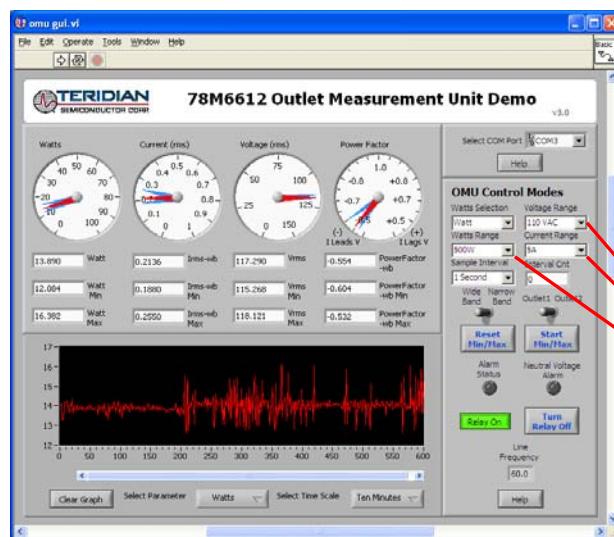

Scale for Voltage,
Watts and Current


3.5 Resetting the Min and Max Indicators to Their Current Values

The **Reset Min/Max** button sets the Minimum and Maximum display values to the current conditions. Press the **Reset Min/Max** button to store the measured values in the first row of the display into the second row (the Min values) and the third row (the Max values).

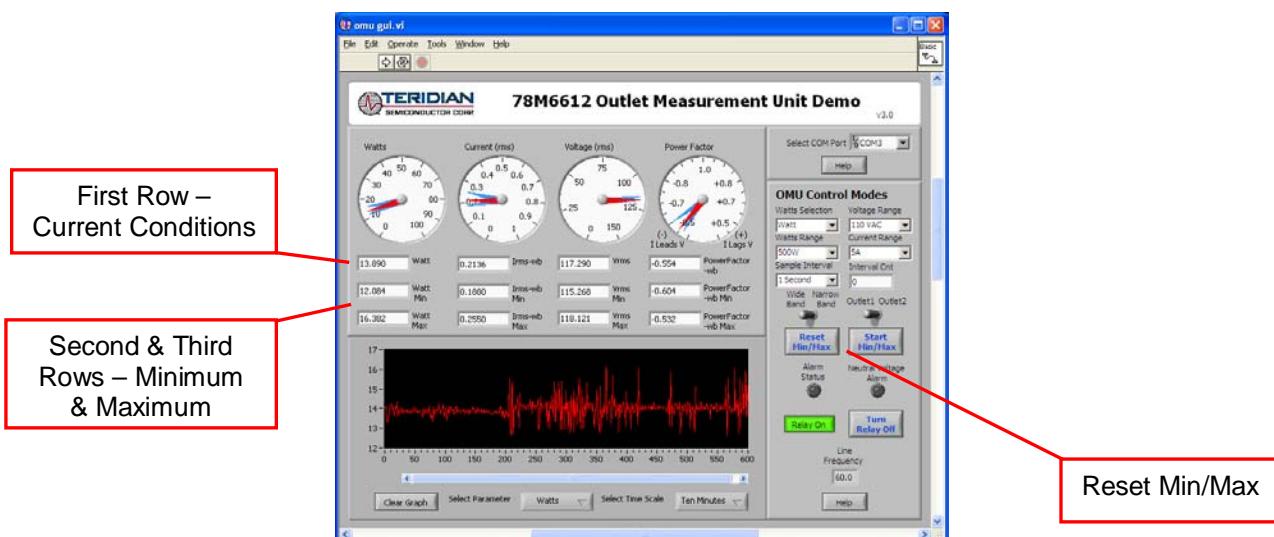


3.6 Begin Tracking Minimum and Maximum Conditions

To begin tracking minimum and maximum conditions as they occur, click the **Start Min/Max** button. Minimum values will display in the second row and maximum values will display in the third row.

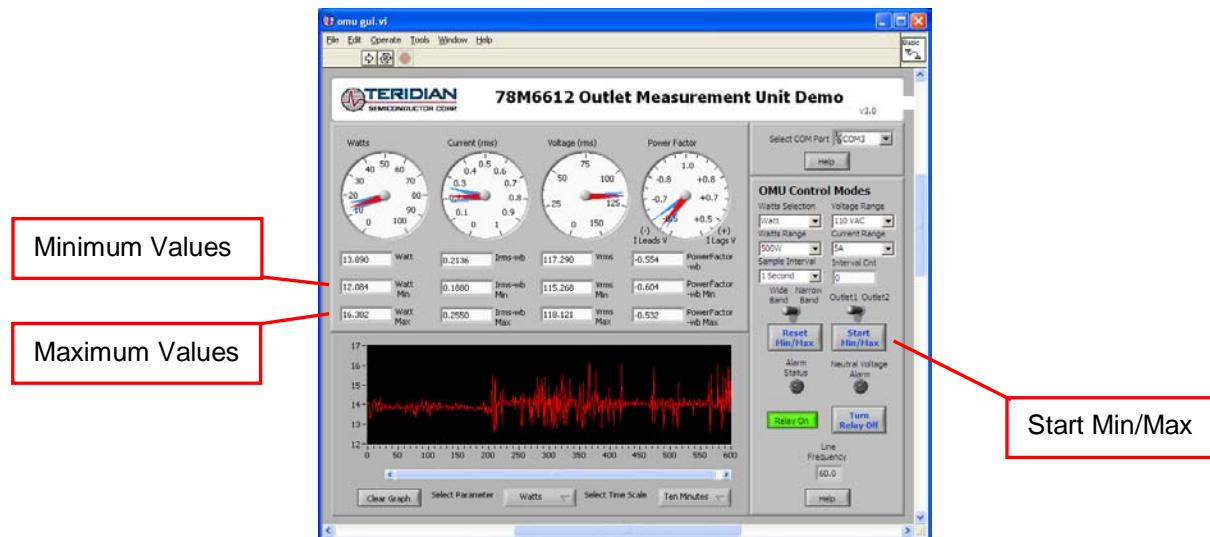


3.7 Selecting Outlet1

The GUI has provisions to display two loads: **Outlet1** and **Outlet2**. However, the OMU1-S-RF module contains only one load socket. Select **Outlet1** for use with the OMU1-S-RF module. All **Outlet2** power and current measurement displays show "0.00" due to the missing load circuit. Similarly, all Totals measurement displays mirror the **Outlet1** results.

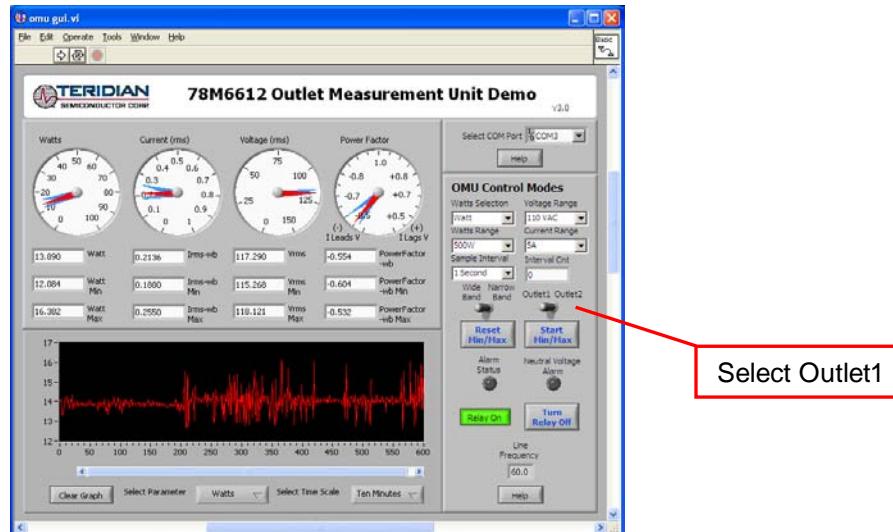


3.8 Selecting Wide Band or Narrow Band Measurement

The GUI provides for two measurement algorithm options. The **Wide Band** measurement method is optimal for measuring power from equipment with switching power supplies. The **Narrow Band** method works well with conventional loads. All measurement displays, dials and graph are updated with the appropriate data based on the **Wide Band / Narrow Band** selection.

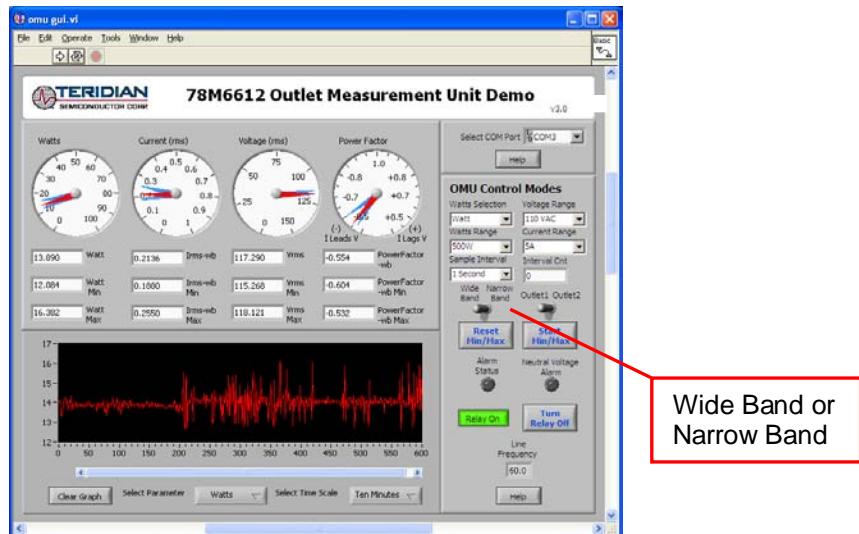

3.9 Selecting the Sample Interval

Sample Interval provides a menu of sample sizes for display averaging. The 1 Second setting updates the display with every sample once a second. The 5 Seconds setting averages 5 samples and updates the display every 5 seconds, etc. **Interval Cnt** provides an index for the next display update. For example, if **Sample Interval** is set to 5 Seconds, **Interval Cnt** will count from 1 to 5.


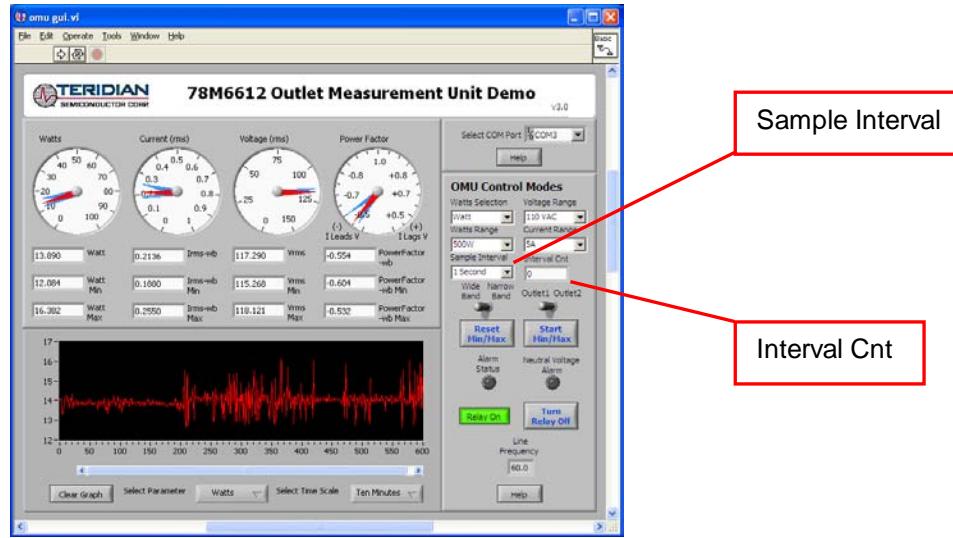


3.10 Alarm Status

The **Alarm Status** indicator turns red if any Alarm Status Threshold is exceeded. See [Section 4.16](#) for more information.


3.11 Neutral Voltage Alarm

The Neutral Voltage Alarm turns red when the Line and Neutral wires are reversed and Earth GND is connected. Earth GND must be connected for this function to operate properly.

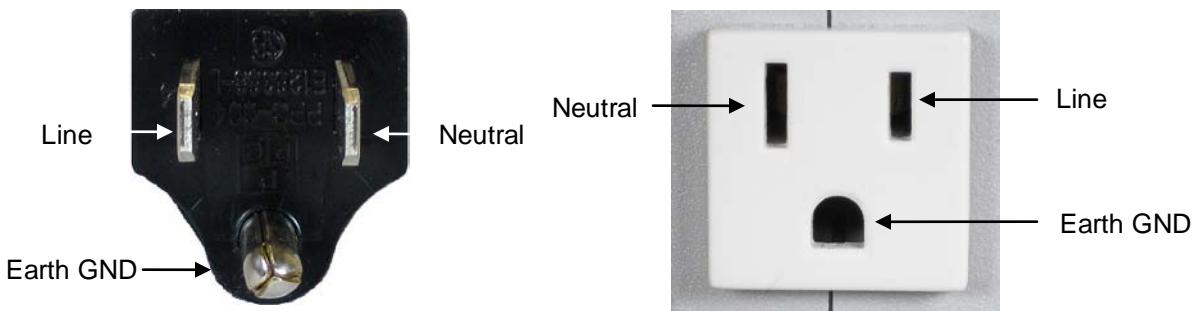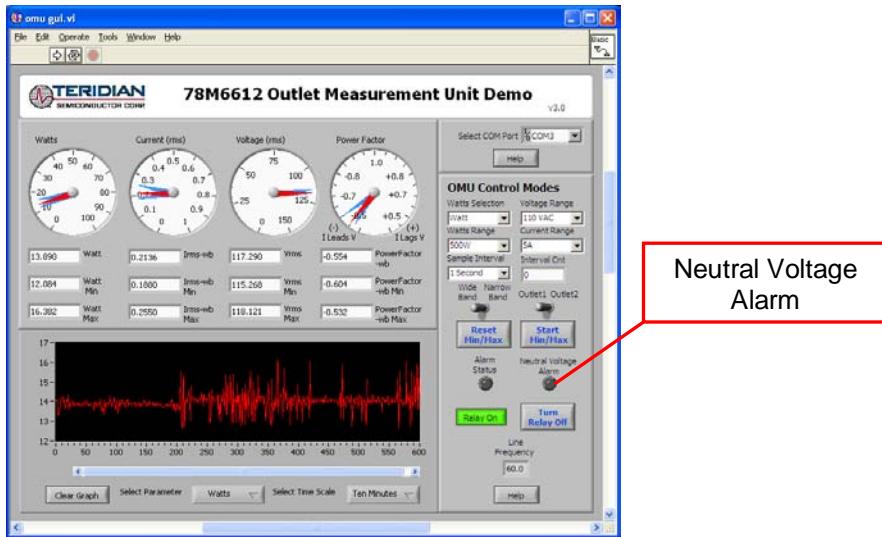

3.12 Line Frequency


The **Line Frequency** indicator displays the existing line frequency. Frequency is displayed with 0.1 Hz resolution. “???” is displayed when no voltage is present.

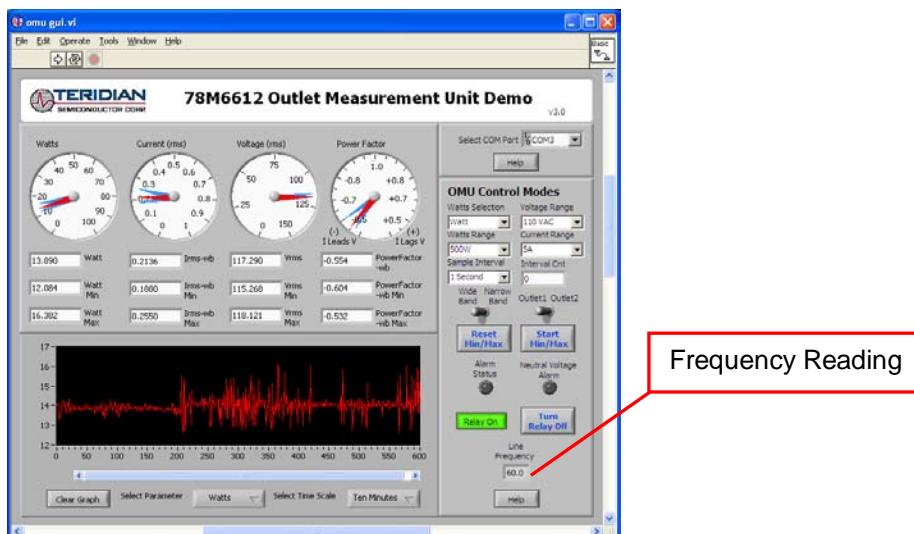

3.13 Accumulated Energy Usage and Expense Tracking


If a **Cost per KWh** value is entered, the OMU1-S-RF will calculate and display the accumulated energy cost.

- Slide the vertical scroll bar down to display the **Present Cost/KWh**, which shows the currently stored value in the OMU1-S-RF module.
- Enter a new value, such as 10, in the box below and click the **Write KWh Cost** button to save this updated cost information. Do not hit the keyboard's Enter key after typing in the new numeric value.
- The **Total Energy** and **Total Cost** windows (under **Duplex Totals**) update automatically with the new information.
- The accumulated **Total Energy** and **Total Cost** windows are reset by clicking the **Reset Min/Max** button.

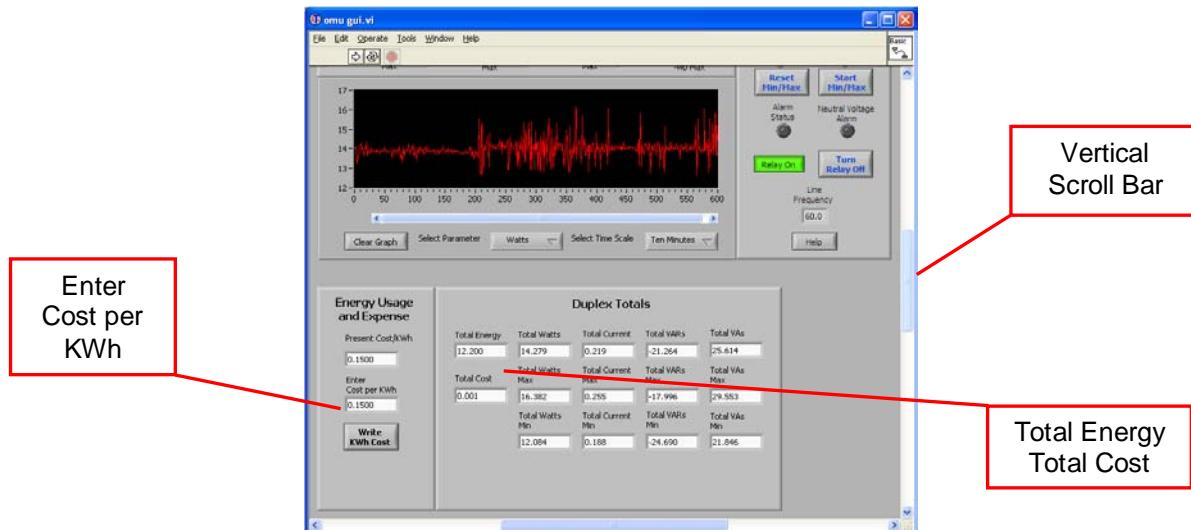

3.14 Displaying Narrowband and Wideband Values Simultaneously


Slide the horizontal scroll bar to the right to view both sets of data.

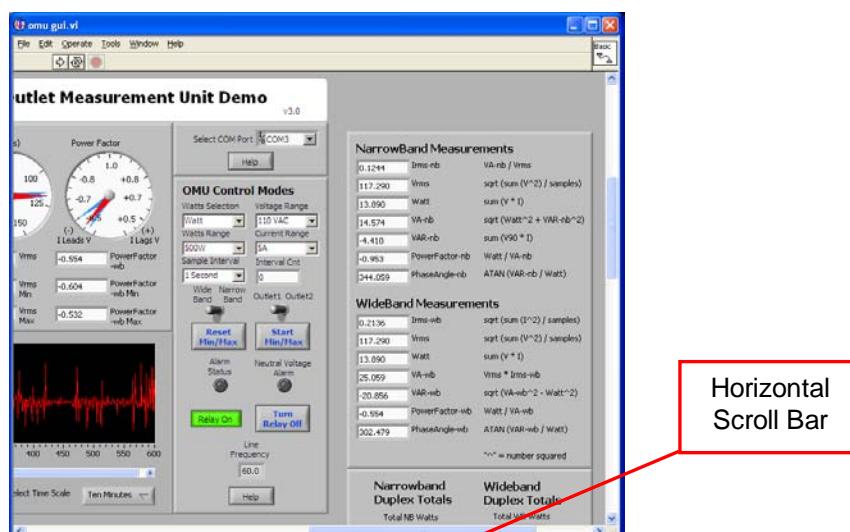

3.15 Using the Parameter Graph

Use the Parameter Graph to display sample size averages for a specified parameter and time scale.


- Select the parameter to chart using the **Select Parameter** menu.
- Select the time scale using the **Select Time Scale** menu.

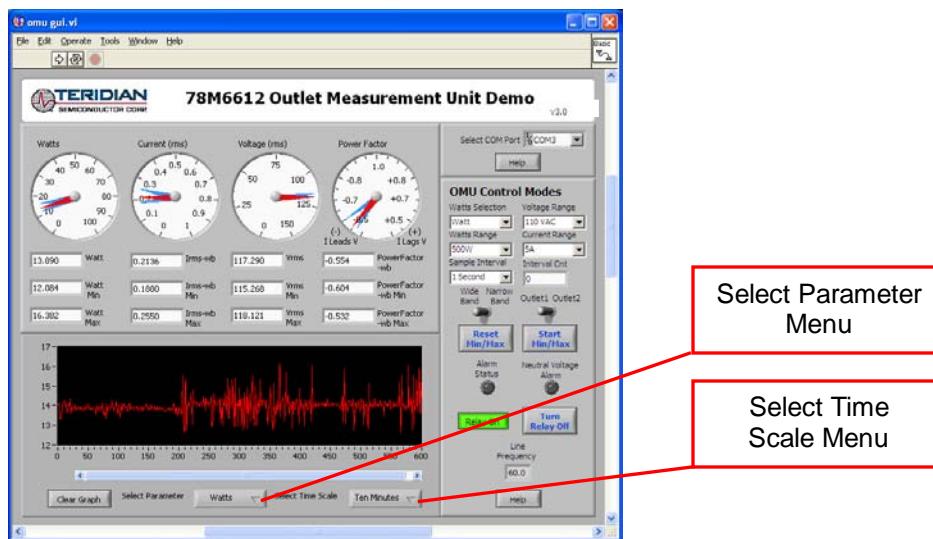


3.16 Setting Alarm Status Thresholds

The OMU1 can trip an alarm whenever a specified minimum or maximum temperature, frequency, voltage, maximum current narrowband, maximum current wideband, power factor narrowband and power factor wideband. When the specified value is exceeded, the corresponding **Alarm Status Indicator** turns red. Also, the **Alarm Status** on the Dashboard turns red.

- To the left of the main control panel are the **Alarm Status Indicators**. Use the horizontal scroll bar to bring the indicators into view.

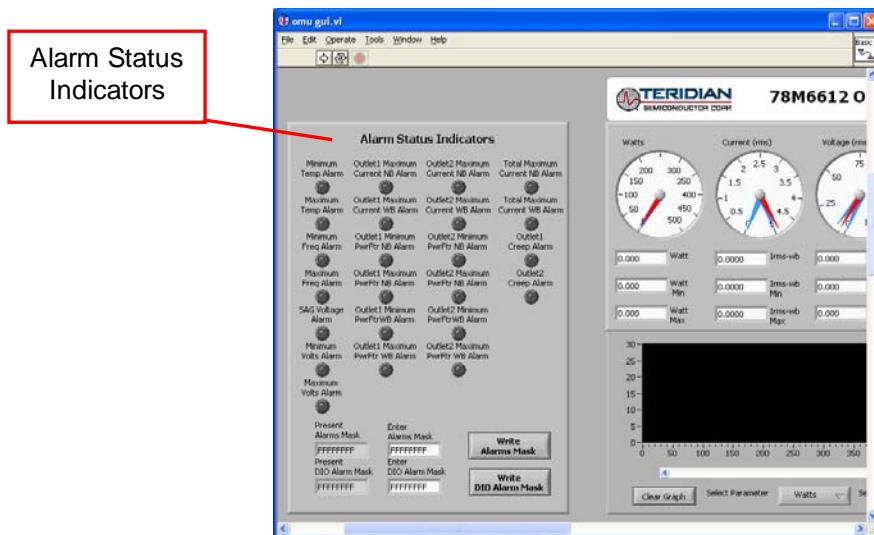


- Below the **Alarm Status Indicators** are the current threshold values and data entry boxes to change the OMU1 event counter threshold values.

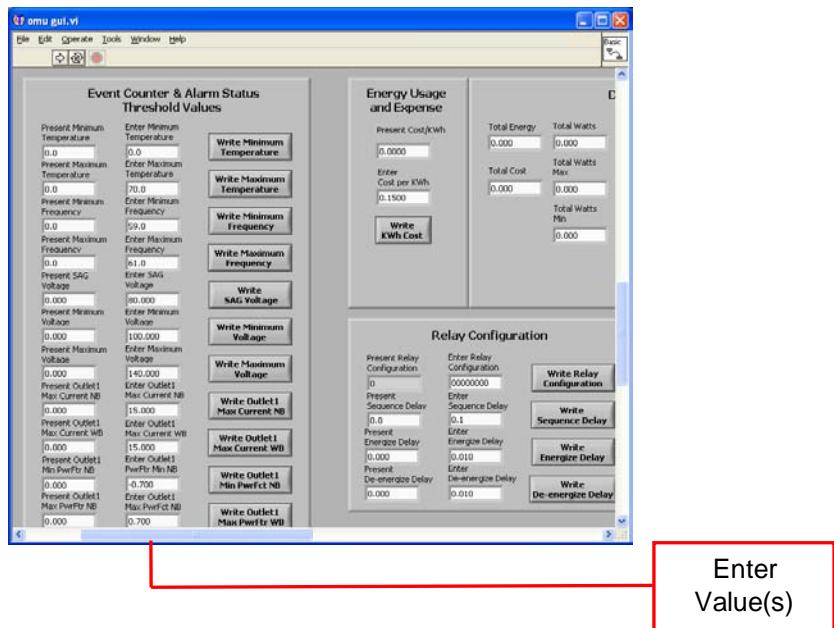


- Enter a new value and click on the respective **Write** button to save the new value to the OMU1-S-RF.
- Do not press the keyboard's **Enter** key after typing in a new numeric value.

3.17 Relay Configuration Controls

The internal load relay defaults to the off condition (load not powered) upon power-on or restart of the GUI. The relay control button is located in the lower right hand corner of the main GUI control panel. A relay status indicator is located to the left of the control button. The relay status indicator and all other GUI indicators experience a 1-2 second update delay after clicking the relay control button.

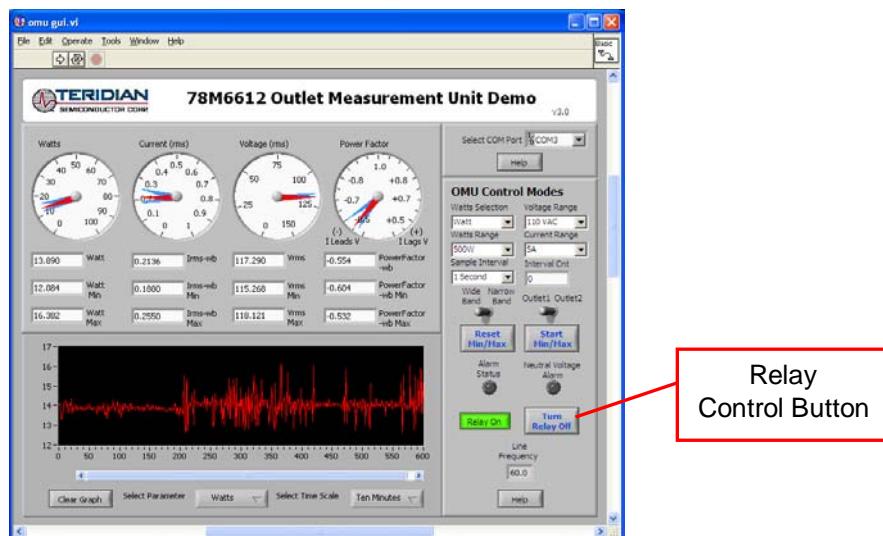


Advanced relay controls can be found by scrolling down to the bottom of the GUI. These are reserved for future use. Do not use with the OMU1-S-RF.

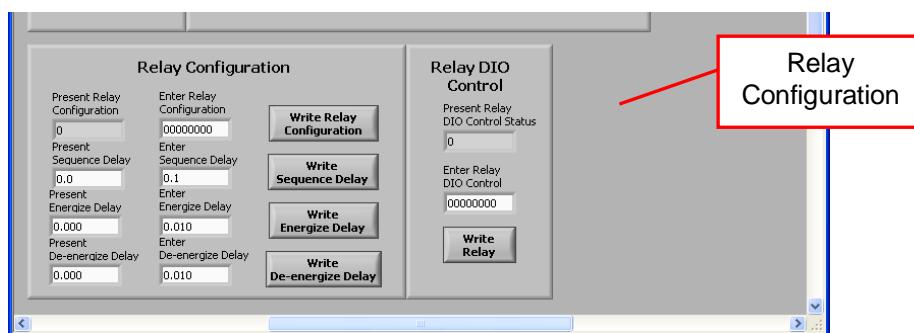


3.18 Log File Import to Excel

The OMU1-S-RF measurement data can be graphed and post processed by importing its text data into various analysis programs. The column data is separated by commas. The first dozen lines contain OMU1-S-RF informational data. The measurement data follows with each 1-second sample stored as a separate line item.

To import the log data into Excel, begin by clicking on the Excel **File/Open** option from the main menu.

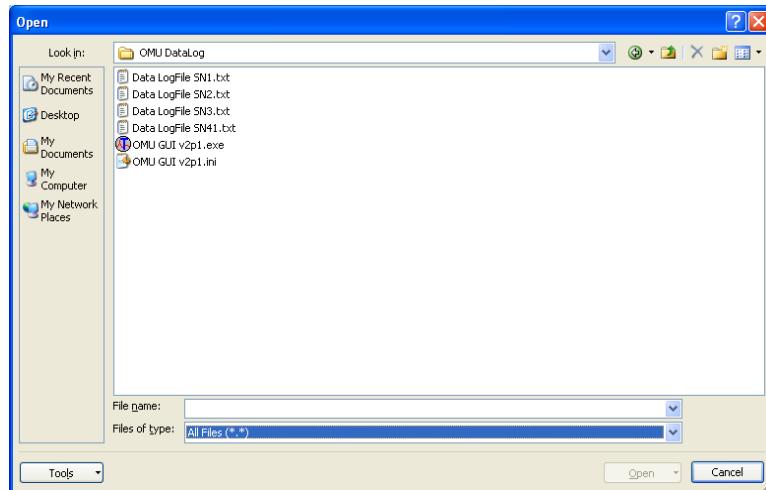


Change the **Files of type** to **all Files (*.*)**. Then find your sub-directory and select your data log file.

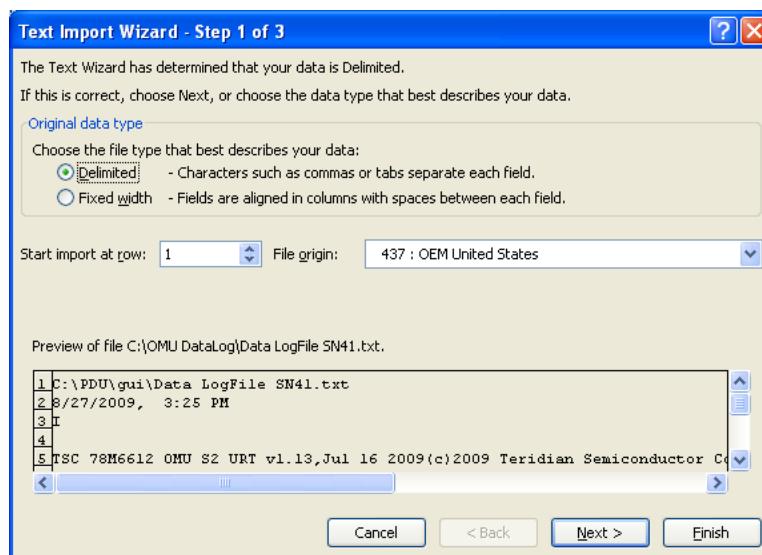

No changes required on the next dialog box, click **Next**.



Uncheck **Tab** and then check **Comma**. Click **Next** to proceed.

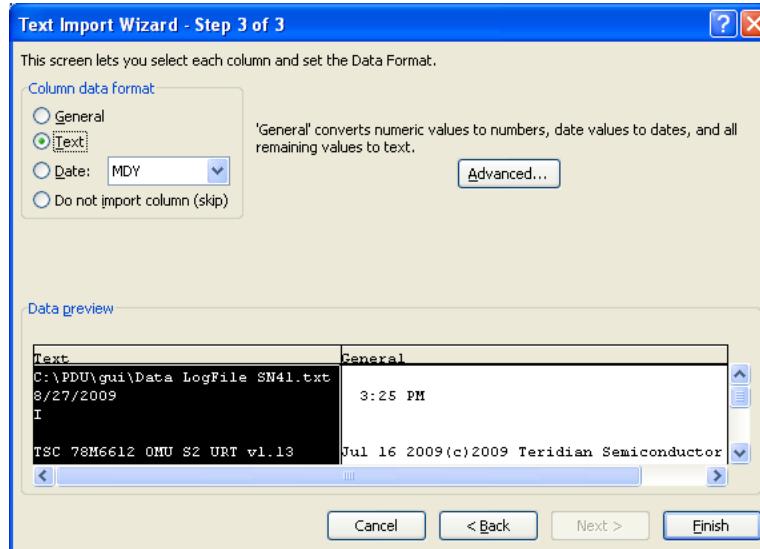

Select **Text** for Column data format. Click **Finish** to complete importing log file data.

The log file text data can now be parsed using standard Excel formulas.

	Time	Freq	Vrms	Watts	Inb	VARinB	VARinD	PPinB	PPinD	Inb	VARinB	VARinD	PPinB	PPinD	Inb
10	10:42:04 A	55.9	0	0	0	0	0	0	0	0	0	0	0	0	0
11	10:42:05 A	55.9	113.389	69.377	0.614	-0.376	69.376	1	0	0.689	-35.718	78.242	-0.89	332.467	
12	10:42:07 A	55.9	113.323	69.407	0.614	-0.409	69.409	1	0	0.689	-35.7	78.248	-0.89	332.467	
13	10:42:09 A	50	113.357	69.468	0.615	-0.376	69.469	1	0	0.691	-35.7	78.282	-0.89	332.467	
14	10:42:10 A	55.9	113.365	69.489	0.615	-0.385	69.49	1	0	0.691	-35.718	78.259	-0.89	332.467	
15	10:42:12 A	50	113.367	69.489	0.615	-0.392	69.49	1	0	0.691	-35.722	78.311	-0.89	332.467	
16	10:42:13 A	50	113.379	69.497	0.615	-0.402	69.498	1	0	0.691	-35.721	78.318	-0.89	332.467	
17	10:42:15 A	50	113.36	69.49	0.615	-0.387	69.491	1	0	0.691	-35.725	78.313	-0.89	332.467	
18	10:42:16 A	55.9	113.297	69.416	0.614	-0.393	69.417	1	0	0.691	-35.721	78.245	-0.89	332.467	
19	10:42:18 A	50	113.301	69.705	0.619	-0.41	69.706	1	0	0.691	-35.744	78.215	-0.89	332.463	
20	10:42:19 A	55.9	113.303	69.493	0.614	-0.402	69.494	1	0	0.691	-35.744	78.215	-0.89	332.463	
21	10:42:20 A	50	113.409	69.48	0.615	-0.398	69.479	1	0	0.691	-35.756	78.37	-0.89	332.463	
22	10:42:21 A	50	113.389	69.713	0.615	-0.343	69.716	1	0	0.691	-35.744	78.341	-0.89	332.463	
23	10:42:24 A	50	113.351	69.481	0.615	-0.402	69.482	1	0	0.691	-35.727	78.305	-0.89	332.467	
24	10:42:26 A	55.9	113.382	69.7	0.615	-0.345	69.701	1	0	0.691	-35.755	78.335	-0.89	332.463	
25	10:42:27 A	50	113.334	69.665	0.615	-0.42	69.666	1	0	0.691	-35.709	78.264	-0.89	332.467	
26	10:42:29 A	50	113.21	69.608	0.614	-0.388	69.609	1	0	0.691	-35.721	78.239	-0.89	332.467	
27	10:42:30 A	50	113.287	69.604	0.614	-0.395	69.605	1	0	0.691	-35.742	78.245	-0.89	332.463	
28	10:42:32 A	50	113.277	69.596	0.614	-0.429	69.597	1	0	0.691	-35.743	78.238	-0.89	332.463	
29	10:42:33 A	50	113.368	69.415	0.615	-0.348	69.416	1	0	0.691	-35.751	78.219	-0.89	332.461	
30	10:42:34 A	50	113.269	69.405	0.614	-0.345	69.403	1	0	0.691	-35.729	78.237	-0.89	332.467	
31	10:42:35 A	50	113.218	69.513	0.615	-0.311	69.515	1	0	0.691	-35.749	78.219	-0.89	332.463	
32	10:42:38 A	50	113.381	69.402	0.614	-0.438	69.403	1	0	0.691	-35.749	78.246	-0.89	332.463	
33	10:42:40 A	50	113.292	69.402	0.614	-0.419	69.403	1	0	0.691	-35.764	78.253	-0.89	332.463	
34	10:42:41 A	50	113.236	69.581	0.614	-0.362	69.582	1	0	0.691	-35.729	78.219	-0.89	332.467	
35	10:42:43 A	50	113.341	69.573	0.614	-0.373	69.574	1	0	0.691	-35.749	78.22	-0.89	332.463	
36	10:42:44 A	50	113.258	69.573	0.614	-0.419	69.574	1	0	0.691	-35.772	78.231	-0.89	332.063	
37	10:42:46 A	50	113.239	69.555	0.614	-0.422	69.556	1	0	0.691	-35.758	78.208	-0.89	332.463	

4 Schematics, Bill of Materials and PCB Layouts

This section includes the schematics, bill of materials and PCB layouts for the OMU1-S-RF Demo Board, and the schematics for the USB Daughter Board and the UART-ISO Daughter Board.

4.1 OMU1-S-RF Demo Board Schematics

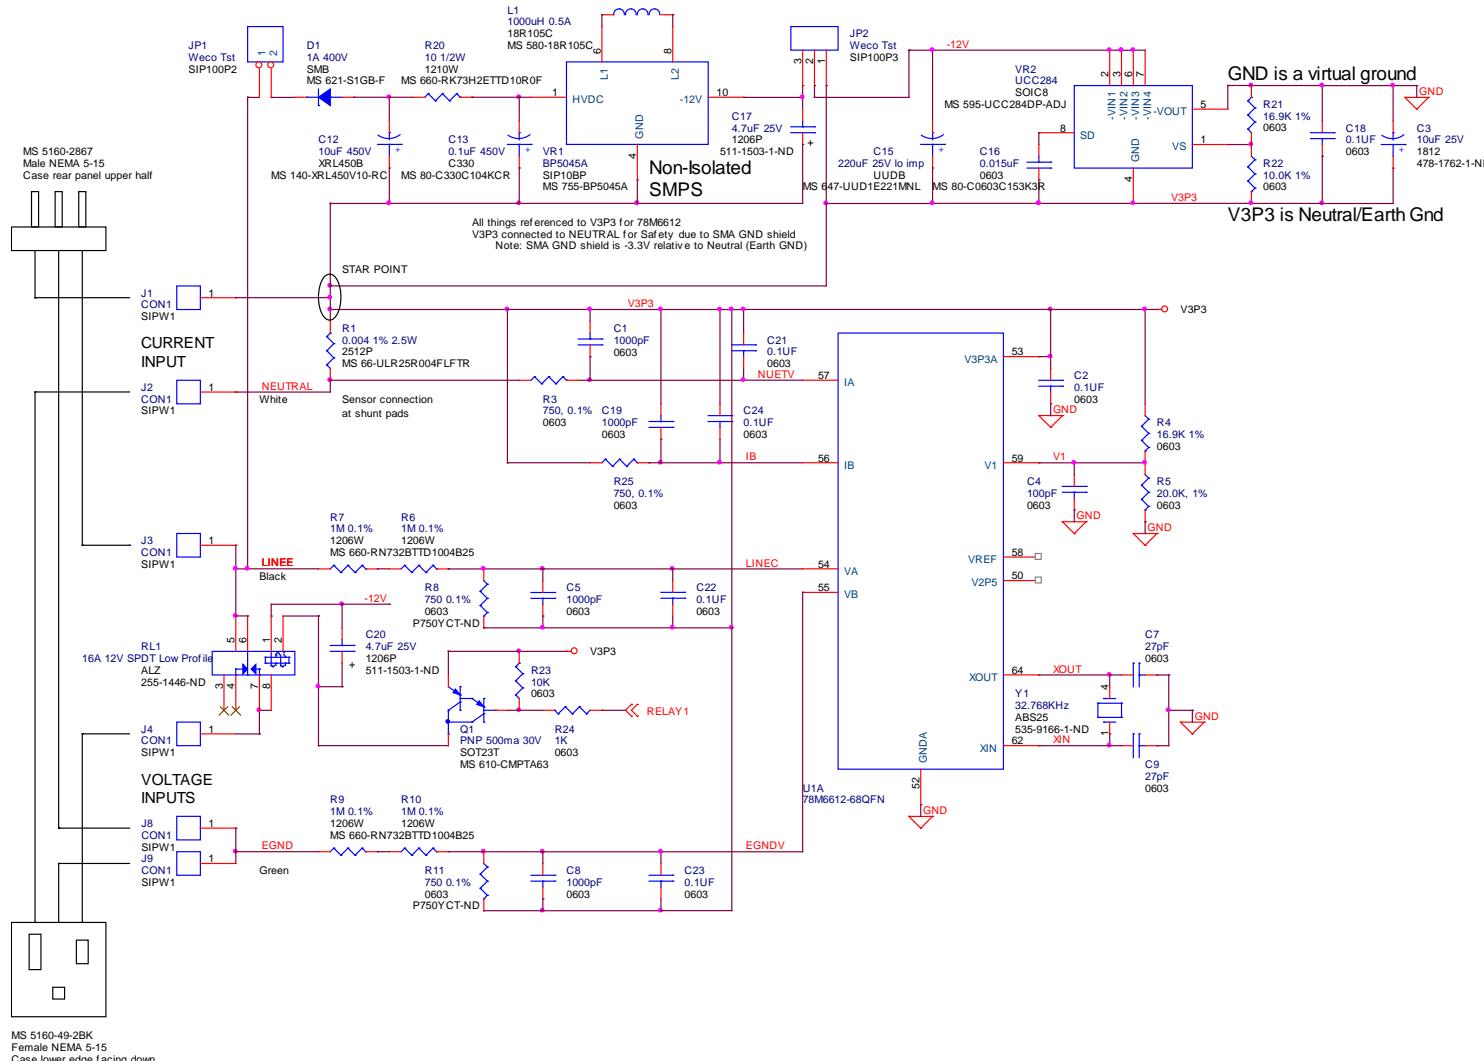


Figure 3: OMU1-S-RF Demo Board Electrical Schematic (1 of 2)

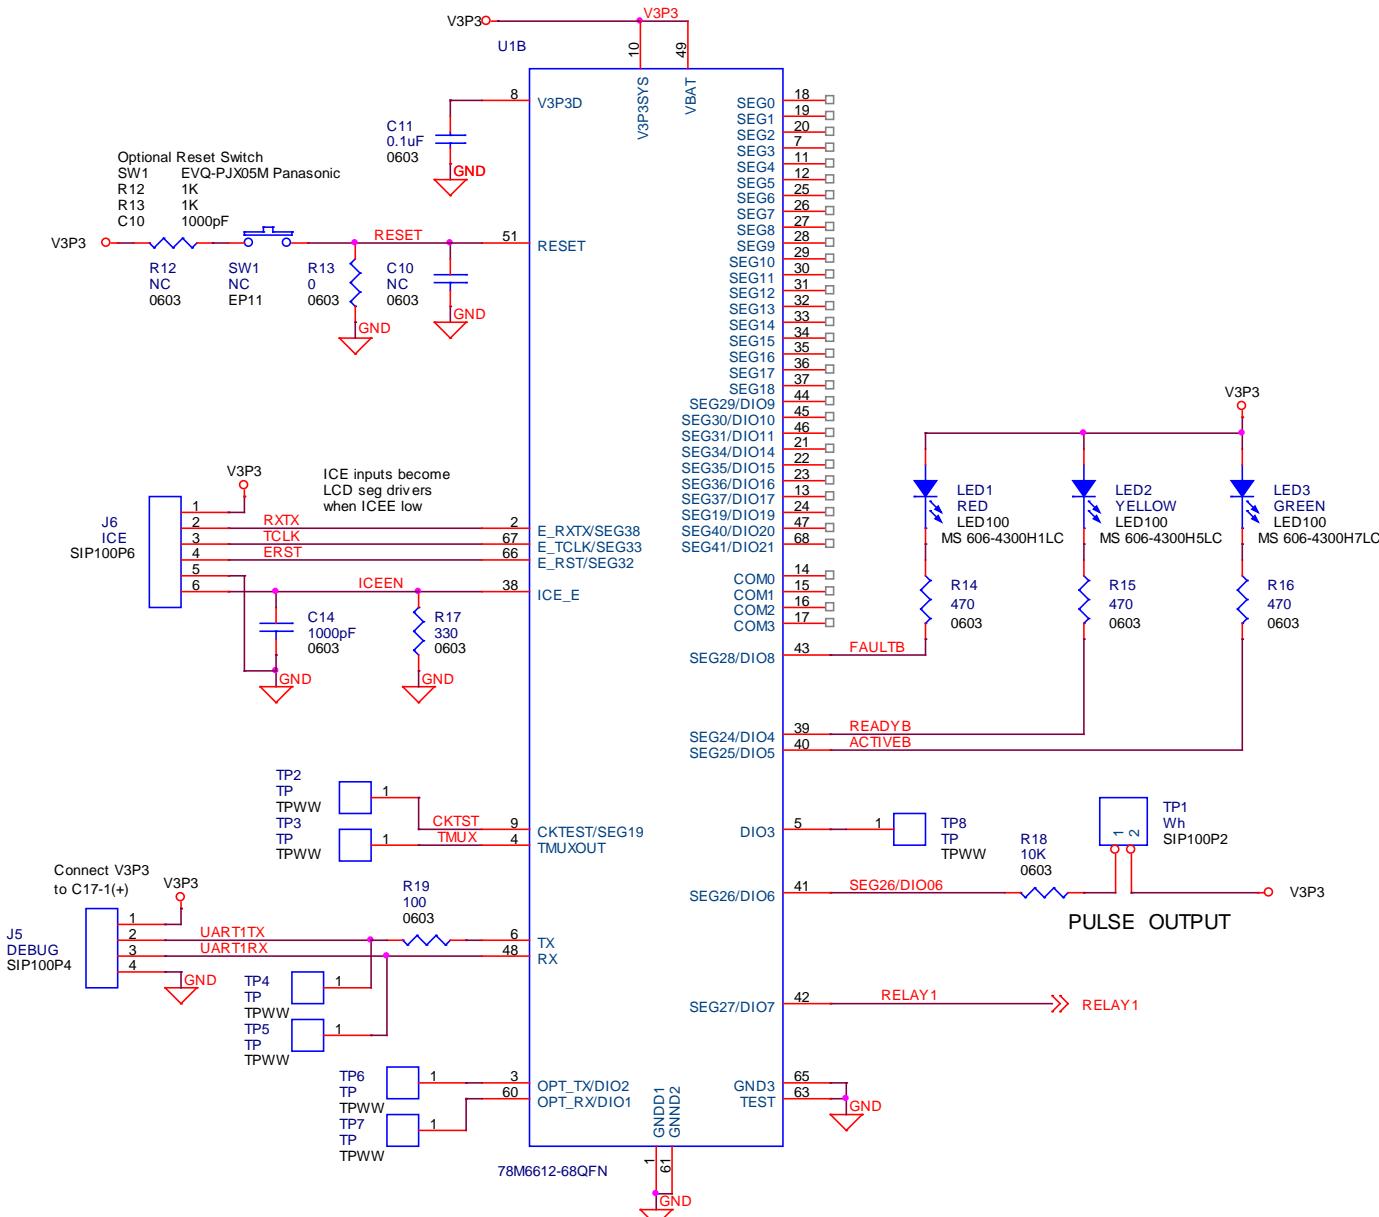


Figure 4: OMU1-S-RF Demo Board Electrical Schematic (2 of 2)

4.2 OMU1-S-RF Demo Board Bill of Materials

Table 2: OMU1-S-RF Demo Board Bill of Materials

Item	Qty	Reference	Part	PCB Footprint	Digi-Key/Mouser Part Number	Supplier Part Number	Manufacturer
1	5	C1,C5,C8,C14,C19	1000pF	0603	MS 581-06035C102J	06035C102JAT2A	AVX
2	7	C2,C11,C18,C21, C22,C23,C24	0.1µF	0603	MS 80-C0603C104K5RAL	C0603C104K5RALTU	KEMET
3	1	C3	10µF, 25V	1812	478-1762-1-ND	TPSC106K025R0500	AVX
4	1	C4	100pF	0603	MS 581-06035A101J	06035A101JAT2A	AVX
5	2	C7,C9	27pF	0603	MS 581-06035A270J	06035A270JAT2A	AVX
6	1	C12	10µF 450V	XRL450B	MS 140-XRL450V10-RC	140-XRL450V10-RC	Xicon
7	1	C13	0.1µF 500V	C330	MS 80-C330C104KCR	C330C104KCR5TA	KEMET
8	1	C15	220µF 25V lo imp	UUDB	MS 647-UUD1E221MNL	UUD1E221MNL1GS	Nichicon
9	1	C16	0.015µF	0603	MS 80-C0603C153K3R	C0603C153K3RACTU	KEMET
10	2	C17,C20	4.7µF 25V	1206P	511-1503-1-ND	TCTAL1E475M8R	ROHM Semiconductor
11	1	D1	1A 400V	SMB	MS 621-S1GB-F	S1GB-13-F	Diodes Inc.
12	1	JP1	Weco Tst	SIP100P2,M	MS 571-1032392	103239-2	Tyco/AMP
13	1	JP2	Weco Tst	SIP100P3,M	MS 571-1032393	103239-3	Tyco/AMP
14	1	J6	ICE	SIP100P6,M,R/A	MS 538-22-12-2061	22-12-2061	Molex
15	1	LED1	RED	LED100	MS 606-4300H1LC	4300H1LC	Chicago Miniature
16	1	LED2	YELLOW	LED100	MS 606-4300H7LC	4300H7LC	Chicago Miniature
17	1	LED3	GREEN	LED100	MS 606-4300H5LC	4300H5LC	Chicago Miniature
18	1	L1	1000uH 0.5A	18R105C	MS 580-18R105C	18R105C	Murata
19	1	Q1	PNP 500ma 30V	SOT23T	MS 610-CMPTA63	CMPTA63	Central Semiconductor
20	1	RL1	16A 12V SPDT	ALZ	255-1446-ND	ALZ12F12	Panasonic
21	1	R1	0.004 1% 2.5W	2512P	MS 66-ULR25R004FLFTR	ULR25R004FLFTR	IRC
22	4	R3,R8,R11,R25	750 0.1%	0603	P750YCT-ND	ERA-3YEB751V	Panasonic
23	2	R4,R21	16.9K 1%	0603	MS 302-16.9K-RC	302-16.9K-RC	Xicon
24	1	R5	20.0K, 1%	0603	MS 302-20K-RC	302-20K-RC	Xicon
25	4	R6,R7,R9,R10	1M 0.1%	1206W	MS 660- RN732BTTD1004B25	RN732BTTD1004B25	KOA Speer
26	1	R13	0	0603	MS 301-0-RC	301-0-RC	Xicon

Item	Qty	Reference	Part	PCB Footprint	Digi-Key/Mouser Part Number	Supplier Part Number	Manufacturer
27	3	R14,R15,R16	470	0603	MS 301-470-RC	301-470-RC	Xicon
28	1	R17	330	0603	MS 301-330-RC	301-330-RC	Xicon
29	2	R18,R23	10K	0603	MS 301-10K-RC	301-10K-RC	Xicon
30	1	R19	100	0603	MS 301-100-RC	301-100-RC	Xicon
31	1	R20	10 1/2W	1210W	MS 660-RK73H2ETTD10R0	RK73H2ETTD10R0F	KOA Speer
32	1	R22	10.0K 1%	0603	MS 302-10K-RC	302-10K-RC	Xicon
33	1	R24	1K	0603	MS 301-1.0K-RC	301-1.0K-RC	Xicon
34	1	TP1	Wh	SIP100P2, M	MS 538-22-12-2021	22-12-2021	MOLEX
35	1	U1	78M6612-68QFN	QFN 68		78M6612-IM	Teridian Semiconductor
36	1	VR1	BP5045A	SIP10BP	MS 755-BP 5045A	BP5045A	ROHM Semiconductor
37	1	VR2	UCC284	SOIC8	MS 595-UCC284DP-ADJ	UCC284DP-ADJ	Texas Instruments
38	1	Y1	32.768kHz	AB525	535-9166-1-ND	ABS25-32.768KHZ-T	Abracan

4.3 OMU1-S-RF Board PCB Layouts

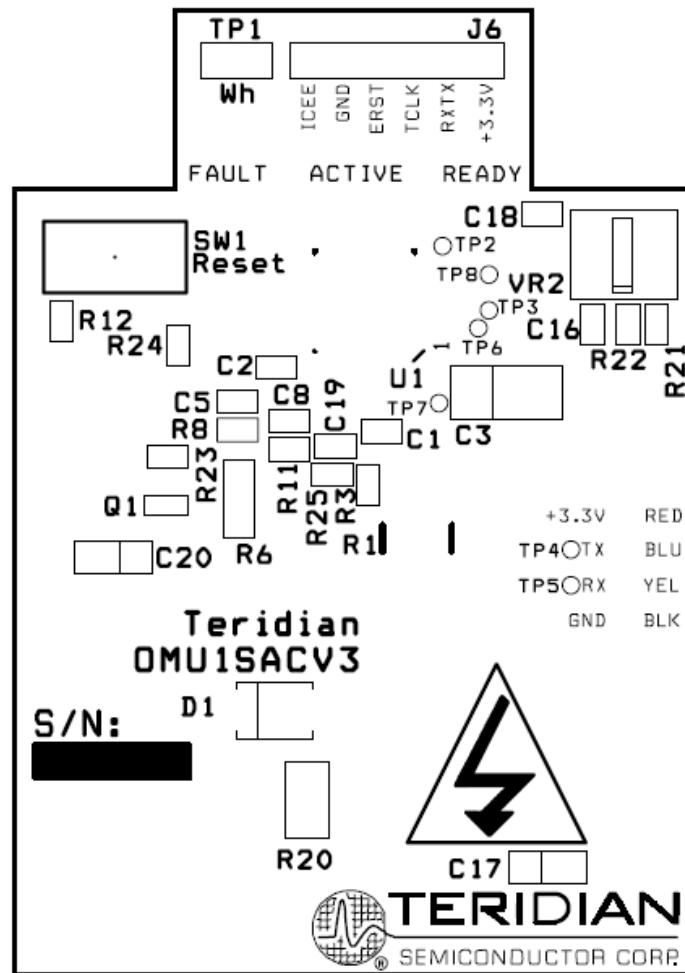


Figure 5: 78M6612 Evaluation Board PCB Top View

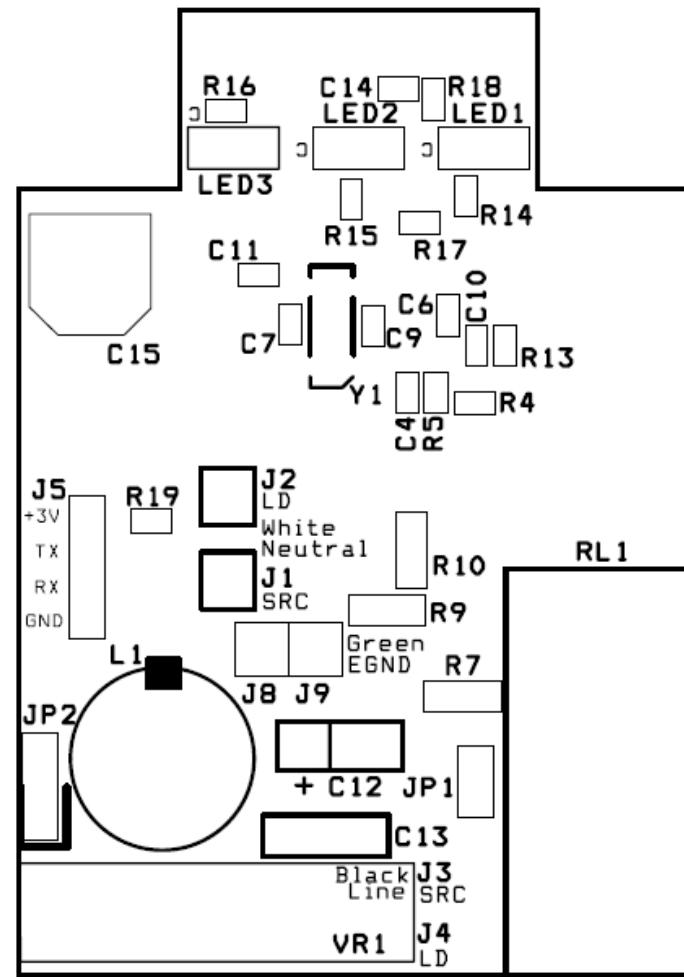


Figure 6: 78M6612 Evaluation Board PCB Bottom View

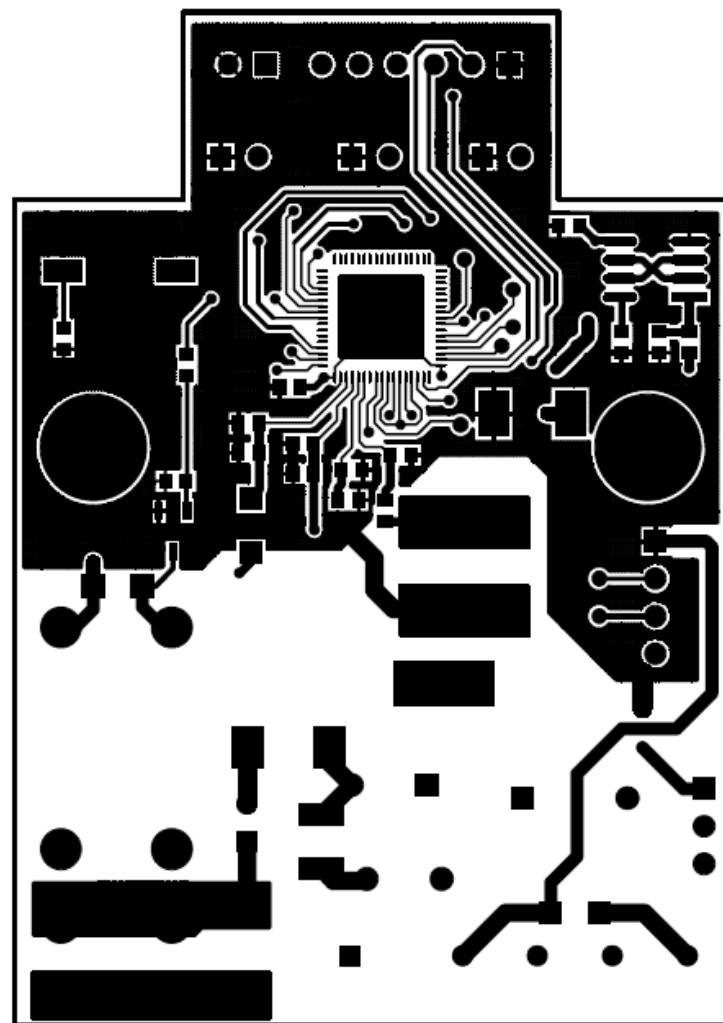


Figure 7: 78M6612 Evaluation Board Copper Top View

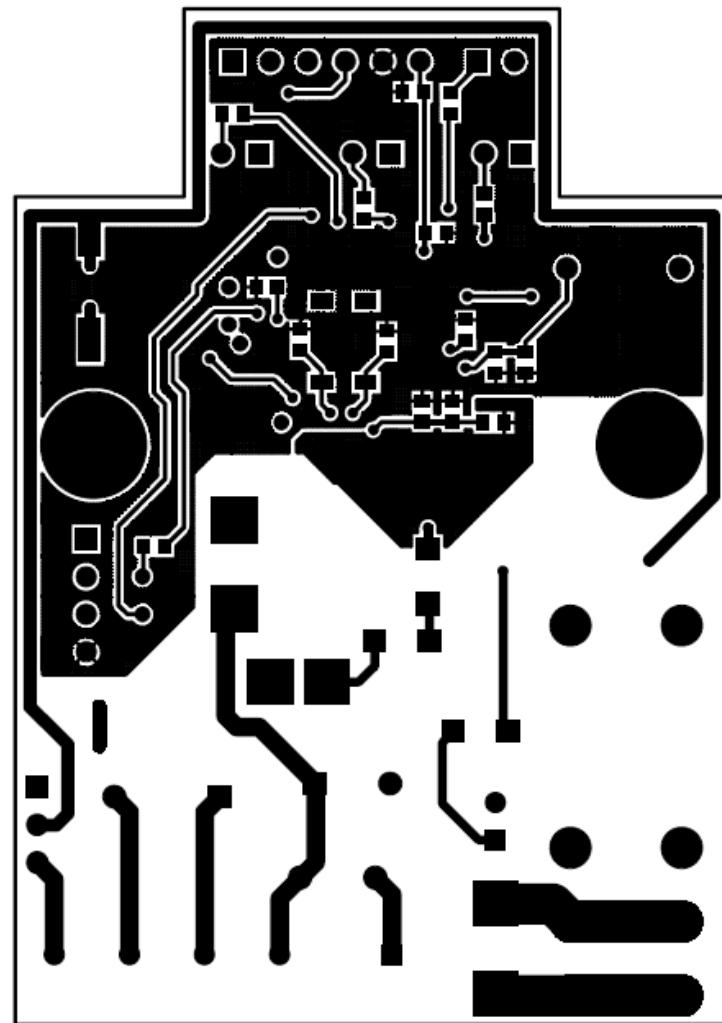


Figure 8: 78M6612 Evaluation Board Copper Bottom View

4.4 USB Daughter Board Schematic

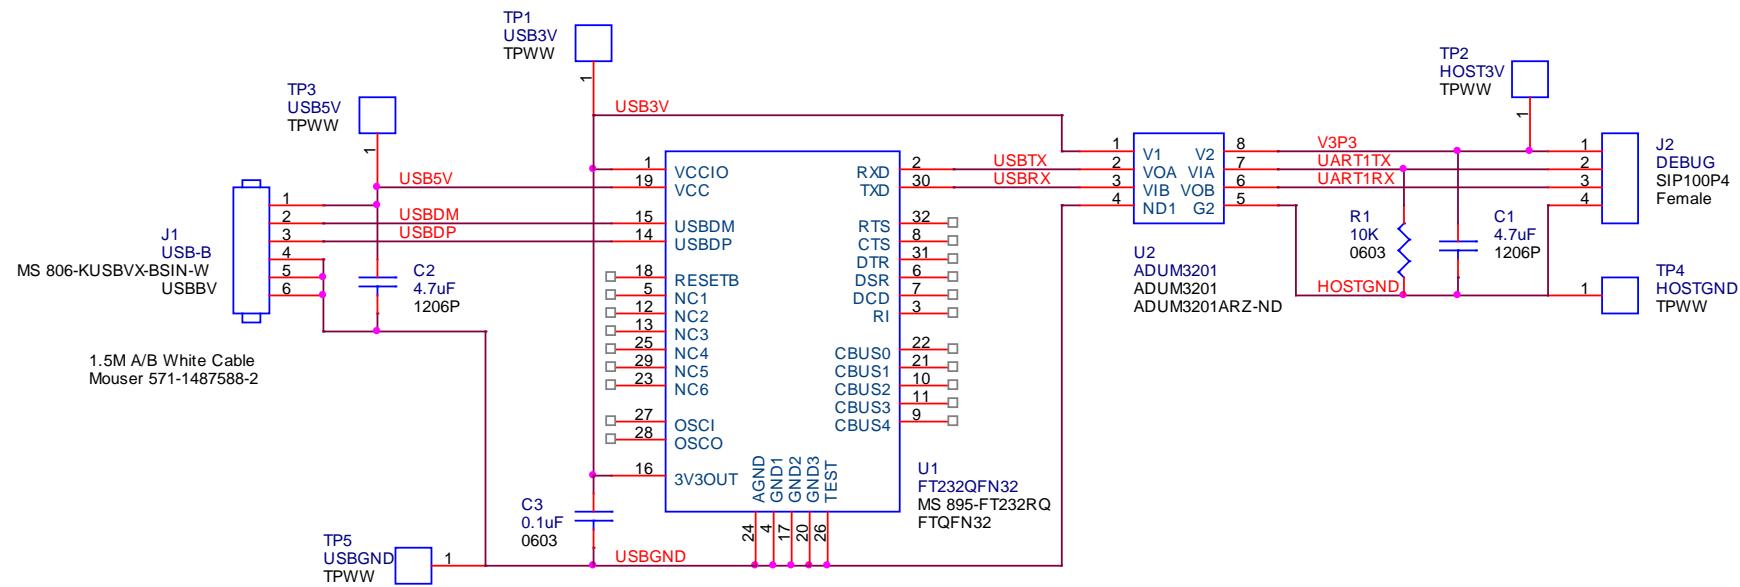


Figure 9: USB Daughter Board Electrical Schematic

4.5 UART-ISO Daughter Board Schematic

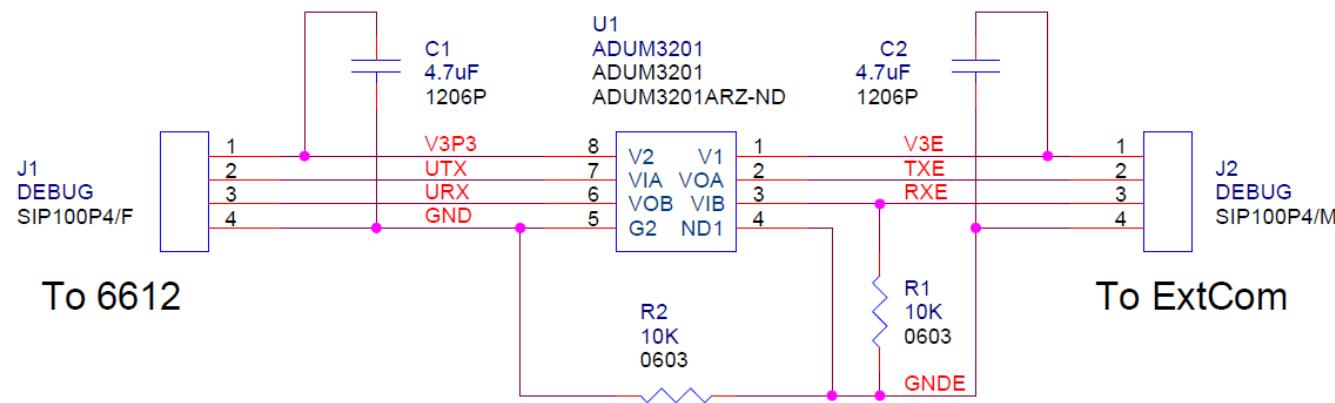


Figure 10: UART-ISO Daughter Board Electrical Schematic

5 Ordering Information

Part Description	Order Number
78M6612 Wireless/PLC Outlet Measurement Demo Unit	78M6612-DB/OMU-RF

6 Included Documentation

The following 78M6612 documents are included on the CD:

*78M6612 Data Sheet
6612_OMU_S2_URT_V1_13 Firmware Description Document*

7 Contact Information

For more information about Teridian Semiconductor products or to check the availability of the 78M6612, contact us at: <http://www.teridian.com/contact-us/>

6440 Oak Canyon Road
Suite 100
Irvine, CA 92618-5201

Telephone: (714) 508-8800
FAX: (714) 508-8878

Revision History

Revision	Date	Description
1.0	11/6/2009	First publication.
1.1	2/1/2010	Updated the schematics in Figure 3 and Figure 4. Updated the bill of materials in Table 2.
1.2	2/18/2010	In Table 2, added Supplier Part Number and Manufacturer columns to the Bill of Materials.