

# Evaluation Board User Guide UG-391

One Technology Way • P.O. Box 9106 • Norwood, MA 02062-9106, U.S.A. • Tel: 781.329.4700 • Fax: 781.461.3113 • www.analog.com

## **Evaluation Board for the AD5258 Digital Potentiometer**

#### **FEATURES**

Full-featured in conjunction with low voltage digiPOT motherboard (EVAL-MB-LV-SDZ)

Various test circuits

Various ac/dc input signals

PC control via a separately purchased system demonstration platform (SDP-B or SDP-S)

PC software for control

#### **PACKAGE CONTENTS**

EVAL-AD5258DBZ board

EVAL-MB-LV-SDZ motherboard

CD that includes

Self-installing software that allows users to control the board and exercise all functions of the device

Electronic version of the AD5258 data sheet

Electronic version of the UG-391 user guide

#### **GENERAL DESCRIPTION**

This user guide describes the evaluation board for evaluating the AD5258, a single-channel, 64-position, nonvolatile memory digital potentiometer in conjunction with the low voltage digiPOT motherboard.

The AD5258 supports single-supply 2.7 V to 5.5 V operation, making the device suited for battery-powered applications and many other applications with superior low temperature coefficient performance.

In addition, the AD5258 uses a versatile  $I^2C$  serial interface that operates in fast mode, allowing speeds of up to 400 kHz. This interface can be used to read back the wiper register and EEPROM content.

The EVAL-MB-LV-SDZ can operate in single-supply mode and incorporates an internal power supply from the USB.

Complete specifications for the AD5258 part can be found in the AD5258 data sheet, which is available from Analog Devices, Inc., and should be consulted in conjunction with this user guide when using the evaluation board.

#### **EVAL-AD5258DBZ WITH MOTHERBOARD AND SDP-B**



Figure 1. Digital Picture of Evaluation Board with Low Voltage DigiPOT Motherboard and System Demonstration Platform

# **UG-391**

# **Evaluation Board User Guide**

# **TABLE OF CONTENTS**

reatures	J
Package Contents	1
General Description	
EVAL-AD5258DBZ with Motherboard and SDP-B	
Revision History	2
Evaluation Board Hardware	
Power Supplies	3
Test Circuits	
Signal Amplifier	

Evaluation Board Software	6
Installing the Software	6
Running the Software	6
Software Operation	
Evaluation Board Schematics and Artwork	8
Motherboard	8
Daughter Board	12
Ordering Information	14
Pill of Materials	1.4

### **REVISION HISTORY**

5/12—Revision 0: Initial Version

# **EVALUATION BOARD HARDWARE**

#### **POWER SUPPLIES**

The EVAL-MB-LV-SDZ supports using single power supplies.

The evaluation board can be powered either from the SDP port or externally by the J1 and J2 connectors, as described in Table 1.

All supplies are decoupled to ground using 10  $\mu F$  tantalum and 0.1  $\mu F$  ceramic capacitors.

Table 1. Maximum and Minimum Voltages of the Connectors

Connector		
No.	Label	Voltage
J1-1	EXT VDD	Analog positive power supply, VDD,
		from 2.7 V to 5.5 V
J1-2	GND	Analog ground
J2-1	VLOGIC	Digital supply, from 2.7 V to V <sub>DD</sub>
J2-2	DGND	Digital ground

#### **Link Options**

Several link and switch options are incorporated in the EVAL-MB-LV-SDZ board and should be set up before using the board. Table 2 describes the positions of the links to control the evaluation board by a PC, via the SDP board. The functions of these link options are described in detail in Table 3 through Table 6.

Table 2. Link Options Setup for SDP Control (Default)

Link No.	Option
A11	3.3 V
A12	AGND
A5	3.3 V

**Table 3. Link Functions** 

Link No.	Power Supply	Options		
A11 V <sub>DD</sub> This link selects one of the following as the positive power s		This link selects one of the following as the positive power supply:		
		5 V (from SDP).		
		3.3 V (from SDP).		
		EXT VDD (external supply from the J1 connector).		
A5 V <sub>LOGIC</sub> This link selects one of the following as the digital supply:		This link selects one of the following as the digital supply:		
		3.3 V (from SDP).		
		VLOGIC (external supply from the J2 connector).		
A12	GND	AGND.		

#### **TEST CIRCUITS**

The EVAL-AD5258DBZ and EVAL-MB-LV-SDZ incorporate several test circuits to evaluate the performance of the AD5258.

#### DAC

The RDAC can be operated as a digital-to-analog converter (DAC), as shown in Figure 2.

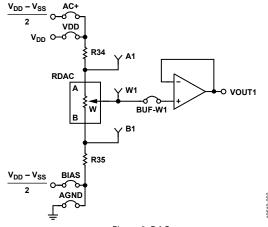


Figure 2. DAC

Table 5 shows the options available for the voltage references.

The output voltage is defined in Equation 1.

$$V_{OUT} = (V_A - V_B) \times \frac{RDAC}{64} \tag{1}$$

where:

*RDAC* is the code loaded in the RDAC register.

 $V_A$  is the voltage applied to the A terminal (A9 link).

 $V_B$  is the voltage applied to the B terminal (A10 link).

However, by using the R34 and R35 external resistors, the user can reduce the voltage of the voltage references. In this case, use the A1 and B1 test points to measure the voltage applied to the A and B terminals and recalculate  $V_{\rm A}$  and  $V_{\rm B}$  in Equation 1.

#### **AC Signal Attenuation**

The RDAC can be used to attenuate an ac signal, which must be provided externally using the AC\_INPUT connector, as shown in Figure 3.

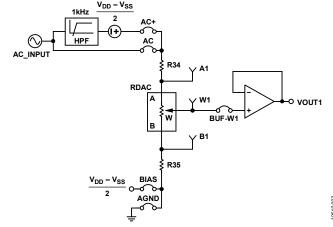


Figure 3. AC Signal Attenuator

Depending on the voltage supply rails and the dc offset voltage of the ac signal, various configurations can be used as described in Table 4.

**Table 4. AC Signal Attenuation Link Options** 

Link	Options	Conditions		
A9	AC+	No dc offset voltage.		
		AC signal is outside the voltage supply rails due to the dc offset voltage.		
		DC offset voltage $\neq V_{DD}/2^{1}$ .		
	AC	All other conditions.		
A10	BIAS	Use in conjunction with AC+ link <sup>1</sup> .		
	AGND	All other conditions.		

<sup>&</sup>lt;sup>1</sup> Recommended to ensure optimal total harmonic distortion (THD) performance.

The signal attenuation is defined in Equation 2.

Attenuation (dB) = 
$$20 \times \log \left( \frac{R_{WB} + R_W}{R_{END-TO-END}} \right)$$
 (2)

where:

 $R_{WB}$  is the resistor between the W and B terminals.

 $R_W$  is the wiper resistance.

*R*<sub>END-TO-END</sub> is the end-to-end resistance value.

**Table 5. DAC Voltage References** 

Terminal	Link (Daughter Board)	Link (Motherboard)	Options	Description
A1	Switch B of A4	A9	AC+	Connects Terminal A1 to V <sub>DD</sub> /2
			VDD	Connects Terminal A1 to V <sub>DD</sub>
W1	Switch B of A3	BUF-W1		Connects Terminal W1 to an output buffer
B1	Switch B of A2	A10	BIAS	Connects Terminal B1 to V <sub>DD</sub> /2
			AGND	Connects Terminal B1 to analog ground
	A1 inserted			Closes feedback loop of second op amp in the AD8618

#### **SIGNAL AMPLIFIER**

The RDAC can be operated as an inverting or noninverting signal amplifier supporting linear or pseudologarithmic gains. Table 6 shows the available configurations.

The noninverting amplifier with linear gain is shown in Figure 4, and the gain is defined in Equation 3.

$$G = 1 + \frac{R_{WB}}{R38} \tag{3}$$

where  $R_{WB}$  is the resistor between the W and B terminals.

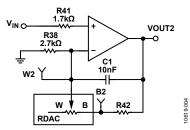


Figure 4. Linear Noninverting Amplifier

The noninverting amplifier with pseudologarithmic gain is shown in Figure 5, and the gain is defined in Equation 4.

$$G = 1 + \frac{R_{WB}}{R_{AW}} \tag{4}$$

where

 $R_{WB}$  is the resistor between the W and B terminals.  $R_{AW}$  is the resistor between the A and W terminals.

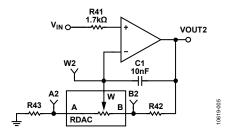


Figure 5. Pseudologarithmic Noninverting Amplifier

R43 and R42 can be used to set the maximum and minimum gain limits.

The inverting amplifier with linear gain is shown in Figure 6, and the gain is defined in Equation 5.

Note that the input signal,  $V_{\text{IN}}$ , must be negative.

$$G = -\frac{R_{WB}}{R38} \tag{5}$$

where  $R_{WB}$  is the resistor between the W and B terminals.

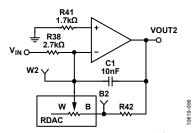


Figure 6. Linear Inverting Amplifier

**Table 6. Amplifier Selection Link Options** 

Amplifier	Gain	Link (Daughter Board)	Link (Motherboard)	Label	V <sub>IN</sub> Range
Noninverting	Linear	Switch A of A2, A3, and A4	A7	LIN	0 V to V <sub>DD</sub>
			A6	N-INV	
		A1 not inserted	A8	N-INV	
	Pseudologarithmic	Switch A of A2, A3, and A4	A7	LOC	0 V to V <sub>DD</sub>
			A6	N-INV	
		A1 not inserted	A8	N-INV	
Inverting	Linear	Switch A of A2, A3, and A4	A7	LIN	-V <sub>DD</sub> to 0 V
			A6	INV	
		A1 not inserted	A8	INV	

### **EVALUATION BOARD SOFTWARE**

#### INSTALLING THE SOFTWARE

The EVAL-AD5258DBZ kit includes evaluation board software provided on a CD. The software is compatible with Windows\* XP, Windows Vista, and Windows 7 (both 32 bits and 64 bits).

Install the software before connecting the SDP board to the USB port of the PC to ensure that the SDP board is recognized when it is connected to the PC.

- 1. Start the Windows operating system and insert the CD.
- 2. The installation software opens automatically. If it does not, run the **setup.exe** file from the CD.
- 3. After installation is completed, power up the evaluation board as described in the Power Supplies section.
- Connect the EVAL-AD5258DBZ and EVAL-MB-LV-SDZ to the SDP board and the SDP board to the PC using the USB cable included in the evaluation kit.
- 5. When the software detects the evaluation board, follow the instructions that appear to finalize the installation.

#### **RUNNING THE SOFTWARE**

To run the program, do the following:

 Click Start > All Programs > Analog Devices > AD5258> AD5258 Eval Board. To uninstall the program, click Start > Control Panel > Add or Remove Programs > AD5258 Eval Board.  If the SDP board is not connected to the USB port when the software is launched, a connectivity error displays (see Figure 7). Simply connect the evaluation board to the USB port of the PC, wait a few seconds, click **Rescan**, and follow the instructions.

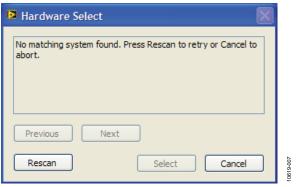


Figure 7. Pop-Up Window Error

The main window of the EVAL-AD5258DBZ software then opens, as shown in Figure 8.

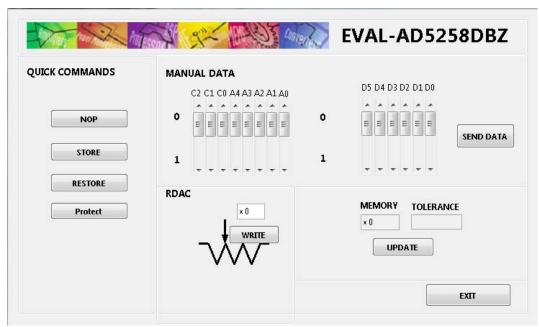


Figure 8. EVAL-AD5258DBZ Software Main Window

### **SOFTWARE OPERATION**

The main window of the EVAL-AD5258DBZ software is divided into the following sections: QUICK COMMANDS, MANUAL DATA, RDAC, and MEMORY.

#### **QUICK COMMANDS** has the following options:

- **NOP** places the device in no operation mode, reducing the power consumption of the device.
- **STORE** saves the value of the RDAC register in the EEPROM memory.
- **RESTORE** transfers the data of the EEPROM memory into the RDAC register.
- **Protect/Unprotect** allows you to protect or unprotect the data writing.

#### MANUAL DATA has the following option:

 A customized I<sup>2</sup>C data-word can be sent by manually switching the scroll bars from 0 to 1 or from 1 to 0 as desired and then clicking SEND DATA.
 In addition, the scroll bars are updated on each write transfer, showing the command sent to the part.

#### **RDAC** has the following option:

Enter a desired value into the text box to update the RDAC registers and click WRITE. When WRITE is clicked, a write/read operation is performed, and the value displayed in this section is updated with the actual RDAC register value. This function can be used to verify whether the write operation was completed successfully.

#### **MEMORY** has the following option:

• Clicking **UPDATE** reads the content of the EEPROM memory and the tolerance of the resistance.

**EXIT** closes the program.

# **EVALUATION BOARD SCHEMATICS AND ARTWORK**

#### **MOTHERBOARD**



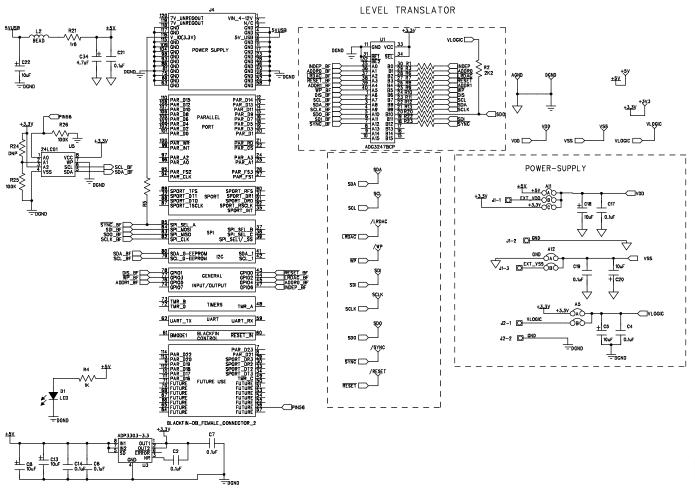



Figure 9. SDP Connector and Power Supply

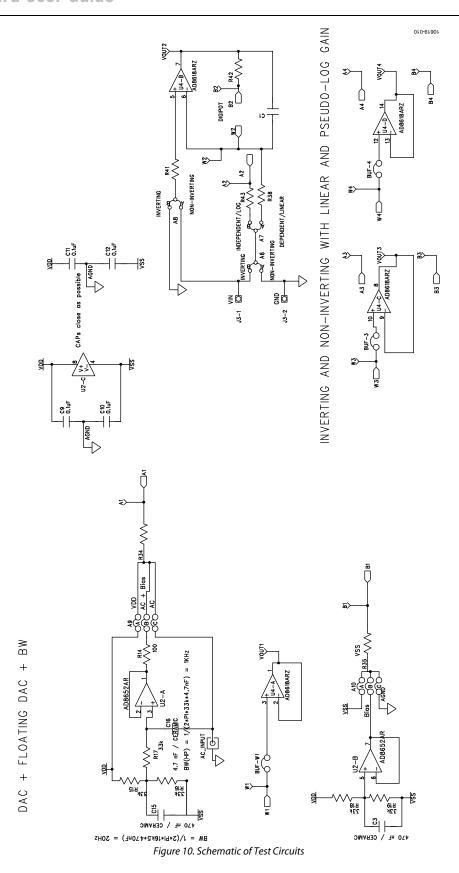

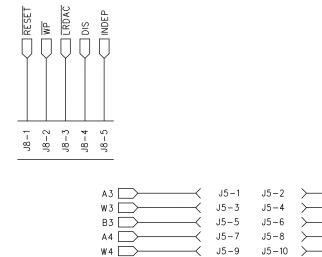

J5-11

J5-12

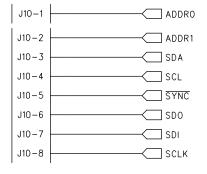

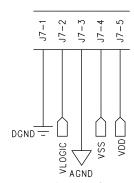


Figure 11. Schematic of Connectors to Daughter Board

\_\_\_ W 1

\_\_ A2

\_\_\_ W2

□ B2

\_\_\_\_\_ B1

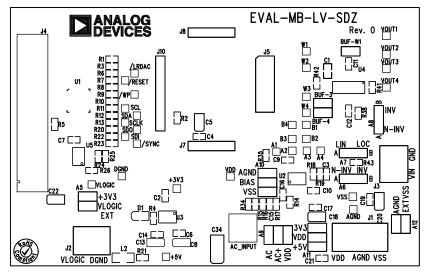


Figure 12. Component Side View

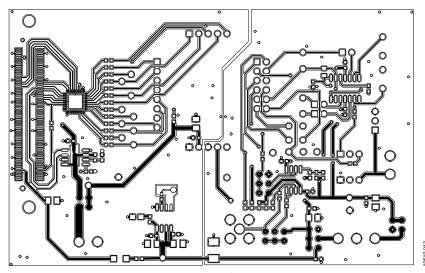


Figure 13. Component Placement Drawing

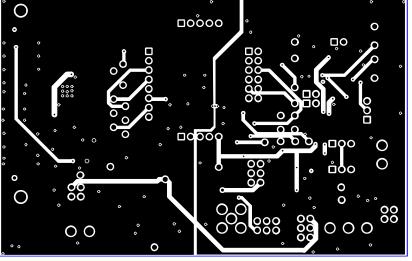
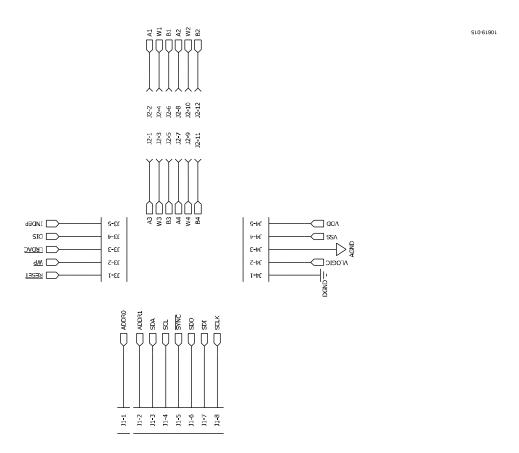


Figure 14. Layer 2 Side PCB Drawing

### **DAUGHTER BOARD**



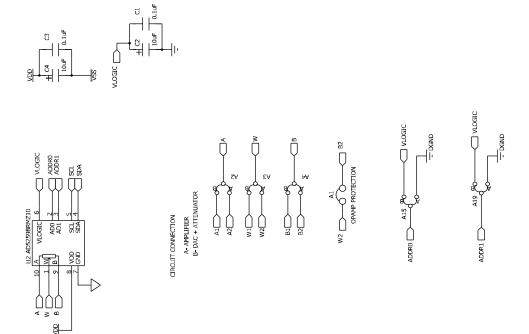


Figure 15. Schematic of Daughter Board

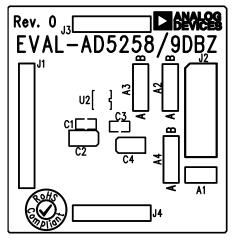


Figure 16. Component Side View

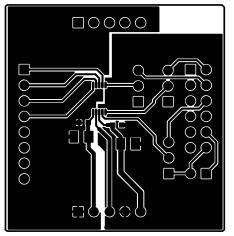


Figure 17. Component Placement Drawing

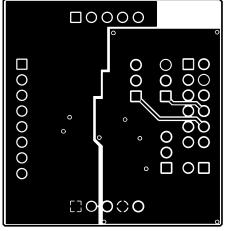


Figure 18. Layer 2 Side PCB Drawing

# **ORDERING INFORMATION**

# **BILL OF MATERIALS**

Table 7. Motherboard

Qty	Reference Designator	Description	Supplier <sup>1</sup> /Part Number
3	BUF-3, BUF-4, BUF-W1	2-pin (0.1" pitch) header and shorting shunt	FEC 1022247 and 150-411
3	A6, A7, A8	3-pin SIL header and shorting link	FEC 1022248 and 150410
5	A5, A9, A10, A11, A12	6-pin (3 $\times$ 2), 0.1" header and shorting block	FEC 148-535 and 150-411 (36-pin strip)
1	J1	3-pin terminal block (5 mm pitch)	FEC 151790
2	J7, J8	4-pin SIL header	FEC 1098035
1	J4	Receptacle, 0.6 mm, 120-way	Digi-Key H1219-ND
1	J10	8-pin inline header; 100 mil centers	FEC 1098038
1	J5	12-pin (2 $\times$ 6), 0.1" pitch header	FEC 1098051
2	J2, J3	2-pin terminal block (5 mm pitch)	FEC 151789
17	R1, R3, R6, R7, R8, R9, R10, R11, R12, R13, R20, R22, R23, R34, R35, R42, R43	SMD resistor, 0 Ω, 0.01, 0603	FEC 9331662
1	R2	SMD resistor, 2.2 kΩ, 0.01, 0603	FEC 1750676
1	R41	SMD resistor, 1.7 kΩ, 1% ,0603	FEC 1170811
1	R21	Resistor, surge, 1.6 Ω, 1%, 0603	FEC 1627674
1	R38	SMD resistor, 2.7 kΩ, 1%, 0603	FEC 1750678
1	R14	SMD resistor, 100 Ω, 1%, 0603	FEC 9330364
1	R4	SMD resistor, 1 kΩ, 0.01, 0603	FEC 9330380
3	R5, R25, R26	SMD resistor, 100 kΩ, 1%, 0603	FEC 9330402
5	R15, R16, R17, R18, R19	SMD resistor, 33 kΩ, 1%, 0603	FEC 9331034
1	C1	SMD capacitor, 100 nF, 10%, 0805	FEC 165-0863
8	C4, C9, C10, C11, C12, C17, C19, C21	SMD capacitor, 0.1 μF, ±10%, 0603	FEC 1759122
4	C2, C6, C7, C14	SMD capacitor, 0.1 μF, ±10%, 0603	FEC 301-9482
2	C8, C13	SMD capacitor, 10 μF, ±10%	FEC 197-130
4	C18, C20, C22, C5	Capacitor, 10 μF, ±20%	FEC 1190107
2	C3, C15	Capacitor, 470 nF, ±10%, 0603	FEC 1414037
1	C16	Capacitor, 4.7 nF, ±10%, 0603	FEC 1414642
1	C34	Capacitor, 4.7 nF, ±20%	FEC 1432350
1	L2	Inductor, SMD, 600Z	FEC 9526862
1	D1	Green SMD LED	FEC 5790852
1	U1	Two-port level translating bus switch	ADG3247BCPZ
1	U2	Dual op amp	AD8652ARZ
1	U3	Precision low dropout voltage regulator	ADP3303ARZ-3.3
1	U4	Operational amplifier	AD8618ARZ
1	U5	I <sup>2</sup> C serial EEPROM, 64k, 2.5 V, MSOP-8	FEC 1331335
27	TRDAC, RESET, SYNC, WP, A1, A2, A3,	Terminal, PCB, black, PK100, test point	FEC 8731128
	A4, AGND, B1, VOUT_C1, VOUT_C2, VOUT3, VOUT4, W1, W2, W3, W4		
5	+3.3V, +5V, EXT_VDD, VLOGIC, EXT_VSS	Terminal, PCB, red, PK100	FEC 8731144

<sup>&</sup>lt;sup>1</sup> FEC refers to Farnell Electronic Component Distributors; Digi-Key refers to Digi-Key Corporation.

Table 8. Daughter Board

Qty	Reference Designator	Description	Supplier <sup>1</sup> /Part Number
1	U2	256-position digital potentiometer	AD5258BRMZ10
1	A1	2-pin (0.1" pitch) header and shorting shunt	FEC 1022247 and 150-411
3	A2, A3, A4	3-pin SIL header and shorting link	FEC 1022248 and 150410
2	C2, C4	6.3 V tantalum capacitor (Case A), 10 μF, ±20%	FEC 1190107
2	C1, C3	50 V, X7R ceramic capacitor, 0.1 μF, ±10%	FEC 1759122
1	J1	Header, 2.54 mm, PCB, 1 × 8-way	FEC 1766172
1	J2	12-pin (2 × 6), 0.1" pitch header	FEC 1804099
2	J3, J4	5-pin SIL header	FEC 1929016

<sup>&</sup>lt;sup>1</sup> FEC refers to Farnell Electronic Component Distributors.

### **NOTES**

 $I^2 C \ refers \ to \ a \ communications \ protocol \ originally \ developed \ by \ Philips \ Semiconductors \ (now \ NXP \ Semiconductors).$ 



#### ESD Caution

**ESD** (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

#### **Legal Terms and Conditions**

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. "("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer, all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the ROHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTIES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

©2012 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners.

UG10619-0-5/12(0)



www.analog.com