

PCE-5127/7127 LGA1155 Intel® Core™ i7/i5/i3/ Pentium®/Xeon® PICMG 1.3 Single Host Board with (ECC) DDR3 / Dual GbE LAN

Startup Manual

Packing List

Before you begin installing your card, please make sure that the following items have been shipped:

1. 1 PCE-5127/7127 PICMG 1.3 Single Host Board
2. 1 PCE-5127/7127 startup manual
3. 1 CD with utility
4. 1 user note for full-sized CPU card
5. 2 Serial ATA HDD data cables
6. 2 Serial ATA HDD power cables
7. 1 COM + printer ports cable kit
8. 1 4-port USB cable kit
9. Keyboard and mouse Y cable
10. 1 jumper package
11. 1 warranty card

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Note 1: For detailed contents of PCE-5127/7127, please refer to information on the enclosed CD-ROM (in PDF format).

Note 2: Acrobat Reader is required to view any PDF file. Acrobat Reader can be downloaded at: get.adobe.com/reader (Acrobat is a trademark of Adobe)

Note 3: PCE-7127G2-CN don't support printer port, Hardware monitor and IPMI. 1701260305 (Print port+COM cable) is excluded in package

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://support.advantech.com.tw/support/default.aspx>

This manual is for the PCE-5127/7127 Series Rev. A.1.

Part No. 2006512701

2nd Edition,
Sep. 2014

Printed in China

Specifications

General

- LGA1155 Intel® Core™ i7/i5/i3/Pentium®/Xeon®
- **BIOS:** AMI 64 Mb SPI BIOS
- **Chipset:**
 - PCE-7127: Intel C216
 - PCE-5127: Intel Q77
- **System memory:**
 - PCE-7127G2: Supports dual channel DDR3 1333/1600 8GB per DIMM with ECC; Max. capacity is up to 16GB
 - PCE-5127G2: Supports dual channel DDR3 1333/1600 8GB per DIMM without ECC; Max. capacity is up to 16GB
- **SATA ports:**
 - PCE-7127G2: Supports 2 SATA3.0 and 4 SATA2.0 with Raid 0, 1, 5, 10.
 - PCE-5127G2: Supports 2 SATA3.0 and 4 SATA2.0 with Raid 0, 1, 5, 10.

Note 1: SATA3.0: 600MB/sec; SATA2.0:300MB/sec

Note 2: PCE-5127/7127 does NOT support any IDE ports.

- **Serial ports:** Two RS-232 with pin Headers
- **Parallel port:** One parallel port, supports SPP/EPP/ECP mode. PCE-7127 CN version don't support printer port
- **Keyboard/mouse connector:** Supports one standard PS/2 keyboard and mouse connector and one external 6-pin header
- **Watchdog timer: 255 level timer intervals**
- **USB 2.0:**
 - PCE-7127G2: 9*USB2.0 (Pin-header*4+USB Type A*1+4 on backplane)
 - PCE-5127G2: 9*USB2.0 (Pin-header*4+USB Type A*1+4 on backplane)
- **USB 3.0:**
 - PCE-7127G2: 3*USB3.0 (Pin-Header*2+Rear*1)
 - PCE-5127G2: 3*USB3.0 (Pin-Header*2+Rear*1)
- **GPIO:** One programmable 8-bit GPIO pin-header

VGA Interface

- **Chipset:** Intel® HD Graphics
- Shared system memory is subject to OS

Ethernet Interface

- **Chipset supports:**
 - LAN 1: Intel® 82579LM for all SKUs
 - LAN 2: Intel® 82583V for PCE-5127G2 and PCE-7127G2-CN
Intel® 82574L for PCE-7127G2
- **Connection:** 2 on-board RJ-45 connector with LED indicators

Specifications

Mechanical and Environmental

- **Dimensions:** (L x W): 338 x 122 mm
- **Power supply voltage:** +3.3 V, +5 V, +12 V
- **Power requirements:**
 CPU: Processor: Intel® Core™ i7-3770;
 Memory: 2 DDR3 1333 MHz 4 GB DIMMs
 Voltage: +12 V, +5 V, +3.3 V, +5 VSB, -12 V, -5 V
 Current: 5.37A, 0.98A, 1.44A, 0.42A, 0.01A, 0A
 Operating temperature: 0 ~ 60° C (depending on CPU)
- **Weight:** 0.5 kg (weight of board)

Jumpers and Connectors

The board has a number of jumpers that allow you to configure your system to suit your application. The table below lists the function of each of the jumpers and connectors.


Connectors	
Label	Function
LPT1	Parallel port, Parallel port x 1, supports SPP/EPP/ECP mode. (PCE-7127 CN version don't support LPT)
LAN1	Intel® 82579LM for all SKUs
LAN2	Intel(R)82583V for PCE-5127G2 and PCE-7127G2-CN Intel(R)82574L for PCE-7127G2
VGA1	VGA connector
KBMS1	PS/2 keyboard and mouse connector
KBMS2	External keyboard/mouse connector
COM1	Serial port: COM1; RS-232 (9-pin Box Header)
COM2	Serial port: COM2; RS-232 (9-pin Box Header)
JIR1	Infrared connector
JFP3 (Keyboard Lock and Power LED)	Power LED
	Suspend: Fast flash (ATX/AT)
	System On: ON (ATX/AT)
	System Off: OFF (AT)
JFP2	System Off: Slow flash (ATX)
	External speaker / SATA HDD LED connector
JFP1	Power Switch / Reset connector
JCASE1	Case Open
CPUFAN1	CPU FAN connector (4-pin)
LANLED1	LAN1/2 LED extension connector
HDAUD1	HD audio extension module connector

Jumpers and Connectors

USB12	USB port 1, 2
USB8	USB port 2
USB56	USB port 4, 5
USB7	USB port 6
USB910	USB port 8, 9
SATA1	Serial ATA1
SATA2	Serial ATA2
SATA3	Serial ATA3
SATA4	Serial ATA4
SATA5	Serial ATA5
SATA6	Serial ATA6
CPU1	CPU Socket
DIMMA1	Memory connector channel A
DIMMB1	Memory connector channel B
GPIO1	GPIO pin header (SMD pitch-2.0 mm)
LPC1	COM port module expansion pin-header

Jumpers

Label	Function
JCMOS1	CMOS clear
JMECLR1	Clear ME data
JWDT1	Watchdog timer output selection
JOBS1	HW Monitor Alarm

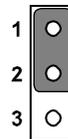

JCMOS1/JMECLR1: Clear CMOS/ME data

Closed Pins	Result
1-2	Keep CMOS/ME data*
2-3	Clear CMOS/ME data



Closed




Open

Jumpers and Connectors

H/W monitor alarm (JOBS1)

Function	Jumper Setting
Closed	Enable OBS alarm*
Open	Disable OBS alarm

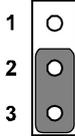

JWDT1: Watchdog timer output option

Closed Pins	Result
1-2	Reserved
2-3	System reset*

* Default Setting

Software Installation

The drivers for the PCE-5127/7127 are located on the software installation CD. Please click through the folder and follow the screen instructions to install them.

Caution! The computer is supplied with a battery-powered realtime clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to manufacturer's instructions.



Declaration of Conformity

This device complies with the requirements in Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference;
2. This device must accept any interference received, including interference that may cause undesired operation.

Board Layout

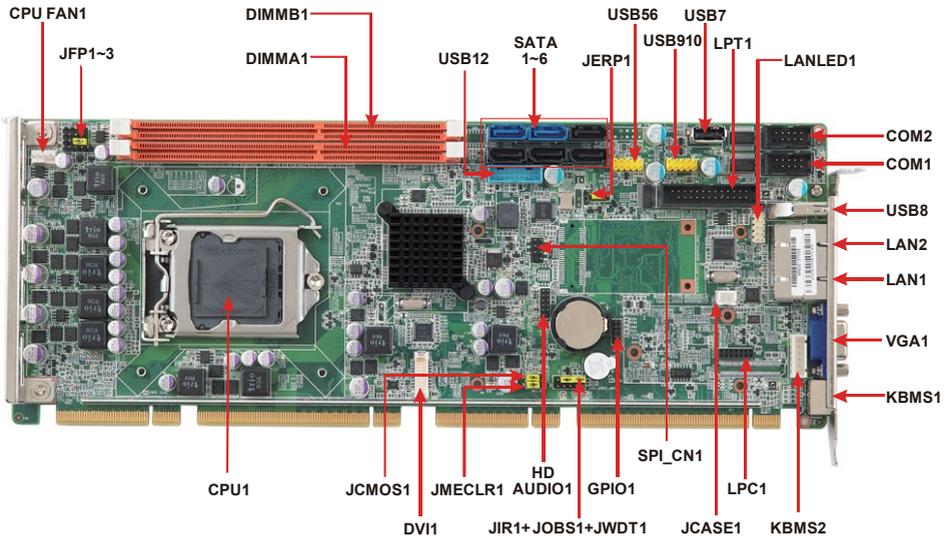


Figure 1: Board Layout: Jumper and Connector Locations